
What is Intel® Shared LUN upgrade?

Enable running <u>advanced Virtualization and High-Availability</u>
<u>Clusters</u> on Modular Server without an external storage system

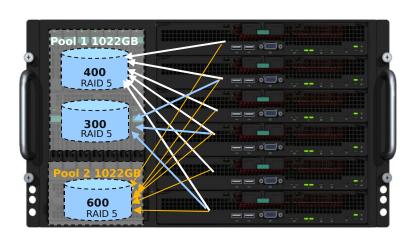

- One box solution! No external SAN storage required!!
- 2. Single point and simple IMS server control GUI for Intel® Shared LUN activation, configuration and server management!!!

• Features:

- >Each Virtual Drive can be mapped up to 6 compute modules
- >Simple Point & Click configuration with IMS server control GUI


• Benefits:

- Single Box solution for advanced
 Virtualization and HA Clusters
 - >VMware ESX HA, Vmotion, DRS
 - >Microsoft Windows Server Clusters
 - >Linux Server Clusters

Details to activate Intel® Shared LUN


- Log in the Intel® Modular Server Control GUI
- Click on the Feature Activation link and enter the license key in the Enter New Feature Key box and click on Add to enable the feature



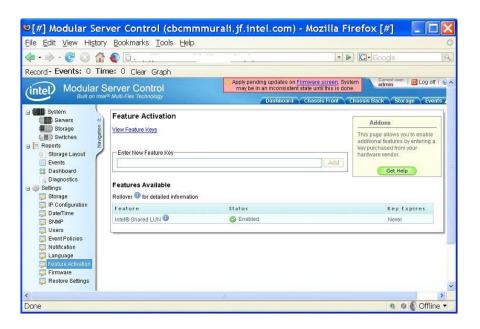


How to share LUN with multiple servers (1)

Check "Assign to multiple servers" box

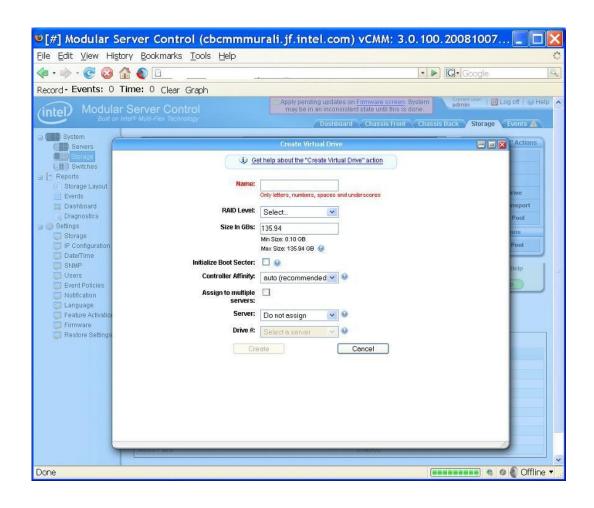

How to share LUN with multiple servers (2)


Select multiple servers to assign

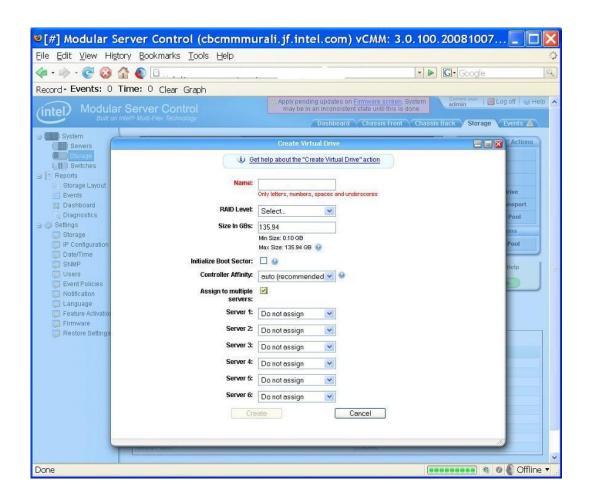

How to share LUN with multiple servers (3)


A virtual drive is assigned to more than one server.

Move mouse over the virtual drive to see the servers that are assigned to

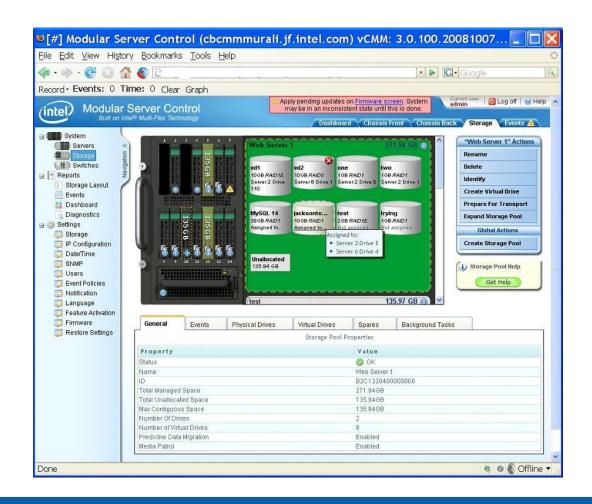

How to share LUN with multiple servers (4)

Clicking unassign will cause the dialogue box shown below to pop up

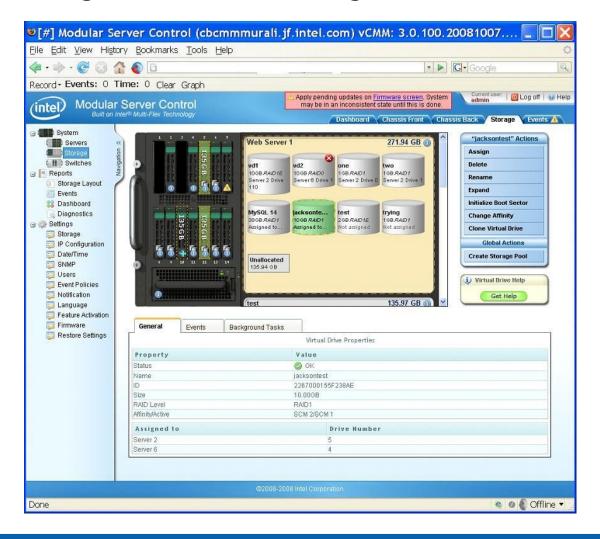

How to share LUN with multiple servers (5)

Unassign Servers from the unassign dialog box A pop up screen below will show up

