

TANDBERG DATA

Securing your Information



Product Manual

StorageLibrary T24 LTO

Part Number 1017472 Rev. D - June 2010

www.tandbergdata.com

COPYRIGHT Copyright 2010 by Tandberg Data Corporation. All rights reserved. This item and the information contained herein are the property of Tandberg Data Corporation. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the express written permission of Tandberg Data Corporation.

DISCLAIMER Tandberg Data Corporation makes no representation or warranties with respect to the contents of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Tandberg Data Corporation reserves the right to revise this publication without obligation of Tandberg Data Corporation to notify any person or organization of such revision or changes.

TRADEMARK NOTICES Tandberg Data Corporation trademarks: Tandberg Data, Exabyte, the Exabyte Logo, EZ17, M2, SmartClean, VXA, and VXAtape are registered trademarks; MammothTape is a trademark; SupportSuite is a service mark.

Other trademarks: Linear Tape-Open, LTO, the LTO Logo, Ultrium and the Ultrium Logo are trademarks of HP, IBM, and Quantum in the US and other countries. All other product names are trademarks or registered trademarks of their respective owners.

PART NUMBER 1017472 Revision D

REVISION HISTORY	Revision	Date	Description
	A	August 2007	Initial release.
	B	May 2008	Added encryption, sequential mode operation, IBM HH LTO-4 SAS and IBM HH LTO-4 Ultra 320 SCSI tape drives, and removed Magnum 224 and StorageLoader 2U LTO.
	C	October 2009	Added tape drive serial cable connection changes, tape drive auto-configuration changes, and Appendix F.
	D	June 2010	Added HP HH LTO-5 tape drive information.

NOTE: The most current information about this product is available at the Tandberg Data web site (www.tandbergdata.com).

**PRODUCT
WARRANTY
CAUTION**

The StorageLibrary T24 LTO (library) by Tandberg Data Corporation is warranted to be free from defects in materials, parts, and workmanship and will conform to the current product specification upon delivery. For the specific details of your warranty, refer to your sales contract or contact the company from which the library was purchased.

The warranty for the library shall not apply to failures caused by:

- ▶ Physical abuse or use not consistent with the operating instructions or product specifications.
- ▶ Repair or modification by any one other than Tandberg Data's personnel or agent in a manner differing from the maintenance instructions provided by Tandberg Data.
- ▶ Removal of the Tandberg Data identification label(s).
- ▶ Physical abuse due to improper packaging of returned library.

If problems with the library occur, contact your maintenance organization; do not void the product warranty by allowing untrained or unauthorized personnel to attempt repairs.



Caution

Returning the library in unauthorized packaging may damage the unit and void the warranty. If you are returning the library for repair, package it in its original packaging (or in replacement packaging obtained from your vendor.)

**CONTACTING
TANDBERG DATA
CORPORATION**

To obtain general information	
Europe	e-mail: support-de@tandbergdata.com .
Asia Pacific	email: support@tandbergdata.com.sg
Americas	e-mail: support-us@tandbergdata.com
World Wide Web	www.tandbergdata.com (Refer to the Tandberg Data web site for current address and phone contact information.)

NOTES



Contents

About This Manual	xiii
1 Product Overview	1
Library Features	1
Library Components	4
2 Installing the Library	11
Obtaining Accessories and Equipment	12
Preparing for Installation	15
Installing the Library in a Rack	16
Assembling the Rails	16
Attaching the Rails to the Rack	18
Attaching the Library to the Rails	19
Connecting the Library to SCSI	20
Connecting the Library to SAS	23
Connecting the Library to Fibre Channel	23
Connecting the Library to Ethernet	24
Connecting the Library to the USB Port	25
Powering On the Library	25
Verifying the Hardware Installation	29
3 Configuring the Library	31
Accessing Configuration Options	31
Home Screen Menu	35
Setting Configuration Options	36
Checking the Setup	77

4	Using the Remote Management Utility	79
	Accessing the Remote Management Utility	79
	Viewing the Home Page	81
	Setting Configuration Options	89
	Viewing Information on the Statistics Page	99
	Using the Utility's Tools	103
5	Operating the Library	113
	Preparing Cartridges	115
	Inserting and Moving Cartridges	116
	Loading Cartridges into a Magazine	120
	Removing Cartridges from the Library	122
	Setting the Library to Operate in Sequential Mode	124
	Issuing a Re-inventory Command to the Library	128
	Loading and Unloading Cartridges in the Tape Drive	130
	Cleaning the Tape Drive	133
	Resetting the Library	139
	Storing Cartridges	141
6	Viewing Library Information	143
	Viewing Basic Library Information	144
	Viewing Library Status	145
	Viewing Library History	148
	Viewing Library Statistics	150
	Viewing Library Settings	153
	Viewing Basic Tape Drive Information	155
	Viewing and Updating the Cartridge Inventory	162

7	Maintenance	169
	Installing or Replacing a Tape Drive	169
	Resuming Operation	177
	Removing Cartridges Without Power	179
	Cleaning the Library	180
	Running Tape Drive Diagnostics	180
	Running Library Diagnostics	182
	Upgrading Library Firmware and Creating Diagnostics (FTP)	187
	Upgrading Library Firmware (LibTool)	190
	Upgrading Library Firmware and Creating Diagnostics (USB Port)	190
	Upgrading Tape Drive Firmware (LTOTool)	193
	Upgrading Tape Drive Firmware and Creating Diagnostics (USB Port)	194
8	Troubleshooting	201
	Library Troubleshooting	201
	Tape Drive Troubleshooting	204
	Backup Software Reports an Error	205
	Before Contacting Technical Support	208
	Advanced Troubleshooting	210
A	Specifications	211
	Storage Capacity	211
	Size and Weight	212
	Performance Specifications	212
	Power Specifications	213
	Environmental Specifications	214
	Shipping Specifications	216
	Universal Serial Bus (USB) Interface	217
	Safety and Regulatory Agency Compliance	217
B	Interface Specification	221
	SCSI Interface Specifications	221
	SAS Cable Specifications	227
	Fibre Channel Optical Cable Specification (FC Tape Drive)	228
	Ethernet Specifications	229

C	Write Once, Read Many (WORM) Capability	231
	Overview	231
	WORM Media	231
	Requirements.	233
	TapeAlert Flags.	233
	Error Codes	234
D	Shipping the Library	235
	Preparing the Library for Shipping	235
	Replacing the Shipping Locks	238
	Removing the Library from the Rack	241
	Packing the Library	242
E	Error Messages	245
	Library LCD Error Messages	245
	Library “Fatal” Error Messages	257
F	Jumper Power Cables — HP HH FC Tape Drive	261
	Connecting the Jumper Power Cables and Serial Cables	261
	Index	263



Figures

1 Product Overview

Figure 1-1	Library front panel components	4
Figure 1-2	Library back panel components (SCSI configuration)	6
Figure 1-3	Library back panel components (FC configuration)	7
Figure 1-4	Library back panel components (FC configuration)	8
Figure 1-5	Library internal components	9

2 Installing the Library

Figure 2-1	Assembling the left-side rail	17
Figure 2-2	Assembling the right-side rail	17
Figure 2-3	Attaching the left-side rail to the rack	18
Figure 2-4	Placing the library on the rails	19
Figure 2-5	Attaching the library to the rails at the back of the rack	20
Figure 2-6	SCSI connectors	22
Figure 2-7	SAS connector	23
Figure 2-8	Fibre Channel connector	23
Figure 2-9	Ethernet port (SCSI library shown)	24
Figure 2-10	USB port (Fibre Channel library shown)	25
Figure 2-12	Power switch and power connector	26
Figure 2-11	Shipping locks	26
Figure 2-13	Shipping lock replacement preparation	27
Figure 2-14	Shipping lock removal—step 1	28

3 Configuring the Library

Figure 3-1	Library LCD and keypad	31
Figure 3-2	Library menu organization	35

4 Using the Remote Management Utility

Figure 4-1	RMU—Home page	80
Figure 4-2	RMU—Library and Tape Drive Status	83
Figure 4-3	RMU—Status window	84
Figure 4-4	RMU—Inventory page	87
Figure 4-5	RMU—Configuration home page	89
Figure 4-6	RMU—Statistics home page	99
Figure 4-7	RMU—Tools home page	103

5 Operating the Library

Figure 5-1	Location of status LED	114
Figure 5-2	Bar code label placement and write-protect switch location . .	115
Figure 5-3	Location of I/E Port lock button	116
Figure 5-4	Inserting a cartridge into the I/E port.	117
Figure 5-5	Magazine lock buttons	121
Figure 5-6	Loading cartridges into a magazine.	121

7 Maintenance

Figure 7-1	Serial cable routing—full height tape drive	172
Figure 7-2	Serial cable routing—half height tape drives	172
Figure 7-3	Power cable routing— IBM full height FC or SCSI tape drive .	172
Figure 7-4	Power cable routing— IBM half height SCSI tape drive.	172
Figure 7-5	Power cable routing— HP half height SCSI tape drive	173
Figure 7-6	Power cable routing— HP half height FC tape drive	173
Figure 7-7	Power cable routing—half height SAS tape drive	173
Figure 7-8	Tape drive cover plate (half height SCSI library pictured)	174
Figure 7-9	Tape drive cooling plate	175
Figure 7-10	Manual magazine release.	179

B Interface Specification

Figure B-1	Library element addresses (I/E port enabled/no fixed cleaning slot)	224
Figure B-2	Library element addresses (I/E port disabled/no fixed cleaning slot).	225

C Write Once, Read Many (WORM) Capability

Figure C-1	Ultrium WORM tape cartridge.	229
------------	--------------------------------------	-----

D Shipping the Library

Figure D-1	Shipping locks	236
Figure D-2	Shipping lock replacement—step 1	237
Figure D-3	Shipping lock replacement—step 3a	237
Figure D-4	Shipping lock replacement—step 3b	238
Figure D-5	Removing the screws securing the library to the rails	239
Figure D-6	Removing the library from the rack	240
Figure D-7	Library in antistatic bag	240
Figure D-8	Bottom foam packing pieces	241
Figure D-9	Top foam packing piece (shown with accessories).	241
Figure D-10	Accessory item placement in shipping box	242

F Jumper Power Cables — HP HH FC Tape Drive

Figure F-1	Connecting the power jumper cables.	260
Figure F-2	Stowing the cables.	260



Tables

2 Installing the Library

Table 2-1	Obtaining accessories and equipment	12
-----------	---	----

3 Configuring the Library

Table 3-1	Operator button descriptions	34
Table 3-2	Library configuration options	36
Table 3-3	Emulation modes for the library	55
Table 3-4	Ethernet configuration options	61

5 Operating the Library

Table 5-1	Tape drive cartridge read/write compatibility	115
-----------	---	-----

6 Viewing Library Information

Table 6-1	Library command status messages	146
Table 6-2	Library command-state status messages	146
Table 6-3	Tape drive status messages	155
Table 6-4	TIBM-specific tape drive status messages	155

A Specifications

Table A-1	Maximum library storage capacity	209
Table A-2	Library dimensions and weight.	210
Table A-3	LTO Ultrium tape drive transfer rate and capacity.	210
Table A-4	US, Canada, European power cord specifications.	212
Table A-5	International power cord requirements	212
Table A-6	Environmental specifications	213
Table A-7	Acoustic Noise Limits	214
Table A-8	Shock limits	214
Table A-9	Shipping weight and dimensions	214

B Interface Specification

Table B-1	SCSI command set supported by the library	221
Table B-2	Status byte descriptions	222
Table B-3	Supported sense keys.	223
Table B-4	Multi-mode optical cable characteristics.	226
Table B-5	Ethernet port pin assignments and functions.	227

C Write Once, Read Many (WORM) Capability

Table C-1	WORM tape cartridge specifications	230
Table C-2	TapeAlert flags associated with the WORM media	231
Table C-3	ASC/ASCQ error codes for a Medium Error (SK 3) with WORM media	232
Table C-4	ASC/ASCQ error codes for a Data Protect error (SK 7) with WORM media	232

E Error Messages

Table E-1	Library error messages	244
Table E-2	Library "fatal" error messages	256

ABOUT THIS MANUAL

This manual describes how to install, configure, operate, maintain, and troubleshoot the StorageLibrary T24 LTO (library) by Tandberg Data Corporation. It also provides specifications for the library.

NOTICE—This manual may contain some preliminary information that may change without notice.

WHERE TO LOOK FOR INFORMATION

Installation

If you are performing first-time installation:

- ▶ Read [Chapter 1](#) for an overview of the library's features and components.
- ▶ Read [Chapter 2](#) for hardware installation instructions, including obtaining the necessary accessories, installing the library in a rack, installing cartridges, and connecting the library to a host system.
- ▶ Read [Chapter 3](#) for configuration instructions, including how to use the library's operator panel to access and set configuration options.
- ▶ Read [Chapter 4](#) for information about using the library's Remote Management utility to configure the library, view information, and monitor operation across an Ethernet network.

Operation

When you are ready to put the library into operation:

- ▶ Read [Chapter 5](#) to learn about inserting and removing cartridges from the library, loading and unloading cartridges in the tape drives, cleaning the tape drives, and performing other basic library operations.
- ▶ Read [Chapter 6](#) to learn about viewing library information including code versions, serial numbers, statistics, sensor readings, and cartridge inventory data.

Maintenance, Troubleshooting, and Service

If you need to perform basic library maintenance, troubleshoot problems, or return the library for service:

- ▶ Read [Chapter 7](#) for maintenance information, including instructions for replacing the tape drives, uploading new firmware, and creating diagnostic listings.
- ▶ Read [Chapter 8](#) for valuable troubleshooting tips.

Supplemental Information

- ▶ Read [Appendix A](#) for physical, performance, power, environmental, Universal Serial Bus (USB), and safety agency specifications.
- ▶ Read [Appendix B](#) for information about the interface specifications (SCSI, Fibre Channel, and Ethernet).
- ▶ Read [Appendix C](#) for information about the WORM capability of the LTO-3 tape drive.
- ▶ Read [Appendix D](#) for packing and shipping instructions if you need to return the library for service.
- ▶ Read [Appendix E](#) for definitions of library error messages.
- ▶ Read [Appendix F](#) for instructions on connecting jumper power cables to two HP half height Fibre Channel tape drives.

RELATED PUBLICATIONS

For additional information about the library and tape drive, refer to the following publications available at www.tandbergdata.com.

StorageLibrary T24 LTO

- ▶ *StorageLibrary T24 LTO Quick Start Guide*, 1018464
- ▶ *FI: Rack-mounting or Replacing a Magazine in a StorageLibrary T24 LTO or Magnum 448 LTO*, 1017475
- ▶ *FI: Installing or Replacing a Tape Drive in the StorageLibrary T24 LTO*, 1017476
- ▶ *StorageLibrary T24 LTO SCSI Reference*, 1014826
- ▶ *Tandberg Data Bar Code Label Specification for LTO Ultrium Cartridges*, 1004080-000
- ▶ *Library Safety Notices Booklet (translated warnings)*, 311467-006

Ultrium Tape Drives

See the following web sites to locate documentation and support information for LTO Ultrium tape drives:

- ▶ IBM — www.storage.ibm.com/tape/lto/oem/index.html
- ▶ Hewlett Packard — www1.hp.com/storage/tapestorage.html

Standards

- ▶ *Small Computer System Interface - 2 (SCSI-2)*, INCITS 131-1994[R2004]
- ▶ *Information Technology - SCSI-3 Primary Commands (SPC)*, ANSI INCITS 301-1997
- ▶ *Information Technology - SCSI Primary Commands-2 (SPC-2)*, ANSI INCITS 351-2001
- ▶ *SCSI-3 Primary Commands (SPC)*, INCITS 301-1997 [R2002]
- ▶ *Information Technology - SCSI-3 Medium Changer Commands (SMC)*, ANSI INCITS 314-1998
- ▶ *Information Technology - SCSI Parallel Interface-3 (SPI-3)*, ANSI INCITS 336-2000
- ▶ *Information Technology - SCSI Parallel Interface-2 (SPI-2)*, ANSI INCITS 302-1998
- ▶ *Information Technology - SCSI Stream Commands-2 (SSC-2)*, ANSI INCITS 380-2003
- ▶ *TapeAlert Specification*, NCITS T10/02-142R0, Version 3.0, March 2002
- ▶ *Automation/Drive Interface - Commands (ADC)*, Working Draft, Revision 7, September 14, 2004
- ▶ IEC 60297 Rack Standards
- ▶ *Serial Attached SCSI*, ANSI INCITS Project 1601-D, 2005

For general information, go to www.T10.org.

CONVENTIONS USED IN THIS MANUAL

This manual uses the following conventions:

Note: Notes provide additional information or suggestions about the topic or procedure being discussed.

! Important Read text marked by the “Important” icon for information that will help you complete a procedure or avoid extra steps.



Caution

Read text marked by the “CAUTION” icon for information you must know to avoid damaging the library, the tape drives, or losing data.



Warning

Read text marked by the “WARNING” icon for information you must know to avoid personal injury.

For translated warnings, see www.tandbergdata.com.

1

PRODUCT OVERVIEW

Congratulations on selecting the StorageLibrary T24 LTO (library) by Tandberg Data Corporation. The library provides unattended data storage, archiving, backup, and retrieval for small PC workgroups to multi-server networks. The library features Tandberg Data's patented, award-winning ExaBotics™.

This chapter provides an overview of the library's features and components.



LIBRARY FEATURES

The library includes the following features:

- ▶ **Storage for up to 24 data cartridges.** The StorageLibrary T24 holds up to 24 data cartridges. The magazines hold 12 cartridges.

Note: The left magazine is optional in some configurations. With this configuration, the library ships with the right magazine installed and a "blank" installed in the left magazine's location.

- ▶ **Tape drives.** The library contains high-performance, high-capacity LTO tape drives in one of these options:
 - ▶ One or two half height LTO Ultrium 2 tape drive(s)
 - ▶ One or two half height LTO Ultrium 3 tape drive(s)
 - ▶ One or two half height LTO Ultrium 4 (U320, SAS, or Fibre Channel) tape drive(s)
 - ▶ One full height LTO Ultrium 3 tape drive
 - ▶ One full height LTO Ultrium 4 tape drive
 - ▶ One or two half height LTO Ultrium 5 (Fibre Channel or SAS) tape drive(s).
- ▶ **Import/Export (I/E Port).** The I/E port allows you to insert and remove one cartridge at a time (such as a cleaning cartridge).
- ▶ **Bar code scanner.** A bar code scanner allows the library to maintain an inventory of its cartridges.
- ▶ **Operator panel with LCD display.** The operator panel allows you to monitor library operations and select configuration options.
- ▶ **Interface options.** Depending on the tape drive(s) installed in the library, you will have one of these options. The library does not have a SCSI controller, but rather, communicates with the host using ADI “bridging” through the tape drive(s).
 - ▶ **Wide, low-voltage differential (LVD) SCSI interface.** The LVD tape drives support independent sets of SCSI messages and commands and can be connected to separate SCSI busses.
 - ▶ **Serial Attached SCSI (SAS) interface.** The LVD SAS tape drives offer point-to-point connection to your SAS port providing maximum bandwidth to each device while sending and receiving information simultaneously. The full SCSI command set is supported over SAS.
 - ▶ **Fibre Channel (FC) interface.** The LC Fibre Channel interface allows you to connect the library to a Fibre Channel network.

Note: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive.

See the tape drive *Product Manual* for tape drive information.
See *Automation/Drive Interface - Command (ADC)* for ADI information.

- ▶ **Ethernet port for connection to a 10/100BaseT Ethernet network.** When used with the Remote Management utility, you can connect the library to an Ethernet network for remote monitoring, upgrading library firmware, and creating diagnostic listings.

Note: HP LTO-5 tape drives feature an Ethernet/iADT port. The functionality for this port will be added at a later time. Refer to the Tandberg Data web site (www.tandbergdata.com) for updated information.

- ▶ **Remote Management Utility.** The library's Remote Management utility allows you to use a standard web browser to set configuration options, view library information, and monitor library operations over an Ethernet network.
- ▶ **Universal Serial Bus Connector.** The library is equipped with a Universal Serial Bus connector for running diagnostics or upgrading firmware.
- ▶ **Rack-mount hardware.** The library is designed to mount in a standard 4-post, 19-inch rack using just 2 units (2U) of rack space. Rack-mounting hardware is included with the library. You can also operate the library as a desktop configuration.
- ▶ **Data Encryption (encryption-capable LTO-4 and LTO-5 tape drives only).** Encryption adds an extra level of security to data stored on the cartridges. The purpose of encryption is to prevent unauthorized access to the data. While the LTO-4 and LTO-5 tape drives are encryption capable, you must use your backup application (application) to run the encryption process, which is called application-managed data encryption (AMDE).
 - ▶ The application interacts directly with the tape drive and is therefore transparent to both the host system and the library.
 - ▶ The application uses encryption keys created with algorithms that are designed to ensure that each key is unique.
 - ▶ Using AMDE to create and control the encryption keys, you must both write and read the data using the same backup application.
 - ▶ Encryption is typically performed after the data is received and compressed, so the compression ratio is not affected.
 - ▶ Encryption requires the proper keys to write and read (encrypt and decrypt) the data, which means that encrypted data is inaccessible to unauthorized users or if the proper keys are lost.
 - ▶ Encryption can be bypassed for access to LTO-2 and LTO-3 data cartridges. LTO-2 and LTO-3 data cartridges are not capable of being encrypted.
 - ▶ Refer to documentation from your backup application (Independent Software Vendor – ISV) for information about their data encryption capability and for instructions on how to run their encryption process.

LIBRARY COMPONENTS

The following sections describe the library's front panel, internal, and back panel components.

FRONT PANEL COMPONENTS

Figure 1-1 shows the library's front panel components.


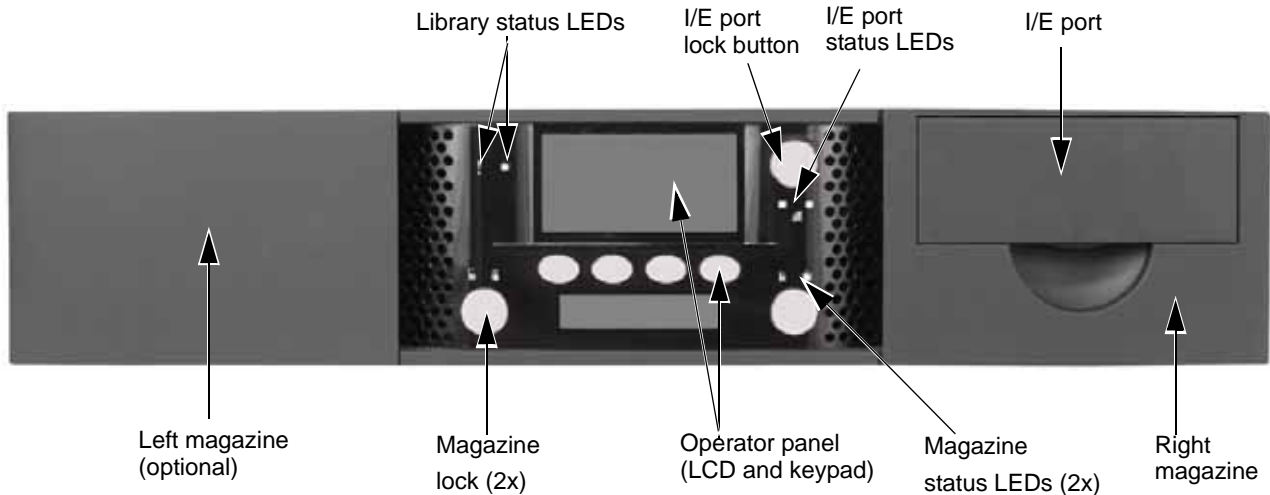


Figure 1-1 Library front panel components

Operator Panel (LCD and Keypad) The operator panel includes a 4-button keypad and an 8-line, 21-character liquid crystal display (LCD).



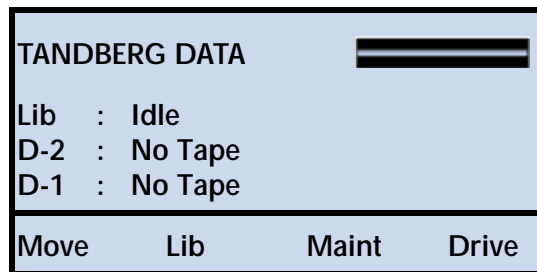


Note: This screen shows a library with two tape drives installed. If your library has one tape drive installed, the additional line (D-2) does not show a status.

You can use the operator panel to:




- ▶ Set or change library configuration options
- ▶ Issue commands to the library
- ▶ View library status and information
- ▶ Run demonstration programs and test library functions
- ▶ Reset the library
- ▶ View tape drive status and information

Import/Export Port (I/E Port) The I/E port allows you to insert or remove cartridges from the library. To prevent unauthorized use of the I/E port, operator panel menus can be password protected or access can be prevented through the backup application.




Library Status LED The status LEDs indicate library activity as shown in the following table. See [Figure 1-1](#) for the location of the status LEDs.

LED	Color	Status
	Off (no color)	The library is idle
	Green	The library is performing a mechanical operation
	Amber	The library encountered a hardware error See Appendix E, Error Messages

I/E Port and Magazine Status LEDs The status LEDs indicate activity as shown in the following table. See [Figure 1-1](#) for the location of the status LEDs.

LED	Color	Status
	Green	Locked
	Amber solid	Unlocked
	Amber blinking	Unlocking

I/E Port Full LED The LED for the I/E port (full/empty) indicates activity as shown in the following table. See [Figure 1-1](#) for the location of the LED.

LED	Color	Status
	Off (no color)	I/E Port is empty
	Green	I/E Port is full
	Green blinking	I/E Port door is open

BACK PANEL COMPONENTS

Figure 1-2 shows the back panel components of a SCSI library.

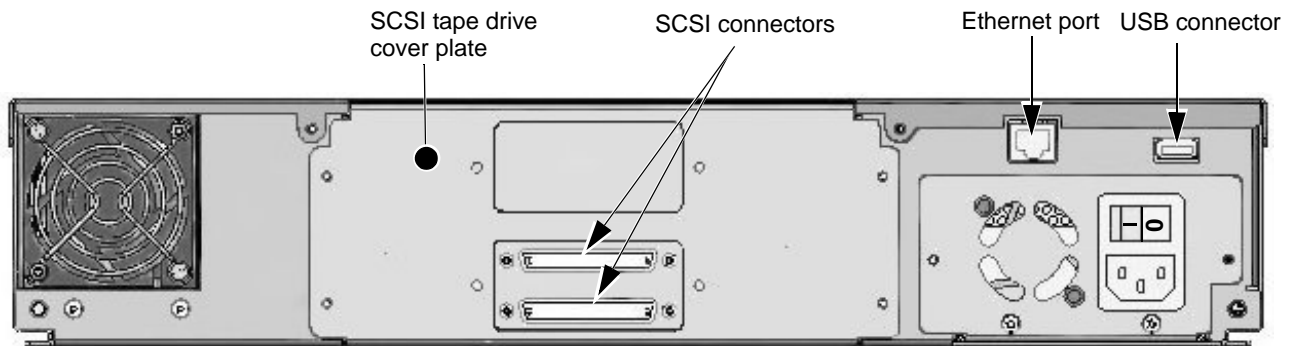


Figure 1-2 Library back panel components (SCSI configuration)

Tape Drive Cover Plate The tape drive cover plate allows access to the tape drive(s) for easy replacement, if necessary.

Ethernet Port The Ethernet port allows you to connect the library to a 10/100BaseT Ethernet network. You can use the Ethernet connection to perform the following activities:

- ▶ Upgrade the library's firmware
- ▶ Upload diagnostic information from the library using FTP
- ▶ Monitor library operations using its built-in Remote Management software

Note: ▶ HP LTO-5 tape drives feature an Ethernet/iADT port. The functionality for this port will be added at a later time. Refer to the Tandberg Data web site (www.tandbergdata.com) for updated information.

USB Connector. The library is equipped with a Universal Serial Bus (USB) connector for running diagnostics or upgrading firmware.

Interface connectors The library has either LVD SCSI tape drive(s), LVD SAS tape drives, or an LC Fibre Channel tape drive installed.

Note: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive.

See the tape drive Product Manual for tape drive information.

See Automation/Drive Interface - Command (ADC) for ADI information.

T 10 — www.t10.org

- ▶ **SCSI Connectors**—If the tape drive(s) installed in the library have SCSI connectors, they can accommodate one of the following.
 - ▶ **Half height LTO-2**
 SCSI connector—An Ultra 160 SCSI connector (minimum rating)
 Terminator—An Ultra 3 Active Ultra 160 SCSI terminator (minimum rating)
 - ▶ **Half height LTO-3**
 SCSI connector—An Ultra 160 SCSI connector (minimum rating)
 Terminator—An Ultra 3 Active Ultra 160 SCSI terminator (minimum rating)
 - ▶ **Half height LTO-4 Ultra 320 (U320)**
 SCSI connector—An Ultra 320 SCSI connector (minimum rating)
 Terminator—An Ultra 3 Active Ultra 320 SCSI terminator (minimum rating)
 - ▶ **Full height LTO-3**
 SCSI connector—An Ultra 160 SCSI connector (minimum rating)
 Terminator—An Ultra 3 Active Ultra 160 SCSI terminator (minimum rating)
 - ▶ **Full height LTO-4 Ultra 160 (U160)**
 SCSI connector—An Ultra 160 SCSI connector (minimum rating)
 Terminator—An Ultra 3 Active Ultra 160 SCSI terminator (minimum rating)
- ▶ **Fibre Channel Connector**—If the tape drive installed in the library has an LC Fibre Channel (FC) connector, they accommodate connection to a 50-micron or 62.5 micron multi-mode optical fibre cable with LC connectors.

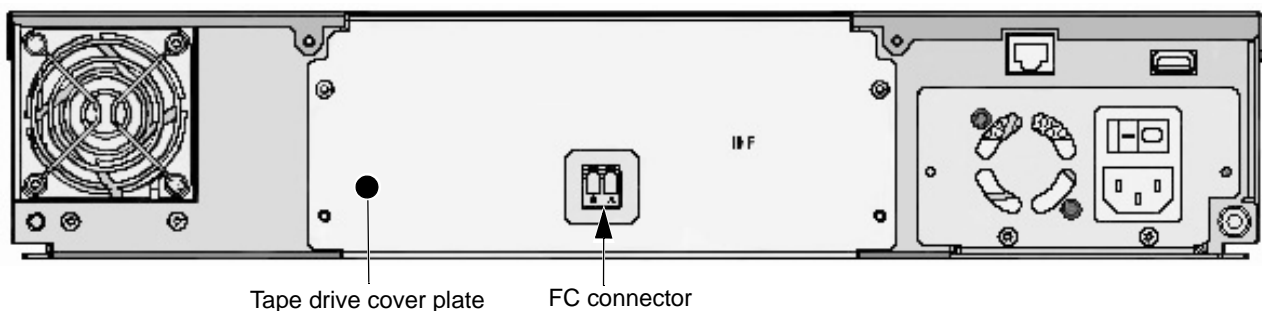


Figure 1-3 Library back panel components (FC configuration)

▶ **SAS Connector**— (mini SAS Cable plug connector SFF 8088)

If the tape drive installed in the library has a SAS connector, it accommodates connection to a system SAS host bus adapter (HBA).

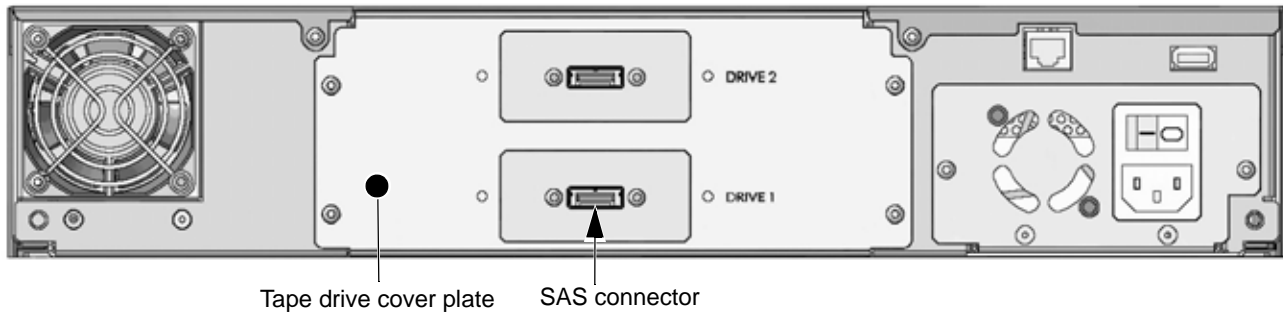


Figure 1-4 Library back panel components (FC configuration)

Fan The system fan provides cooling for the library and the tape drive(s).

Power Cord Connection The power cord connection provides AC power to the library and the tape drive(s).

Power Switch The power switch allows you to turn power on and off for the library and the enclosed tape drive(s).

INTERNAL COMPONENTS

Figure 1-5 shows the library's internal components.

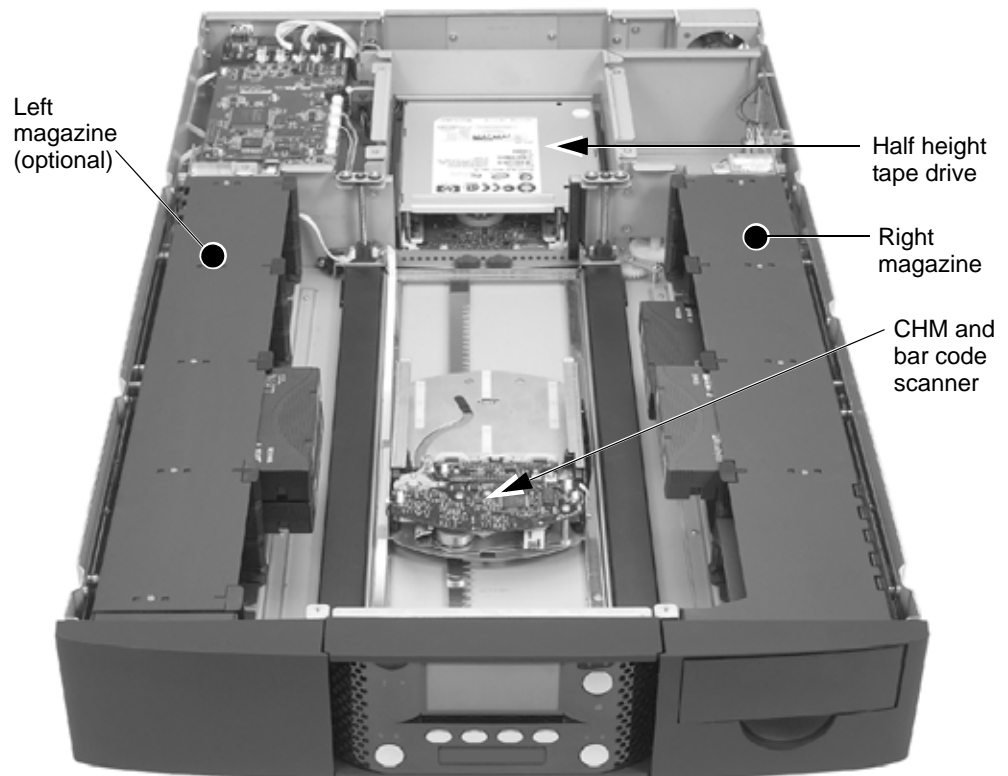


Figure 1-5 Library internal components

Tape Drive The tape drive is mounted at the back of the library. Figure 1-5 shows the library with one HH LTO tape drive installed. The library also accommodates one FH LTO-3 tape drive, one FH LTO-4 tape drive, two HH LTO-2 tape drives, two HH LTO-3 tape drives, two HH LTO-4 tape drives, or two HH LTO-5 tape drives.

Cartridge Handling Mechanism (CHM) The CHM moves cartridges between cells in the magazines and the tape drives. When a cartridge is ejected from a tape drive, the CHM moves the cartridge back to the magazine. The CHM also moves cartridges to the I/E port for easy removal from the library.

Bar Code Scanner The bar code scanner is located on the cartridge handling mechanism. The scanner enables the library to read information from bar code labels on the cartridges into its cartridge inventory. A backup application can use the inventory information to locate and move specific cartridges.

Magazines The library's two magazines hold up to 24 data cartridges. The I/E port is located in the magazine on the right of the library.

NOTES

2

INSTALLING THE LIBRARY

This chapter describes how to install the library. Depending on your requirements, installation will involve most or all of the following steps:

To view this information...	go to...
Obtaining accessories and equipment	page 12
Preparing for installation	page 15
Installing the library in a rack	page 16
Connecting to SCSI	page 20
Connecting to SAS	page 23
Connecting to Fibre Channel	page 23
Connecting the library to Ethernet (optional)	page 24
Connecting the library to the USB Port	page 25
Powering on the library	Powering-on page 25
	Removing the Shipping Lock page 27
Verifying the hardware installation	page 29

! Important After unpacking the library, save all the original packing materials in case you need to ship or move the library later.

OBTAINING ACCESSORIES AND EQUIPMENT

Make sure that you have all the accessories and equipment for library installation and operation, as indicated in the following table. If necessary, you can purchase these items from Tandberg Data (see “[Contacting Tandberg Data Corporation](#)” on page iii).

! Important LTO-2, LTO-3, and LTO-4 Ultra 160 SCSI tape drives are Ultra 160 SCSI devices and require a minimum Ultra 160 non-RAID SCSI host bus adapter card, Ultra 160 rated SCSI cabling, and an Ultra 3 Active Ultra 160 SCSI terminator.
 LTO-4 Ultra 320 SCSI tape drives are Ultra 320 SCSI devices and require a minimum Ultra 320 non-RAID SCSI host bus adapter card, Ultra 320 rated SCSI cabling, and an Ultra 3 Active Ultra 320 SCSI terminator.

Table 2-1 Obtaining accessories and equipment



Accessories and Equipment	
Rack-Mount Hardware	The library is designed to be installed in a standard 4-post, 19-inch rack, using 2 units (2U) of rack space. Rack-mount hardware for a 4-post rack is provided with the library. Note: A 2-post rack will not support the library.
SCSI Cable	<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> <p>One high-density (HD), wide (68-pin), 2-meter LVD SCSI cable is provided with the library. Note: If your SCSI controller has a 68-pin very high-density (VHDCI) connector, you will need to obtain a VHDCI-to-HD SCSI cable.</p> </div> <div style="flex: 0.5; padding-left: 10px;"> <p>HD Connector</p>  <p>VHDCI Connector</p>  </div> </div> <p>If you want to use your own SCSI cable(s), follow these guidelines:</p> <ul style="list-style-type: none"> Use high-density, wide (68-pin) Ultra 160 SCSI cables that conform to SCSI-3 specifications for LTO-2, LTO-3, and LTO-4 Ultra 160 tape drives. Use high-density, wide (68-pin) Ultra 320 SCSI cables that conform to SCSI-3 specifications for LTO-4 Ultra 320 tape drives. To comply with the regulations and standards listed in Appendix A, all SCSI cables used with the library must be properly shielded. The maximum allowable length of an LVD SCSI bus is 12 meters (39 feet) if you have more than two devices on the bus.
SCSI Bus Terminator	One wide Ultra 3 Active Ultra 160 SCSI terminator is provided with the library. If you want to use your own terminator, use a high-quality Ultra 3 rated Active SCSI terminator. An appropriate terminator is stamped with Ultra 3 or LVD 160 and “Active Negation.” Important! LTO-2, LTO-3, and LTO-4 U160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator to function properly on the SCSI bus. LTO-4 U320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator to function properly on the SCSI bus. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures.

Table 2-1 Obtaining accessories and equipment (continued)

Accessories and Equipment				
Fibre Channel Cable	<p>No Fibre Channel cables are included with the library. The number of optical fiber cables required for attaching the library to a Fibre Channel network depends on how many tape drives are installed.</p> <p>Use either 50-micron or 62.5-micron multi-mode optical fiber cables with dual single-channel (LC) connectors.</p> <ul style="list-style-type: none"> ▪ 50-micron multi-mode optical fiber cables must comply with the 400-M5-SN-I classification as specified in the Fibre Channel standard (FC-PI-2). ▪ 62.5-micron multi-mode optical fiber cables must meet the 400-M6-SN-I classification. <p>Note: The length of 62.5 micron multi-mode cables should not exceed 70 meters.</p>			
SAS Cable	No SAS cables are included with the library. The number external of SAS cables required for attaching the library to a SAS host depends on how many tape drives are installed.			
	<table border="1"> <thead> <tr> <th>Library (tape drive) connector</th> <th>SAS Host connector</th> </tr> </thead> <tbody> <tr> <td>Mini SAS cable plug connector</td> <td>Mini SAS cable plug connector or SAS cable plug connector</td> </tr> </tbody> </table>	Library (tape drive) connector	SAS Host connector	Mini SAS cable plug connector
Library (tape drive) connector	SAS Host connector			
Mini SAS cable plug connector	Mini SAS cable plug connector or SAS cable plug connector			
Ethernet Cable	<p>One Ethernet cable is provided. You can use this cable to connect the library to an Ethernet network for remote monitoring, firmware upgrades, and diagnostics.</p> <ul style="list-style-type: none"> ▪ If you want to provide your own Ethernet cable—use a shielded Category 5 (10/100BaseT connection) data-grade cable or similar Category 5 cable that is compliant with EIA/TIA 568. ▪ The library's Ethernet port connector is a pin-through-hole RJ-45 shielded connector. To comply with the regulations and standards listed in Appendix A, all Ethernet cables used with the library must be properly shielded. 			
Power Cord	Two power cords are provided with the library: one for use in the US and Canada and one for use in Europe. Refer to page 214 if you plan to use the library outside of these locations.			
Bar code labels	Sample bar code labels for the cartridges are included with the library. If you want to prepare your own labels—refer to the <i>Tandberg Data Bar Code Label Specification for LTO Ultrium Cartridges</i> at www.tandbergdata.com .			

Table 2-1 Obtaining accessories and equipment (continued)

Accessories and Equipment				
Cartridges	Use only data cartridges and cleaning cartridges designed specifically for LTO Ultrium tape drives. The LTO tape drives support the following LTO Ultrium cartridges.			
	Tape Drive	Supported Cartridges	Color	Native Capacity
	LTO-5	Ultrium 5	Sky Blue	1.5 TB
		Ultrium 4	Green	800 GB
		Ultrium 3 (READ Only)	Slate Blue	400 GB
		WORM (see Appendix C)	Two-toned	1.5 TB
	LTO-4	Ultrium 4	Green	800 GB
		Ultrium 3	Slate Blue	400 GB
		Ultrium 2 (READ only)	Purple	200 GB
		WORM (see Appendix C)	Two-toned	800 GB
	LTO-3	Ultrium 3	Slate Blue	400 GB
		Ultrium 2	Purple	200 GB
		Ultrium 1 (READ only)	Black	100 GB
		WORM (see Appendix C)	Two-toned	400 GB
	LTO-2	Ultrium 2	Purple	200 GB
		Ultrium 1	Black	100 GB
	<ul style="list-style-type: none"> ▪ For maximum capacity, use Ultrium 5 data cartridges with Ultrium 5 (LTO-5) tape drives, Ultrium 4 data cartridges with Ultrium 4 (LTO-4) tape drives, Ultrium 3 data cartridges with Ultrium 3 (LTO-3) tape drives, and Ultrium 2 data cartridges with Ultrium 2 (LTO-2) tape drives. ▪ Use only LTO Ultrium cleaning cartridges 			
Tools	You need to obtain these tools.			
	Tool	Used for		
	Phillips screwdriver—#1	Removing the Shipping Lock		
	Phillips screwdriver—#2	Installing the Library in a Rack Installing or Replacing a Tape Drive		
	Small, flat-blade screwdriver (or similar object)	Removing Cartridges Without Power		
	Level	Installing the Library in a Rack		
	Tape measure	Installing the Library in a Rack		

PREPARING FOR INSTALLATION

Before installing the library:

- ▶ **Make sure that the SCSI host bus adapter card installed in the host computer, any necessary device drivers, and your backup software are compatible.**

! Important LTO-2, LTO-3, and LTO-4 Ultra 160 SCSI tape drives are Ultra 160 SCSI devices and require a minimum Ultra 160 non-RAID SCSI host bus adapter card, Ultra 160 rated SCSI cabling, and an Ultra 3 Active Ultra 160 SCSI terminator.
LTO-4 Ultra 320 SCSI tape drives are Ultra 320 SCSI devices and require a minimum Ultra 320 non-RAID SCSI host bus adapter card, Ultra 320 rated SCSI cabling, and an Ultra 3 Active Ultra 320 SCSI terminator.

- ▶ For optimum performance, use an Ultra160 SCSI host bus adapter for Ultra 160 LTO tape drives and an Ultra 320 SCSI host bus adapter for Ultra 320 LTO tape drives. Compatibility information is available at www.tandbergdata.com.
- ▶ If your software has not yet been certified for the StorageLibrary T24 LTO, you can use one of the library's emulation modes (see [page 54](#)).
- ▶ You can install the software on the host computer before or after library installation. However, if you install the software first, you may need to reconfigure it for use with the library after library installation is complete.
- ▶ **Locate an appropriate area for the library.** Select a location that has adequate clearance for ventilation, minimal dust and debris, and an appropriate power source. The library is designed to operate either in a desktop configuration, or in a standard 19-inch rack. To provide adequate air flow, a ventilated rack is recommended.

The library must be operated in the horizontal position. Do not place the library on its side, and do not place objects on top of the library.

- ▶ **Ensure that the work area is free from conditions that could cause electrostatic discharge (ESD).** Discharge static electricity from your body by touching a known grounded surface, such as a computer's metal chassis.



Warning

Before performing any installation or maintenance procedures, be sure that the library power switch is in the off position and that the power cord is disconnected from the library and the outlet.



Warnung

Vor der Ausführung von Installations- oder Wartungsarbeiten ist darauf zu achten, daß der Library-Netzschalter auf "Aus" gestellt ist und daß das Anschlußkabel vom Library und der Steckdose entfernt ist.

**Advertencia**

Antes de realizar cualquier procedimiento de instalación o de mantenimiento, comprobar que el interruptor de alimentación de la biblioteca está apagado y que el cable de alimentación no está enchufado ni a la biblioteca ni a la toma de corriente.

INSTALLING THE LIBRARY IN A RACK

The library is designed to be installed in a standard 4-post, 19-inch rack, using 2 units (2U) of rack space. Please read the entire section before you begin.

*Two-post racks will **not** support the library. The rack-mount kit includes the following items:*

18 – M5 x 12 Crest Cup™ screws (black) (includes two spare screws)	2 – sets of side support rails (left-side front and back rails and right-side front and back rails)
2 – M3 x 8 Crest Cup screws (silver)	
8 – washers	

To install the library in a rack, you must obtain these tools:

#2 Phillips screwdriver	Level	Tape measure
-------------------------	-------	--------------

! Important The rails provided with the library are designed for a 4-post rack. *A 2-post rack will not support the weight of the library.*

ASSEMBLING THE RAILS

1. Measure the depth of your rack—Using a tape measure, measure the *inside* distance from the front mounting holes of your rack to the back mounting holes. See [Figure 2-3](#), distance (E).
2. Position the front and back sections of the left-side rail as shown in [Figure 2-1](#), with the front rail section on *top* of the back rail section. Spread the sections to the distance you measured in step 1.

3. Assemble the left rail using four M5 screws. Keep the screws loose so that you can adjust the length of the assembled rail, if necessary.

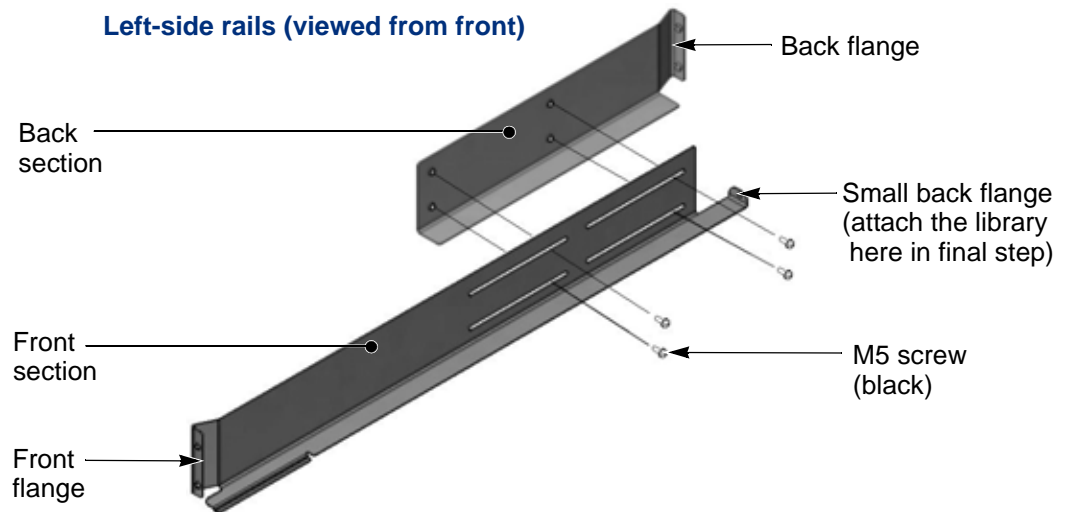


Figure 2-1 Assembling the left-side rail

4. Assemble the right-side rail in the same way.

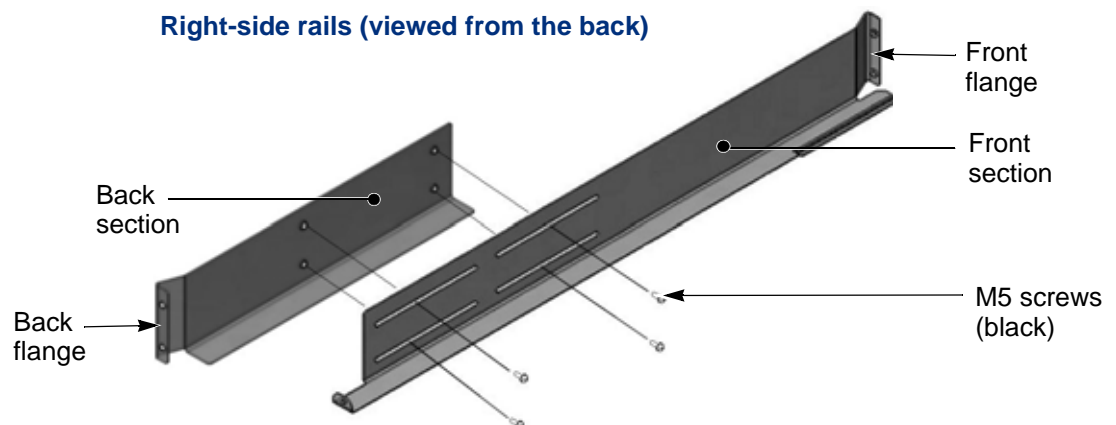


Figure 2-2 Assembling the right-side rail

ATTACHING THE RAILS TO THE RACK

1. **Left side rail assembly**—Position the left-side rail assembly in the rack so that the front flange is *behind* the front screw holes in the rack.

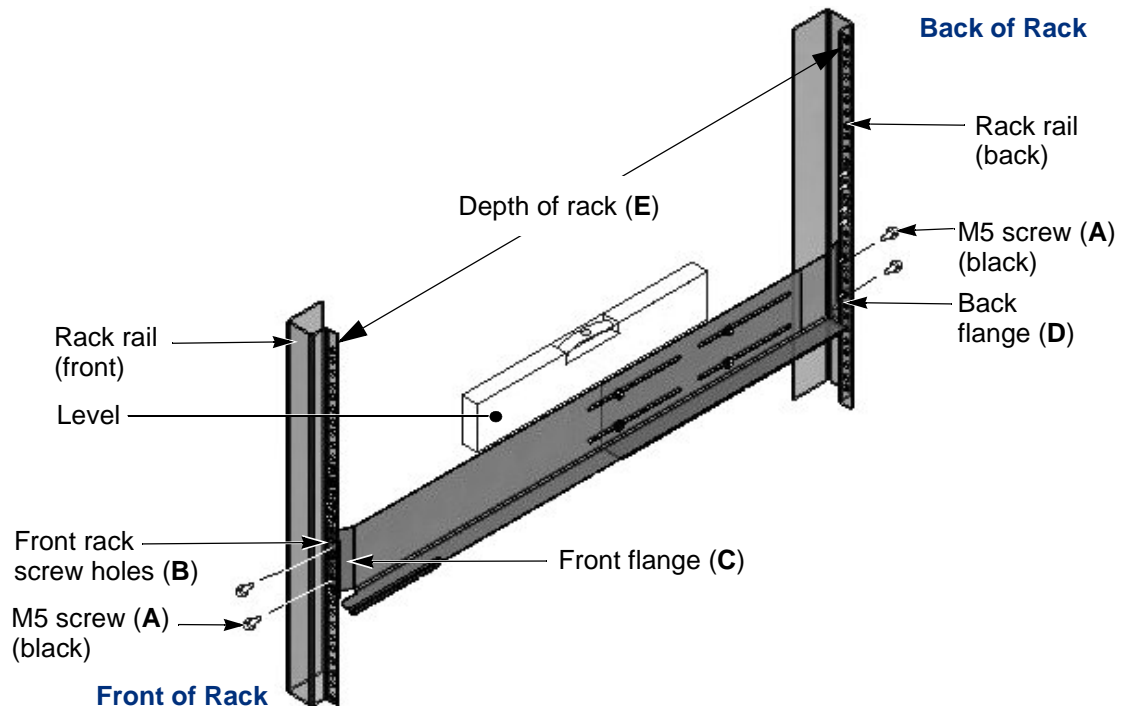


Figure 2-3 Attaching the left-side rail to the rack




2. **Front of rack**—Insert an M5 screw (A) through one of the front rack screw holes (B) and engage the Pem nut in the rail flange (C). If your rack has square mounting holes or the holes are much larger than the screws provided in the kit, use a washer. Finger-tighten the screw.

Insert an M5 screw (A) through a second screw hole (B) and engage the pem nut on the second screw hole in the rail flange (C). If necessary, use a washer. Finger-tighten the screw.

3. Adjust the length of the rail assembly to fit the depth of the rack (E).
4. **Back of rack**—Make sure the rail assembly is level, and then use M5 screws (A) to attach the back flange (D) of the rail to the *inside* of the rack, using the same procedure as step 2. If your rack has square mounting holes or the holes are much larger than the screws provided in the kit, use a washer. Finger-tighten the screws.
5. Using a #2 Phillips screwdriver, tighten the screws securing the rails to the front and back of the rack.
6. Using a #2 Phillips screwdriver, tighten the four screws holding the rail assembly together.

- Right side rail assembly**—Repeat steps 1 through 6 for the right-side rail assembly. Make sure that the right rail assembly is at the same level as the left rail assembly.

ATTACHING THE LIBRARY TO THE RAILS

	Warning	The library weighs 46.1 pounds (20.9 kg). Two people are needed to move or lift the library. Most of the weight is toward the back of the library.
	Warnung	Die Library wiegt 20.9 kg. Es sind mindestens 2 Personen erforderlich, um die Library zu bewegen oder zu heben. Der hintere Teil Library hat das größte Gewicht.
	Advertencia	La biblioteca montada sobre bastidor pesa 20.9 kg. Se necesitan dos personas para mover o levantar la biblioteca. La parte trasera de la biblioteca es la de mayor peso.

To attach the library to the rails:

- From the front of the rack, place the library onto the shelf created by the rails.



Figure 2-4 Placing the library on the rails

- Remove the shipping lock from the library (if it is still installed). Carefully slide the library all the way back until it makes contact with the small flanges at the back of the rails (see [Figure 2-5](#)).

- From the back of the rack, attach the library to the rails by inserting an M3 (the two smaller screws) screw into each of the small flanges. Tighten the screws using a #2 Phillips screwdriver.

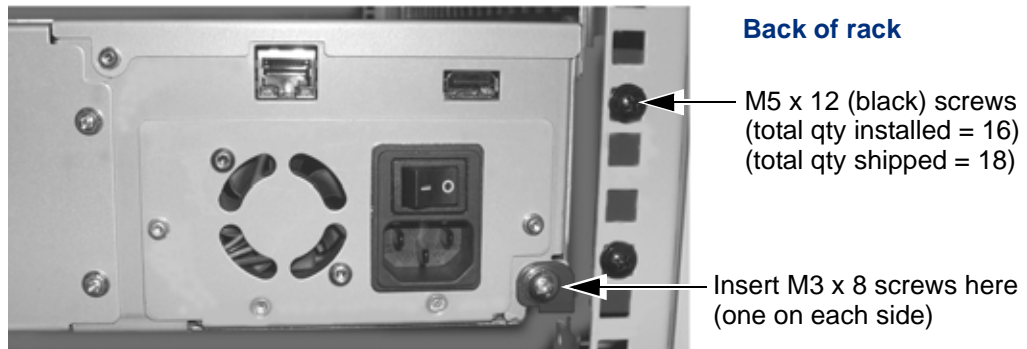


Figure 2-5 Attaching the library to the rails at the back of the rack

CONNECTING THE LIBRARY TO SCSI

The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. See [Figure 1-2 on page 6](#) for the location of the tape drive SCSI connectors.

The SCSI interface as seen by the host is the SCSI interface of the tape drive. The library appears as LUN (Logical Unit Number) 1 on the same SCSI ID as the tape drive.

- ▶ See the tape drive's *Product Manual* for tape drive information.
See *Automation/Drive Interface - Command (ADC)* for ADI information
T10 — www.T10.org

This section provides guidelines for connecting the tape drive(s) in the library to a host system via SCSI. Up to 16 devices can be connected to a wide LVD SCSI bus.

Note: To ensure optimum tape drive performance, connect the LTO-2, LTO-3, and LTO-4 U160 tape drive(s) to an Ultra3 (Ultra160) SCSI host bus adapter and the LTO-4 U320 tape drive(s) to an Ultra 320 SCSI host bus adapter.

! Important LTO-2, LTO-3, and LTO-4 Ultra 160 SCSI tape drives are Ultra 160 SCSI devices and require a minimum Ultra 160 non-RAID SCSI host bus adapter card, Ultra 160 rated SCSI cabling, and an Ultra 3 Active Ultra 160 SCSI terminator.
LTO-4 Ultra 320 SCSI tape drives are Ultra 320 SCSI devices and require a minimum Ultra 320 non-RAID SCSI host bus adapter card, Ultra 320 rated SCSI cabling, and an Ultra 3 Active Ultra 320 SCSI terminator.



Caution

Do not connect the tape drive(s) to a high-voltage differential (HVD) SCSI bus. Doing so may damage the library, tape drive, or other devices on the bus.

GUIDELINES FOR CONNECTING TO SCSI

Keep these guidelines in mind as you plan your SCSI connections:

- ▶ **Do not connect to an inadequate host bus adapter.**

! Important LTO-2, LTO-3, and LTO-4 Ultra 160 SCSI tape drives are Ultra 160 SCSI devices and require a minimum Ultra 160 non-RAID SCSI host bus adapter card, Ultra 160 rated SCSI cabling, and an Ultra 3 Active Ultra 160 SCSI terminator.
LTO-4 Ultra 320 SCSI tape drives are Ultra 320 SCSI devices and require a minimum Ultra 320 non-RAID SCSI host bus adapter card, Ultra 320 rated SCSI cabling, and an Ultra 3 Active Ultra 320 SCSI terminator.

- ▶ **Do not connect single-ended SCSI devices.** Although single-ended SCSI is compatible with the tape drive's LVD SCSI interface, Tandberg Data does not support connecting single-ended devices to the SCSI bus attached to the tape drives.
- ▶ **Do not connect the tape drives to a RAID controller.** The library will not operate if the tape drives are connected to a RAID controller.
- ▶ **LTO Ultra 160—Do not exceed SCSI bus length restrictions.** The maximum allowable length of an LVD SCSI bus is 12 meters (39 feet) if you have more than two devices on the bus. Make sure the SCSI bus attached to the tape drive (or tape drives) does not exceed this length.
 - a. Add together the lengths of all external SCSI cables on the bus.
 - b. Add 20.3 centimeters (8.0 inches) for the internal cable length used by *each* installed tape drive. If you daisy-chain the tape drives, add the length of the cable between the drives.
 - c. Add the internal cable lengths for any other SCSI devices on the bus.
- ▶ **LTO Ultra 320—Do not exceed SCSI bus length restrictions.** The maximum allowable length of an LVD SCSI bus is 6 meters (19.7 feet) of external cable length. Make sure the SCSI bus attached to the tape drive does not exceed this length. You cannot daisy-chain the LVD Ultra 320 tape drives.
- ▶ **LTO SAS—Do not exceed SAS bus length restrictions.** The maximum allowable length of a SAS bus is 4 meters (13.1 feet). Make sure the SAS bus attached to the tape drive does not exceed this length.
- ▶ **Make sure the SCSI bus is properly terminated.** You must install a terminator on the device at the physical end of the SCSI bus. If one of the tape drives in the library terminates the SCSI bus, you must install the required terminator on one of the tape drive's SCSI connectors.

If there are additional devices on the SCSI bus, ensure that only the device at the physical end of the bus is terminated.

-
- ! Important** LTO-2, LTO-3, and LTO-4 Ultra 160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator. LTO-4 Ultra 320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures. See [“Tape Drive Fails with Sporadic Errors”](#) on page 205.
-

MAKING THE SCSI CONNECTIONS

1. Power off the library (press the **0** on the back of the unit).
2. Power off the host.

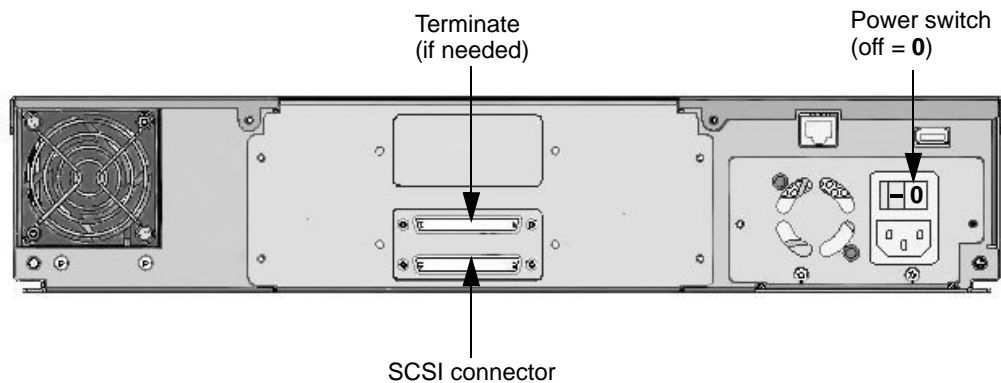


Figure 2-6 SCSI connectors

3. Connect a SCSI cable to the host computer and to one of the tape drive SCSI connectors.

-
- ! Important** Do not over-tighten the SCSI cable jack screws.
-

4. If the tape drive in the library is the last device on the SCSI bus, install a terminator on the unused SCSI connector.

-
- ! Important** LTO-2, LTO-3, and LTO-4 Ultra 160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator. LTO-4 Ultra 320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures. See [“Tape Drive Fails with Sporadic Errors”](#) on page 205.
-

- ▶ **Daisy-chaining**—If the tape drive is not the last device on the SCSI bus, or if you have two tape drives installed in the library, connect another SCSI cable between the tape drive and the next device on the bus.

- ▶ Bus termination—If there are additional devices on the SCSI bus, ensure that only the device at the physical end of the bus is terminated.

CONNECTING THE LIBRARY TO SAS

This section provides instructions for connecting the tape drive(s) in the library to Serial Attached SCSI.

Figure 2-7 shows the back panel of the SAS library.

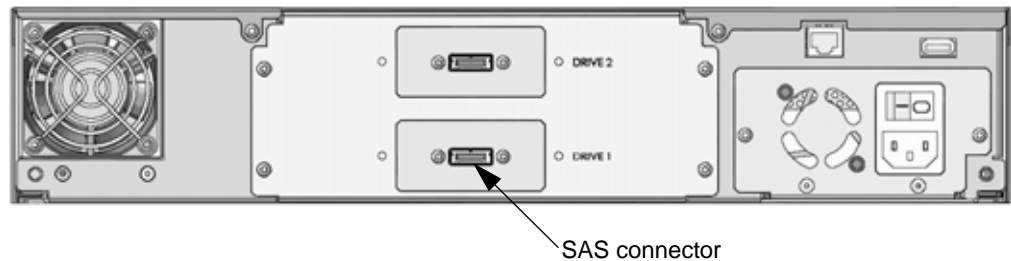


Figure 2-7 SAS connector

To connect the tape drive(s) to a SAS port:

1. Connect one end of your SAS cable to the tape drive installed in the library.
2. Connect the other end of the SAS cable to your host SAS HBA.

Repeat these steps for each tape drive installed in the library.

CONNECTING THE LIBRARY TO FIBRE CHANNEL

This section provides instructions for connecting the tape drive(s) in the library to a Fibre Channel network.

Figure 2-8 shows the back panel of the FC library. Each tape drive includes one integrated dual LC optical fiber connector, Port A, for connecting the tape drive to a Fibre Channel network.

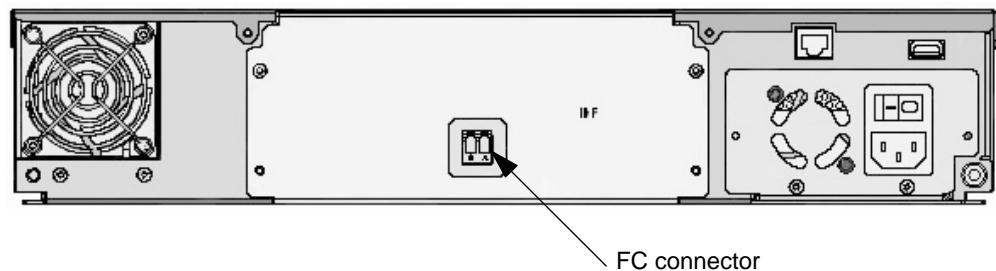


Figure 2-8 Fibre Channel connector

In a Fibre Channel environment, you can connect the tape drive(s) to a Fibre Channel hub or switch in an arbitrated loop or a switched fabric. For simplicity in these instructions, each of these situations is referred to as a “network.”

To connect the tape drive(s) to a Fibre Channel network:

1. Remove the tape over the Fibre Channel connector. The tape secures the protective plugs.
2. Remove the protective plugs from the optical connectors on each tape drive. Set the plugs aside.
3. Attach an optical cable from the hub or switch to the optical fiber connector on each tape drive (if more than one tape drive is installed). The connector and the cable are keyed to ensure that the cable is attached in the correct orientation.

Note: Once the library has been powered on and the Fibre Channel loop has been initialized, avoid disconnecting the tape drive in the library from the loop. If you need to disconnect the library from the loop, use the utility provided with your switch or hub to bypass the affected ports before breaking the connection. The bypass sets the port to a non-participating state on the loop. When you have reconnected the library, use the utility to return the port to a participating state.

CONNECTING THE LIBRARY TO ETHERNET

The library’s Remote Management utility (described in [Chapter 4](#)) allows you to remotely monitor operations when the library is connected to an Ethernet network. You can also create diagnostic listings and upgrade library firmware. For information about upgrading firmware and creating diagnostic listings, see [page 187](#).

To connect the library to Ethernet using the provided cable:

1. Insert one end of the cable into the library’s Ethernet port until you hear it snap into place. The Ethernet port is located on the back of the library.

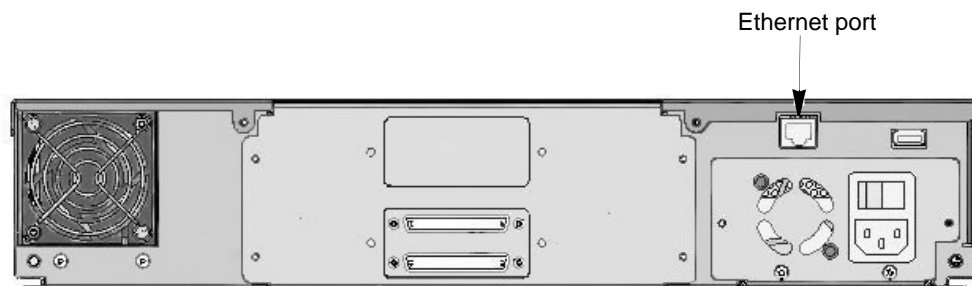


Figure 2-9 Ethernet port (SCSI library shown)

2. Connect the other end of the cable to the network or directly to the server you plan to use to run the library's Remote Management utility or upload firmware.

When you perform library configuration, you will configure the library's Ethernet interface (see [page 61](#)).

Note: ▶ HP LTO-5 tape drives feature an Ethernet/iADT port. The functionality for this port will be added at a later time. Refer to the Tandberg Data web site (www.tandbergdata.com) for updated information.

CONNECTING THE LIBRARY TO THE USB PORT

You can use the library's USB port to download firmware to the library or tape drive(s) and to perform diagnostics.

To connect the library to the USB port:

1. Insert one end of the cable into the library's USB port until you hear it snap into place.

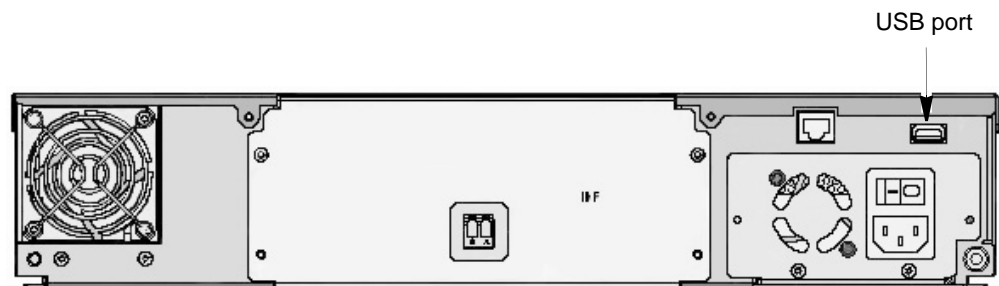


Figure 2-10 USB port (Fibre Channel library shown)

2. Connect the other end of the cable to the network or directly to the server you plan to use to run the library's Remote Management utility or to upload firmware.

See [Chapter 7, "Maintenance"](#) for information about downloading firmware and performing diagnostics.

POWERING ON THE LIBRARY

This process involves two steps:

- ▶ [Applying Power to the Library](#) (below)
- ▶ ["Removing the Shipping Lock"](#) on [page 27](#)

! Important You must remove the shipping locks before operating the library.

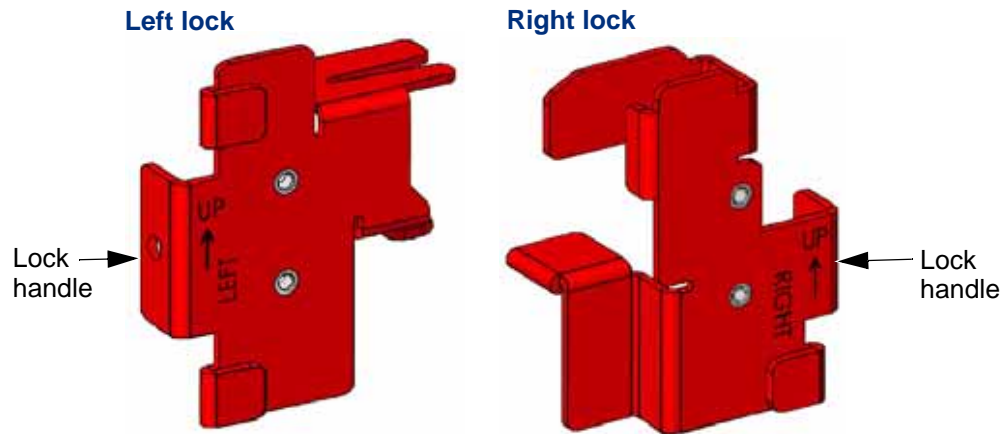


Figure 2-11 Shipping locks

APPLYING POWER TO THE LIBRARY

To power on the library:

1. Make sure that the power switch on the back of the library is off (the **0** is pressed).

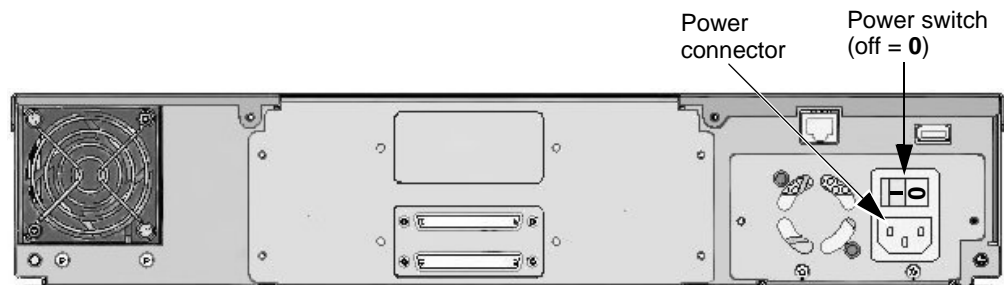


Figure 2-12 Power switch and power connector

2. Connect the female end of the power cord to the power connector on the back of the library.


! Important Two power cords are shipped with the library: One for use in the US and Canada, and one for use in Europe. See [page 214](#) for power cord requirements for other locations.

3. Plug the male end of the power cord into the power source.
4. Push the power switch on the back of the library to the “on” position (press the I). The library performs its power-on sequence.

If you previously removed the shipping lock (using the *Quick Start Guide*), skip the next section and continue with “[Completing the Power-on Sequence](#)” on [page 28](#).

REMOVING THE SHIPPING LOCK

The library automatically ejects both magazines and displays the following message when you power it on with the shipping lock installed.

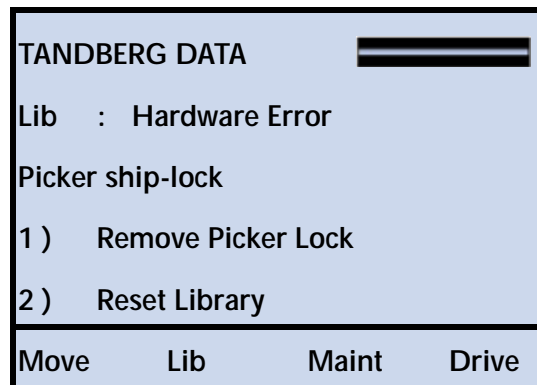

1. **Power the library off.** Press the **0** on the back of the library.
2. **Remove the magazines.** While supporting them, gently slide each magazine *straight* out of the library.



Caution

Use care not to twist the magazine or move it side to side as you insert or remove it from the library. Not inserting it straight into / pulling it straight out of the opening can damage components inside the library.



Figure 2-13 Shipping lock replacement preparation

3. **Remove the screws and the locks.** Remove the screw securing the left shipping lock. Gently pull the lock away from the center of the library and set it aside. Repeat the process for the right lock.

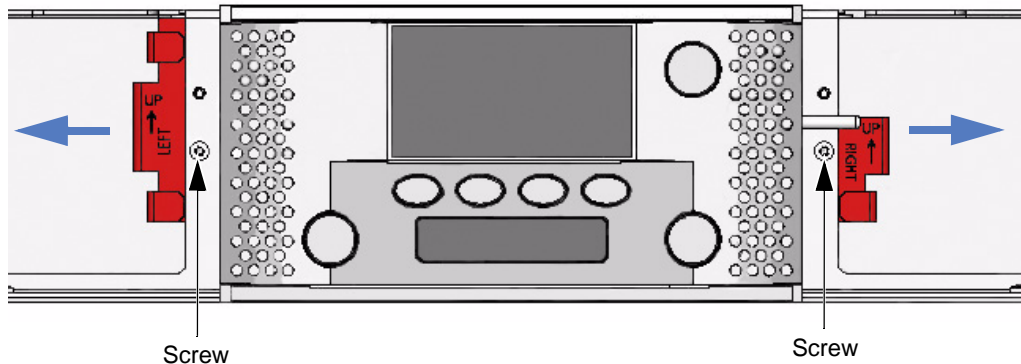


Figure 2-14 Shipping lock removal—step 1


4. **Replace the magazine.** Securely grasp the left magazine (or magazine blank) and slide it *straight* into the library. Use care not to twist it or move it side to side—it must be inserted “straight” into the opening. When you encounter resistance, press the magazine firmly and it “snaps” into place. Repeat the process for the right magazine.

When the magazine is fully seated, the lock icon is solid green (🟢), indicating that it is locked.

COMPLETING THE POWER-ON SEQUENCE

After removing the shipping locks, continue with this section.

1. **Power the library on.** Press the I on the back of the library.
2. **Store the shipping locks.** Attach the screws to the locks and save the them with the library’s packing materials in case you need to move or re-ship the library. See [Appendix D](#) for important instructions on moving or shipping the library, including how to “park the robot.”
3. **Ensure that both magazines are fully seated.** Once they are fully seated, the library updates its inventory. While updating inventory, the library displays the inventory status (XX%).

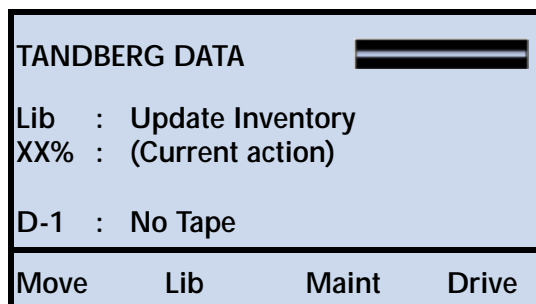


4. **Set the SCSI IDs.** If necessary, set the SCSI IDs for the tape drive(s)—You can use the default IDs or change them if they conflict with other devices on the SCSI bus. See [page 49](#) for instructions.

! Important Do not power on the host computer system immediately after powering on the library. After you power on the library, there is a short delay before the tape drive (or tape drives) are on-line.

5. **Final step.** Power on the host computer system.

VERIFYING THE HARDWARE INSTALLATION

After the library powers on, the LCD displays the Home screen. The first line of the Home screen displays the product name and the following lines show status for the library and tape drive or tape drives.

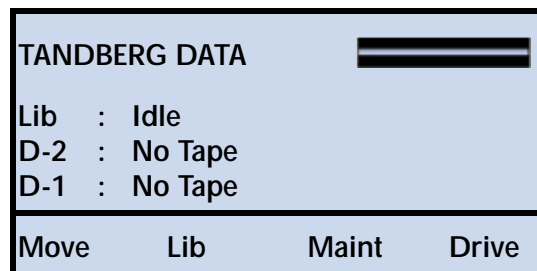

Note: This screen shows a library configured with two tape drives. If your library has one tape drive installed, the additional line (D-2) does not show a status.

If the library powered on as described, continue with configuration in [Chapter 3](#). If not, refer to the following information.

CHECKING THE LIBRARY INSTALLATION

If the library did not power on as described, check the following:

- ▶ Is the power switch on?
- ▶ Is the power cord inserted correctly?
- ▶ Are the devices on the SCSI bus attached to the tape drive(s) installed in the library all LVD (SCSI library)?
- ▶ Is the SCSI cable firmly connected to the tape drive(s) and host computer or other devices on the bus?
- ▶ Are the Fibre Channel cables firmly connected to the tape drive and Fibre Channel hub or switch (Fibre Channel library)?
- ▶ Is the host computer system turned on?

- ▶ Is there an error message displayed on the library's LCD? (See [Appendix E](#) for descriptions of LCD error messages.)
- ▶ For additional tips, see [Chapter 8](#), “Troubleshooting.”

PERFORMING SYSTEM EXERCISES

After installing the library, check the setup by performing the exercises suggested below. While these exercises are not required, it is a good idea to verify that your system and hardware are properly communicating before you begin operation.

1. Import several cartridges into the library, and load and unload cartridges into the tape drive(s). For instructions on:
 - ▶ Importing cartridges, see [page 116](#)
 - ▶ Loading and unloading cartridges from the tape drives, see [page 130](#)
2. Run a system demo. See [page 185](#) for instructions. These exercises help determine if the library's hardware components are operating properly.
3. Download the Tandberg Data diagnostic tools **LibTool** and **LTOTool** from www.tandbergdata.com.

Use the Remote Management Utility (see [Chapter 4](#)) to verify that the host computer can communicate with the library and the tape drive(s).



Be sure to download the tools for your operating system. Refer to the instructions in the “readme” files or on-line help provided with the tools.

- ▶ Use **LibTool** to view the cartridge inventory and to move tapes into and out of the tape drive(s).
- ▶ Use **LTOTool** to run a Write/Read test to verify that the tape drive(s) can perform write and read operations.

If the library and tape drive(s) are not operating as expected, see:

- ▶ [Chapter 8](#) for troubleshooting tips
- ▶ [Appendix E](#) for error message descriptions
- ▶ The troubleshooting chapter in the tape drive's product manual

If you cannot resolve the problem yourself, contact Technical Support (see [page iii](#)).

CONFIGURING THE LIBRARY

After installing the library hardware, you are ready to set configuration options. This chapter provides the following information for the library:

To view this information...	go to...
Accessing Configuration Options	below
Home Screen Menu	page 35
Setting Configuration Options	page 36
Checking the Setup	page 77

ACCESSING CONFIGURATION OPTIONS

With the library, you can use the operator panel or the library's web-based Remote Management utility to access configuration options.

- ▶ To use the Operator Panel, see [Using the Operator Panel](#) (below).
- ▶ To use the Remote Management utility, see [Chapter 4](#).

USING THE OPERATOR PANEL

The library's operator panel includes an eight-line LCD and keypad (see [Figure 3-1](#)) that allow you to interactively control library operations. Using the operator panel, you can set library and tape drive options, execute library commands, check operating statistics, and diagnose errors.


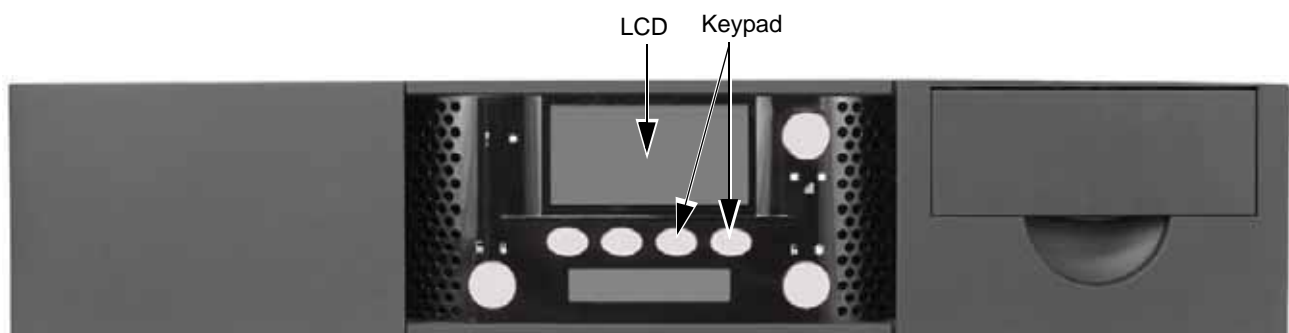


Figure 3-1 Library LCD and keypad


Viewing the Home Screen

During normal operation, the Home screen appears on the LCD (see below). By default, the Home screen displays the operating status of the library and tape drive or tape drives.

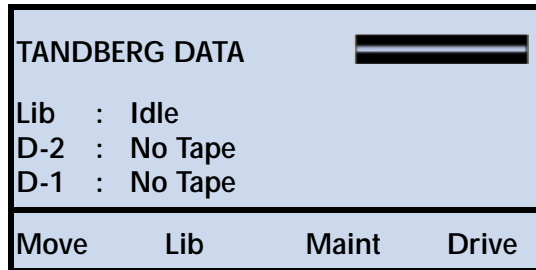


Note: This screen shows a library configured with two tape drives. If your library has one tape drive installed, the additional line (D-2) does not show a status.

If a menu is currently displayed on the LCD and you want to view the Home screen, press the “Back” button (see example below) until the Home screen appears.

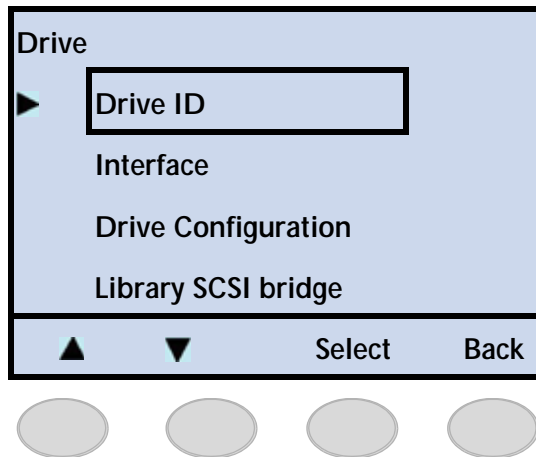


OVERVIEW OF LIBRARY MENUS

When the Home screen is displayed on the LCD, press **Move**, **Lib**, **Maint**, or **Drive** to access the library's main menus.

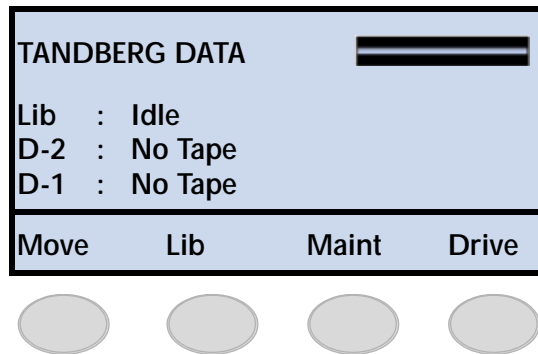

Once you are within a menu, press **Select**, **Back**, **▼**, or **▲** to move through the main menus and see the sub-menus (see example below).

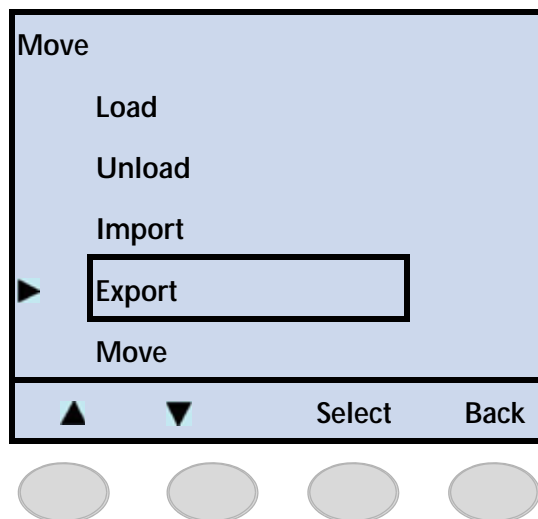

As shown in [Figure 3-2 on page 35](#), the library's menus are organized in a tree structure consisting of four main menus with sub-menus and selections. The operator panel buttons allow you to move up and down between menu levels, view choices within menus, and make selections.

Table 3-2 provides an overview of the library's main menus. **Figure 3-2** shows the organization of the menus.

Table 3-1 Operator button descriptions

Button	Description (press this button to:)
Move	<ul style="list-style-type: none"> ▪ Load a cartridge into the tape drive ▪ Unload a cartridge from the tape drive ▪ Import a cartridge from the I/E port ▪ Export a cartridge through the I/E port ▪ Move a cartridge to and from a slot, the tape drive(s), or from the I/E port
Lib (Library)	<ul style="list-style-type: none"> ▪ Access the library's identification information ▪ Access the library's inventory ▪ Enable, disable, or change the password ▪ Select the library's language ▪ Access (and in some cases, change) the library's operation mode, such as: <ul style="list-style-type: none"> Random or Sequential cartridge handling Emulation mode Ethernet settings LED settings (brightness, display, and appearance) Enable or disable the I/E port and set the slot count Restore defaults
Maint (Maintenance)	<ul style="list-style-type: none"> ▪ Perform library diagnostics and maintenance <ul style="list-style-type: none"> Retrieve library status Review library history Perform a self test Retrieve library statistics Park the library for shipping ▪ Perform tape drive diagnostics ▪ Establish cleaning options for clean the tape drive(s) ▪ Access USB options ▪ Perform a system reset
Drive	<ul style="list-style-type: none"> ▪ Access tape drive information (drive type, code level, serial number, and SAS Port number, if applicable) ▪ Access and change tape drive SCSI IDs (SCSI tape drives) ▪ Access Fibre Channel information (FC tape drives) ▪ Access SAS information (SAS tape drives) ▪ Access tape drive configuration ▪ Assign the SCSI interface (bridge)

HOME SCREEN MENU

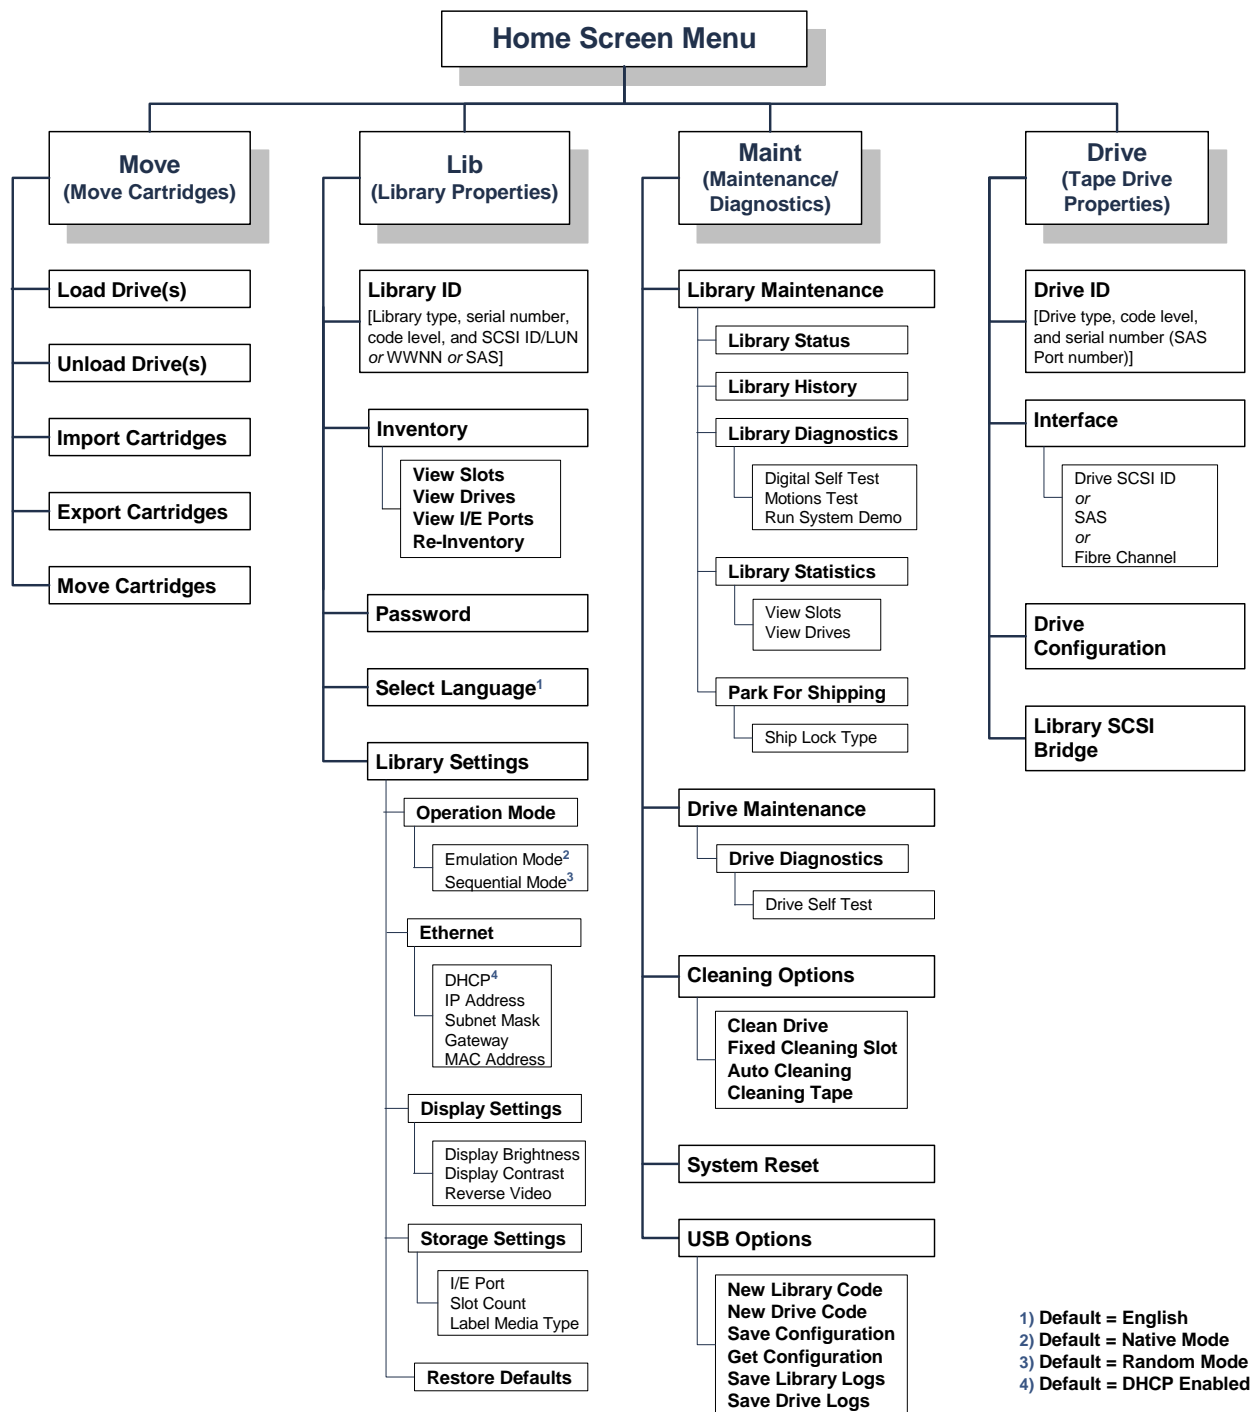


Figure 3-2 Library menu organization

! Tip Print this page and keep it close to the library to help you navigate through the screens.

SETTING CONFIGURATION OPTIONS

This section provides step-by-step instructions for setting library configuration options. The instructions assume that you are using the operator panel to set options. If you are using the library's Remote Management utility (described in [Chapter 4](#)), the selections are generally the same but you access menus and selections through web-style links and fields.

[Table 3-2](#) provides an overview of each configuration option. Read through the table to determine which options you need to set, and then follow the steps on the referenced pages.

Table 3-2 Library configuration options

Configuration option	Description	See...
LCD Language	You can change the language for the LCD display from English (the default setting) to French, German, Italian, or Spanish.	"Changing the LCD Language" on page 38
LCD Contrast LCD Brightness Reverse Video	You can set the LCD's contrast and brightness to an appropriate level for your lighting conditions. You can also reverse the display (dark background/light text).	"Changing the LCD settings" on page 39
Slot Count (cartridge cells)	You can limit the number of slots visible to the SCSI interface for compatibility with backup software.	"Setting the Data Cartridge Slot Count" on page 43
I/E Port	You can enable the I/E port for importing and exporting cartridges without removing an entire magazine or you can disable the I/E port and gain one more cartridge storage slot.	"Enabling and Disabling the I/E Port" on page 45
Media Identifier	You can configure the library to identify the type of media loaded into the library (LTO-2, LTO-3, or LTO-4) and list the information along with the barcode.	"Enabling the Media Identifier" on page 47
Tape Drive SCSI ID or WWNN Number	<p>SCSI Configuration—The tape drive(s) must have separate SCSI IDs. You can view the default settings and change them if necessary.</p> <p>FC Configuration—You can generate a unique number for a drive in this position, in this library.</p> <p>SAS Configuration—If the library has a SAS tape drive installed, changing the SCSI ID is not optional.</p> <p>Notes:</p> <ul style="list-style-type: none"> ▪ The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. ▪ The SCSI interface that the host sees is the SCSI interface of the LTO tape drive. ▪ See the tape drive <i>Product Manual</i> for tape drive information. ▪ See <i>Automation/Drive Interface - Command (ADC)</i> for ADI information. 	"Changing the SCSI IDs or WWNN Number" on page 49

Table 3-2 Library configuration options (continued)

Configuration option	Description	See...
Tape Drive SCSI Interface Bridge	You can assign one of the tape drive's to act as the primary SCSI interface (bridge) for the library.	"Tape Drive SCSI Interface (Library Bridge)" on page 52
Emulation Mode	Changing the emulation mode is required if your backup application does not support the StorageLibrary T24 LTO, but does support one of these products: <ul style="list-style-type: none"> ▪ Exabyte 221L library ▪ Exabyte EZ17 autoloader ▪ Exabyte 210 library 	"Changing the Emulation Mode" on page 54
Sequential Mode Operation	See "Setting the Library to Operate in Sequential Mode" on page 124	
Fixed Cleaning Slot Autoclean	These options allow you to set up automatic tape drive cleaning. Note: To use automatic cleaning, a cleaning cartridge must be installed in the library (see page 136).	"Setting Up Automatic Tape Drive Cleaning" on page 57
DHCP Addressing IP Address Subnet Mask Gateway Address MAC Address	If you are using the library's Ethernet interface, you can set the library's IP address, subnet mask, and gateway address for communication across your Ethernet network. You can also choose whether the library uses a fixed IP address (static addressing) or an address assigned by a DHCP server. You can also view the MAC address.	"Setting Ethernet Configuration Options" on page 61
USB Options	Use the Universal Serial Bus (USB) Save and Get Configurations to "clone" the user selectable configurations between libraries.	"Setting USB Options" on page 67
Password	By setting a password, you can prevent unauthorized personnel from using operator panel functions and possibly disrupting library operation.	"Setting Up Library Password Protection" on page 71
Restore Default Configuration	Resets all library configuration settings to their default values.	"Restoring the Default Configuration" on page 75


CHANGING THE LCD LANGUAGE

You can choose from the following languages for the LCD display:

- ▶ English (default)
- ▶ French
- ▶ German
- ▶ Italian
- ▶ Spanish

To change the LCD language:

1. At the Home screen, press **Lib**.
If necessary, enter the operator panel password (see [page 73](#)).
2. Press ▼ until the selection arrow (▶) points to **Select Language**.

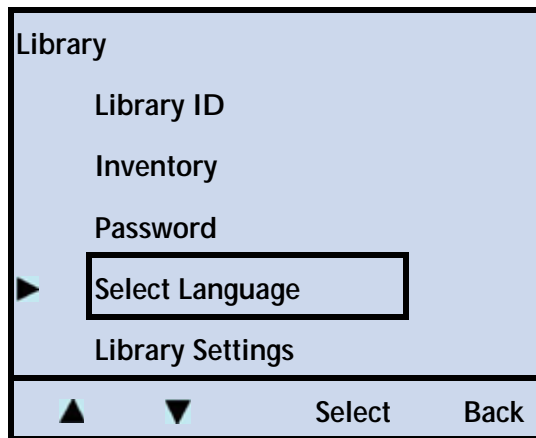

3. Press **Select**.
4. Press **Modify**.
5. Press ▼ or ▲ until the selection arrow (▶) points to the desired language. Press **Select**.

The LCD displays the following screen (in this example, German is shown):



6. Press **OK**.
7. Press **Back** (as needed) to return to the Home screen.

CHANGING THE LCD SETTINGS


If desired, you can change the LCD's contrast from its default setting to a level that is appropriate for your lighting conditions.

To change the LCD settings:

1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library Settings**.

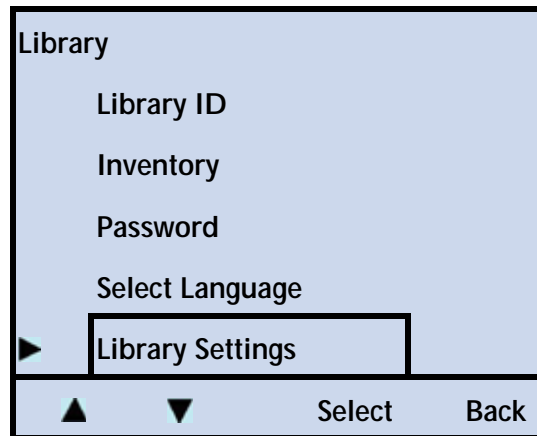


3. Press **Select**.
4. Press ▼ until the selection arrow (▶) points to **Display Settings**.
5. Press **Select**.

Changing the Brightness

The brightness setting changes the brightness of the backlight. Follow steps 1 through 6 above, and continue with the following steps. See [page 40](#) to change the contrast and [page 41](#) to reverse the video (black background, and light text).

1. Press ▼ until the selection arrow (▶) points to **Display Brightness**.

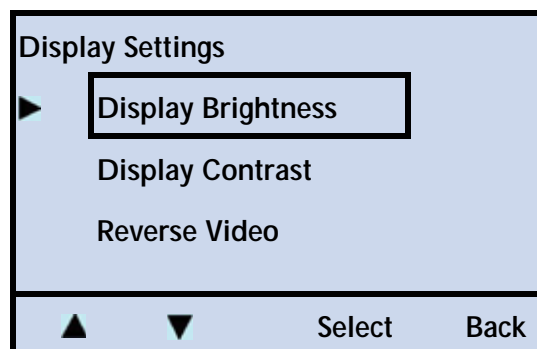

2. Press **Select**.
3. Press **Modify**. Press **+** or **-** until the selection changes to the desired value.

As you change the value, the display will update to show the result of the current value.


4. Press **Select** to accept the change, or **Back** to restore the previous value.
5. Press **OK** to continue.
6. Press **Back** (as needed) to return to the Home screen.

Changing the Contrast

The contrast setting changes the contrast of the Liquid Crystals. Too high a value will “wash out” the display, and too low a value will cause darkness and streaking.


To change the LCD contrast:

1. At the Home screen, press **Lib**.
If necessary, enter the operator panel password (see [page 73](#)).
2. Press **▼** until the selection arrow (**▶**) points to **Library Settings**.

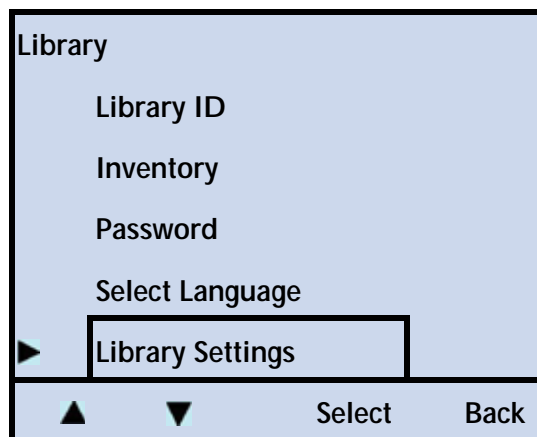


3. Press **Select**.

- Press ▼ until the selection arrow (▶) points to **Display Settings**.

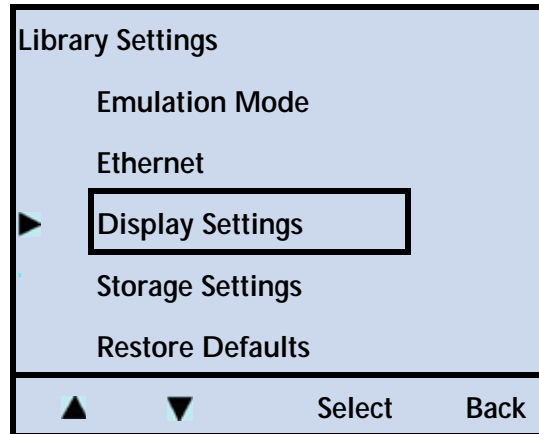

- Press **Select**.
- Press ▼ until the selection arrow (▶) points to **Display Contrast**.

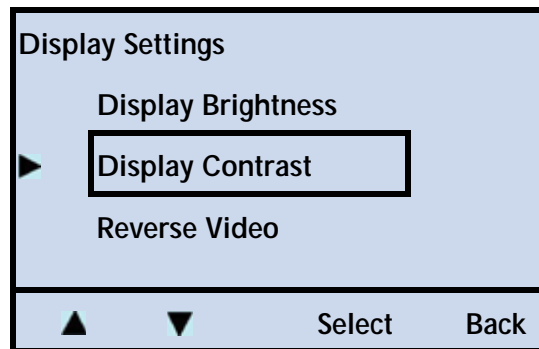

- Press **Select**, and then **Modify**. Press + or – until the selection changes to the desired value.

As you change the value, the display will update to show the result of the current value.

- Press **Select** to accept the change, or **Back** to restore the previous value.
- Press **OK** to continue.
- Press **Back** (as needed) to return to the Home screen.


Reversing the Video

You can reverse the video (make the background dark and the text light) by following these steps.


- At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Library Settings**.

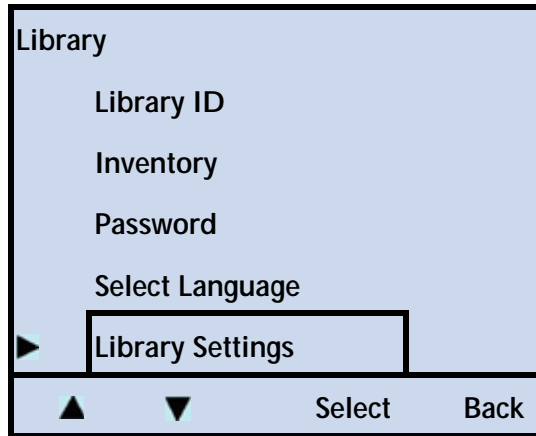


3. Press **Select**.
4. Press ▼ until the selection arrow (▶) points to **Display Settings**.

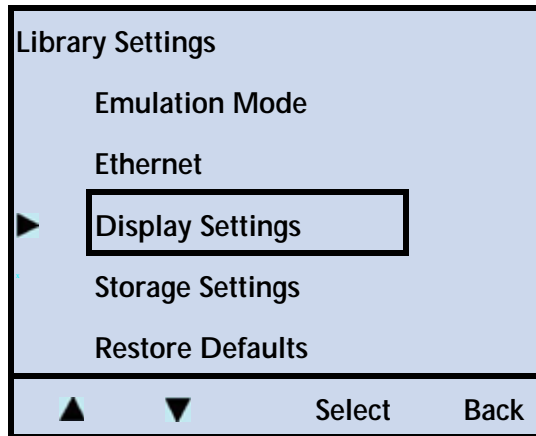

5. Press **Select**.
6. Press ▼ until the selection arrow (▶) points to **Reverse Video**.

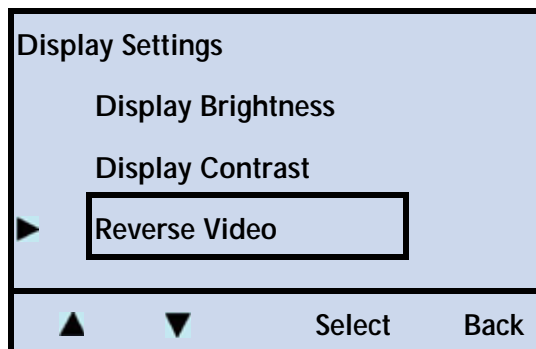

7. Press **Select**, and then **Modify**. Press + or – to toggle between Enable and Disable.

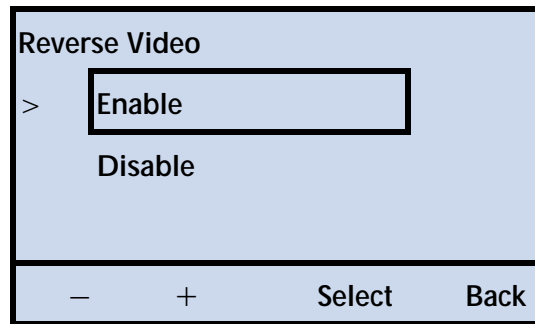

8. Press **Select** to accept the change, or **Back** to restore the previous value.

Once you enable the Reverse Video feature, the front panel looks like this:



9. Press **OK** to continue.
10. Press **Back** (as needed) to return to the Home screen.

SETTING THE DATA CARTRIDGE SLOT COUNT


You can limit the number of slots visible to the SCSI interface for compatibility with backup software. The library has 24 available slots with two magazines installed.

To change the visible number of slots:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Library Settings**.

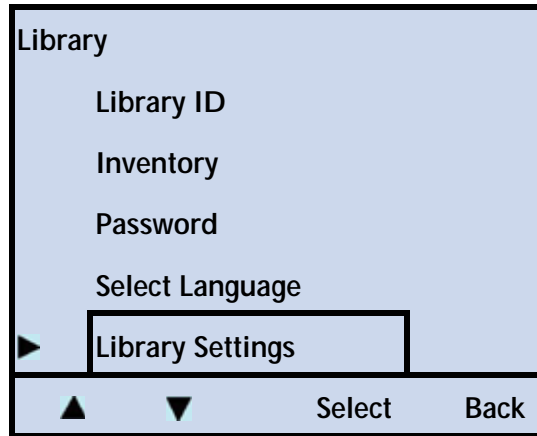

3. Press **Select**.
4. Press ▼ until the selection arrow (▶) points to **Storage Settings**.

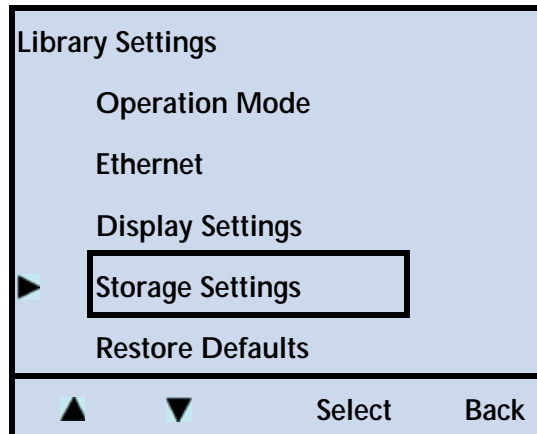

5. Press **Select**.
6. Press ▼ until the selection arrow (▶) points to **Slot Count**.
7. Press **Select**.

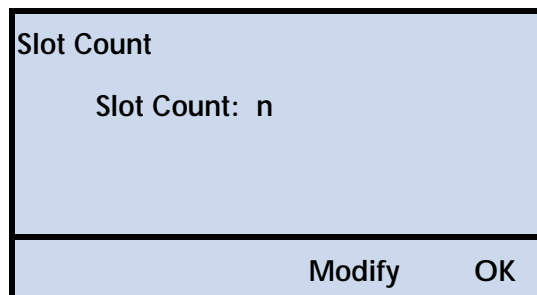

8. Press **Modify**. Press + or – until the selection changes to the desired value. Press **Select**.

9. Press **OK** to continue.
10. Press **Back** (as needed) to return to the Home screen.

! Important You may need to reconfigure your backup application to recognize the new slot count. Refer to your application's documentation for instructions.

ENABLING AND DISABLING THE I/E PORT

The library ships from the factory with the I/E port enabled. Use these instructions to disable the I/E port, or to enable it if it was previously disabled.


Setting	Description
Enabled	Use the I/E port to import and export cartridges without removing an entire magazine
Disabled	Gain one more cartridge storage slot/cell

! Important Changing the I/E Port setting always disables the Fixed Cleaning Slot. If you wish to use the Fixed Cleaning Slot, it must be enabled after selecting the I/E Port Option.

See ["Activating the Cleaning Cartridge Cell"](#) on page 57 for additional information.


To enable or disable the I/E port:

1. At the Home screen, press **Lib**.
If necessary, enter the operator panel password (see [page 73](#)).
2. Press **▼** until the selection arrow (**▶**) points to **Library Settings**.

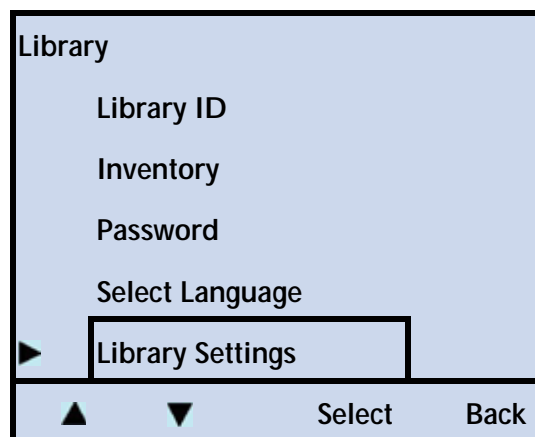


3. Press **Select**.

4. Press ▼ until the selection arrow (▶) points to **Storage Settings**.

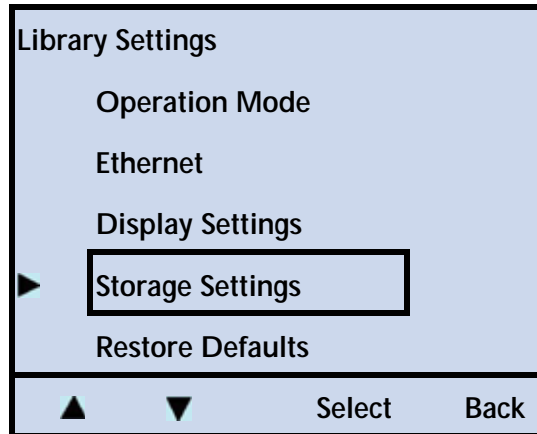

5. Press **Select**.
6. Press ▼ until the selection arrow (▶) points to **I/E Port**.
7. Press **Select**, and then **Modify**.

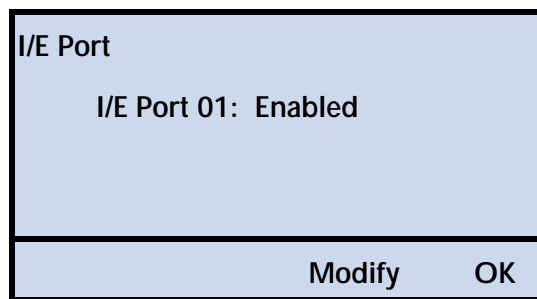

8. Press + or – to toggle between Enable and Disable. Press **Select**.

Note: Enabling the I/E port allows you to use it to import and export cartridges. Disabling the I/E port allows you to use it as a storage slot.

9. Press **OK** to continue.
10. Press **Back** (as needed) to return to the Home screen.

ENABLING THE MEDIA IDENTIFIER

You can enable the library to identify the 'type' of media installed in the library when it scans barcodes. With this option enabled, the bar code scan includes two extra digits: L2 for an LTO-2 data cartridge, L3 for an LTO-3 data cartridge, or L4 for an LTO-4 data cartridge.

Setting	The scan provides information similar to this...
Enabled	A000001L4
Disabled	A000001


Note: The library scans the bar code label, not the cartridge. Ensure that you affix the correct label type to the cartridges: LTO-2 labels for LTO-2 cartridges, LTO-3 labels for LTO-3 cartridges, and LTO-4 labels for LTO-4 cartridges.

To enable or disable the media identifier:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library Settings**, and then press **Select**.

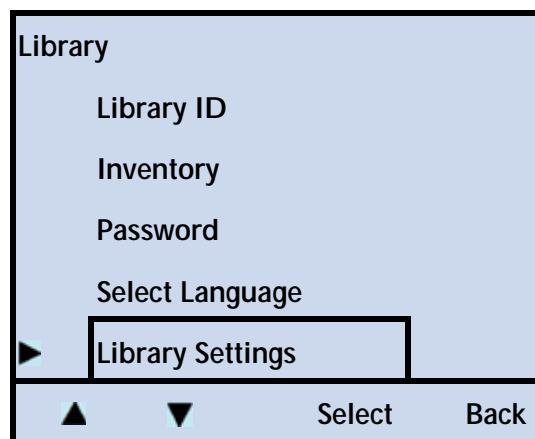


3. Press ▼ until the selection arrow (▶) points to **Storage Settings**.

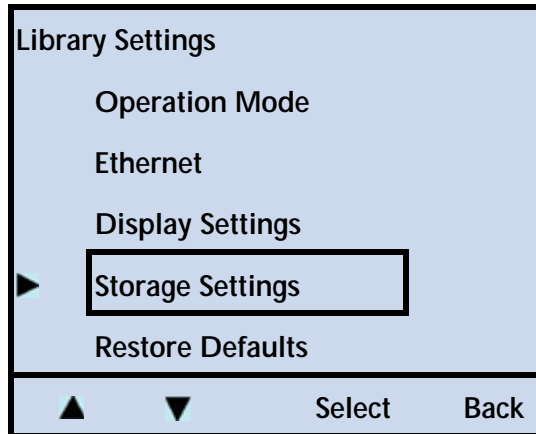


4. Press **Select**, and then press ▼ until the selection arrow (▶) points to **Label Media Type**, and then press **Select**.
5. Press **Modify**, and then press + or – to toggle between Enabled and Disabled.

▶ **Disabled**

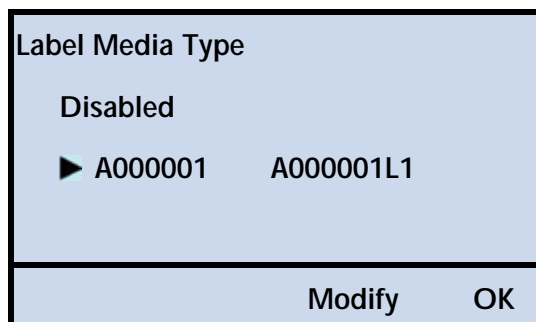

▶ **Enabled**

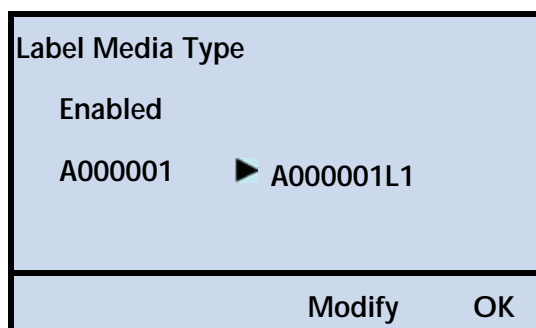

6. Press **Select**.
7. Press **OK** to continue.
8. Press **Back** (as needed) to return to the Home screen.

CHANGING THE SCSI IDs OR WWNN NUMBER

Each device on a SCSI bus must have a unique SCSI ID so that it can be identified by the host computer. You can use the default IDs for the tape drive(s) or change them if they conflict with other devices on the SCSI bus.

Notes: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive.

See the tape drive *Product Manual* for tape drive information.
See *Automation/Drive Interface - Command (ADC)* for ADI information.

If you change the tape drive's SCSI ID after the library has been in operation, you may need to reboot your host computer so that it recognizes the new ID.


If your library has a SAS tape drive installed, entering this mode will show you the SAS Port number, but not allow you to change anything.

To change the tape drive's SCSI ID:


1. At the Home screen, press **Drive**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Interface**.

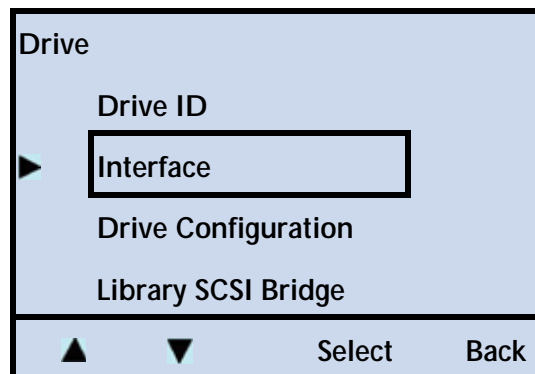

3. Press **Select**.

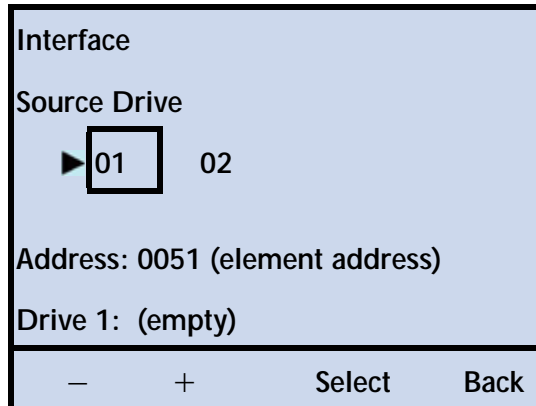

4. Press + or – to select the tape drive (if your library has more than one tape drive installed).

SCSI Configuration—


- a. Press **Select** to see the following screen.




- b. Press **Modify**. Press + or – until the selection changes to the desired value, and then press **Select**.

Fibre Channel Configuration—

- a. Press **Select** to see the following screen.

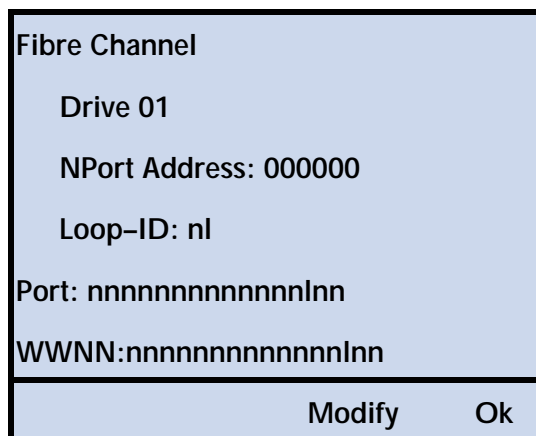


- b. Press **Modify** to see the following screen.

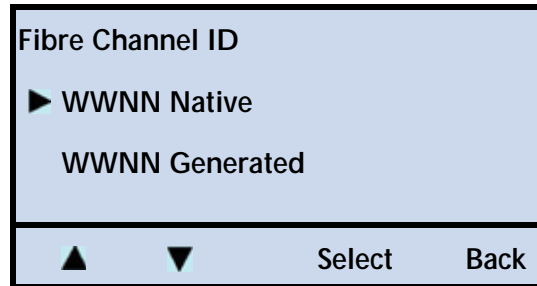

- c. Press ▼ or ▲ to select the desired option, and then press **Select**.

- ▶ **Native**—Restores the factory default value.
- ▶ **Generated**—Sets unique values for the library and tape drive.

If you select this option, and the MAC address is the default value (it was never set at the factory, or was reset) this request is rejected to avoid having more than one tape drive in the world with the same WWNN. In this case, the following screen appears.

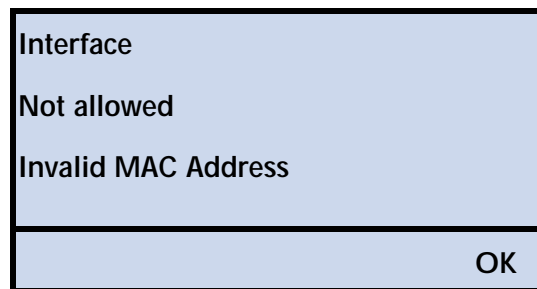

If you receive this message you must use the “Native” option.

5. Press **OK**.
6. Power cycle the library via a back panel reset—press the **0** to power the library off, and then press the **1** to power the library back on.

Note: You may also be able to perform resets from your application software. Refer to your software documentation for instructions.

A front panel reset will *not* work for this configuration change as a front panel reset does not power cycle the tape drive installed in the library.

7. Press **Back** (as needed) to return to the Home screen.

TAPE DRIVE SCSI INTERFACE (LIBRARY BRIDGE)

If you have two tape drives installed in the library, you can assign one of them to act as the primary SCSI interface (bridge) for the library. If you have only one tape drive installed, it automatically acts as the SCSI bridge.

Note: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive.


See the tape drive *Product Manual* for tape drive information.
See *Automation/Drive Interface - Command (ADC)* for ADI information.

To assign the tape drive SCSI bridge:


1. At the Home screen, press **Drive**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Library SCSI Bridge**.

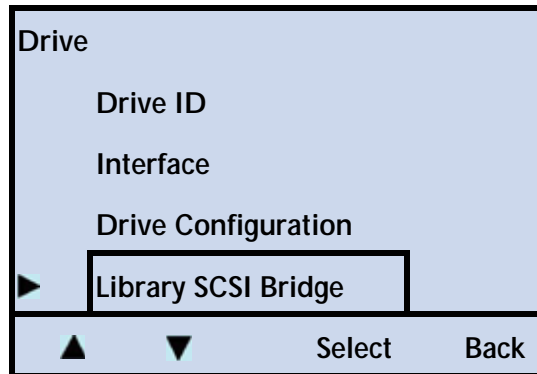


3. Press **Select**.

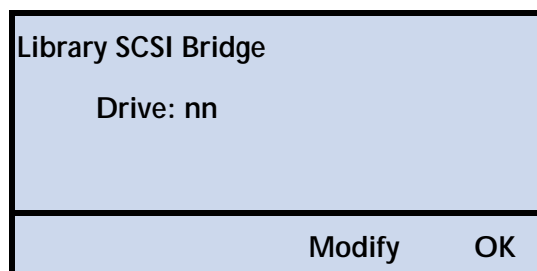

4. Press **Modify**. Press + or – to select the desired tape drive. Press **Select**.

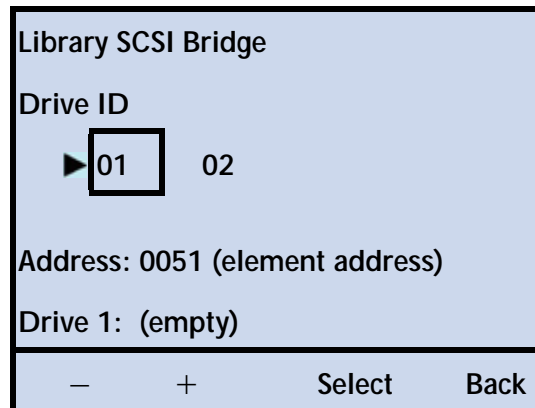

The following screen appears.

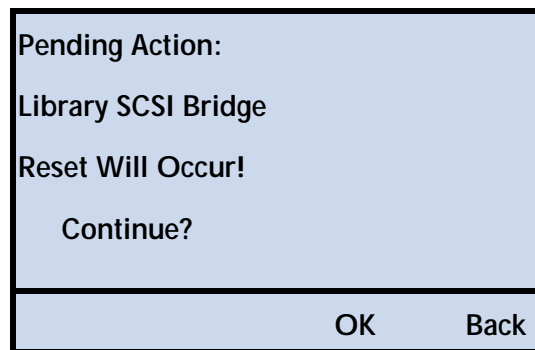

5. Press **OK** to accept the change or back to cancel the change.
6. Press **Back** (as needed) to return to the Home screen.

TAPE DRIVE CONFIGURATION

With firmware v. V1C260 or higher, the library automatically configures new tape drives upon power up. The firmware update eliminates the need to manually configure the library after tape drive installation.

! Important If your library code is not updated to v. V1C260 or higher, you will need to contact Tandberg technical support for manual configuration instructions.


The Tape Drive Configuration menu option allows you to view the library's current tape drive configuration.

To view tape drive configuration:


1. At the Home screen, press **Drive**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Drive Configuration**.

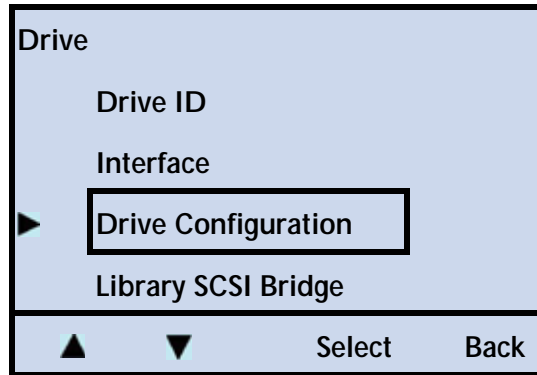

3. Press **Select**.

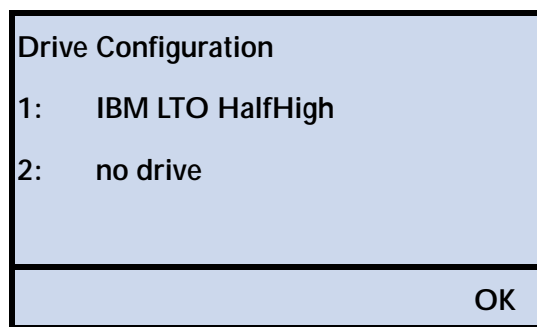

Note: The library lists “no drive” in two cases: 1) Only one half height drive is installed in slot 1, leaving the top slot empty, or 2) a full height drive is installed, leaving no space.

CHANGING THE EMULATION MODE

By default, the library operates in Native emulation mode and returns the product identification, “EXABYTE “, “MAGNUM 224 “ in response to a SCSI INQUIRY command from an application.

If your library software has not yet been certified for the StorageLibrary T24 LTO, you can select an option in [Table 3-3](#), which lists the available emulation modes for the library.

Note: If you change the emulation mode, you will need to reboot your host computer so that it recognizes the new emulation mode.

Table 3-3 Emulation modes for the library

Emulation Mode	Returns this Product Identification in response to an INQUIRY command
Native	The default Product Identification stored in the library’s microcode.
Exabyte 221L	“Exabyte_221L” where each “_” represents an ASCII space character.

Table 3-3 Emulation modes for the library

Emulation Mode	Returns this Product Identification in response to an INQUIRY command
Exabyte EZ17	"Exabyte_EZ17_ _ _ _" where each " _ " represents an ASCII space character.
Exabyte 210	"EXB-210_ _ _ _ _ _ _ _" where each " _ " represents an ASCII space character.


Because most backup applications are certified for one or more of these libraries, changing the emulation mode may allow these applications to support the library.

To change the emulation mode:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Library Settings**.

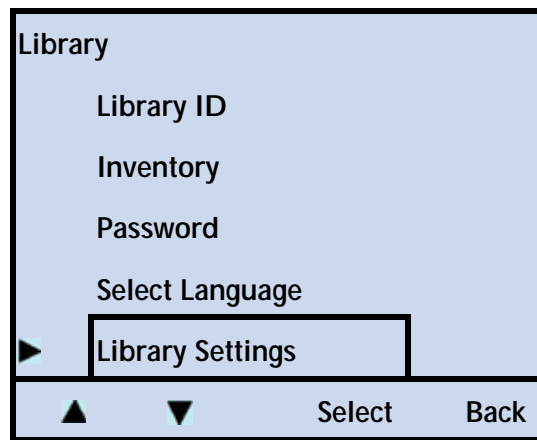


3. Press **Select**, and then press ▼ until the selection arrow (▶) points to **Operation Mode**.

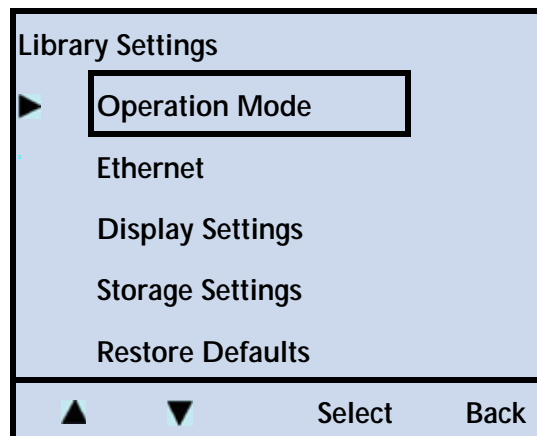


4. Press **Select**, and then press ▼ until the selection arrow (▶) points to **Emulation Mode**.

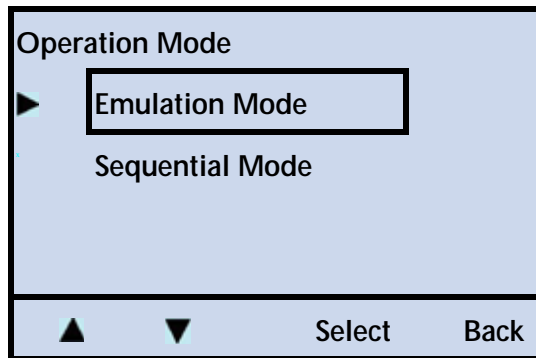


5. Press **Select**, and then press **Modify**.

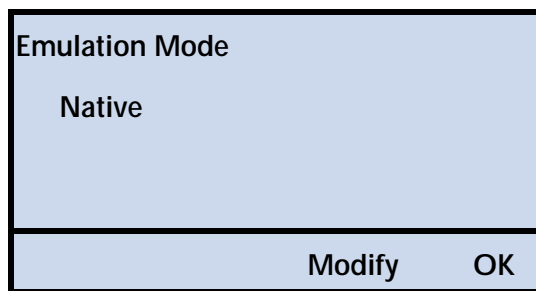

6. Press ▼ until the selection arrow (▶) points to the desired mode, and then press **Select**.

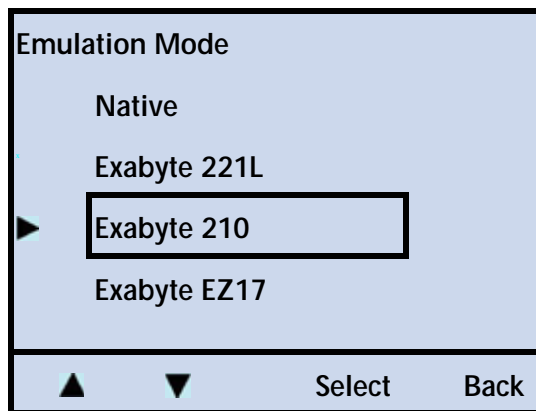

The LCD displays the following screen:

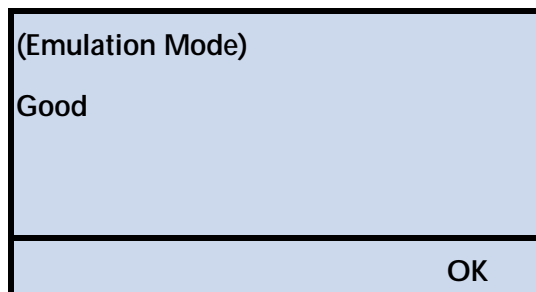

7. Press **OK**.
8. Press **Back** (as needed) to return to the Home screen.

SETTING UP AUTOMATIC TAPE DRIVE CLEANING

The Autoclean option enables the library to automatically perform tape drive cleaning without operator intervention. When Autoclean is enabled, the library monitors the cleaning requirements of the tape drive(s). When a tape drive indicates it needs cleaning, the library loads the cleaning cartridge into the tape drive. After the cleaning cycle is complete, the tape drive unloads and ejects the cleaning cartridge, and the library resumes operation.

! Important If you plan to use automatic cleaning, the cleaning cartridge should be stored in:

- Slot/Cell 2—if the I/E Port is enabled
- Slot/Cell 1—if the I/E Port is disabled

If your backup application has a cleaning option, be sure to turn that option OFF.

Note: You do not have to use the library's Autoclean option to clean the tape drive(s). You can choose from several other cleaning methods, including using your backup application's cleaning function and using commands available through the operator panel. See [page 133](#) for information about these cleaning alternatives.

Setting up automatic tape drive cleaning involves two procedures:

- ▶ [Activating the Cleaning Cartridge Cell](#)
- ▶ [Enabling the Autoclean Option](#)

Activating the Cleaning Cartridge Cell

Activating the cleaning cartridge cell designates the storage location for a cleaning cartridge. Use one of the following options:

- ▶ Slot/Cell 2—if the I/E Port is enabled
- ▶ Slot/Cell 1—if the bottom I/E Port is disabled


Note: The library ships from the factory with the I/E Port enabled. In order to use that slot/cell as the fixed cleaning slot, you need to disable it. See ["Enabling and Disabling the I/E Port"](#) on [page 45](#).

To activate the cleaning cartridge cell:


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).


- Press ▼ until the selection arrow (▶) points to **Cleaning Options**.

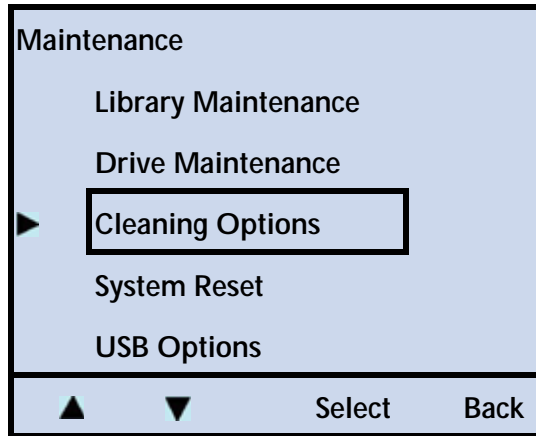


- Press **Select**.
- Press ▲ or ▼ until the selection arrow (▶) points to **Fixed Cleaning Slot**.

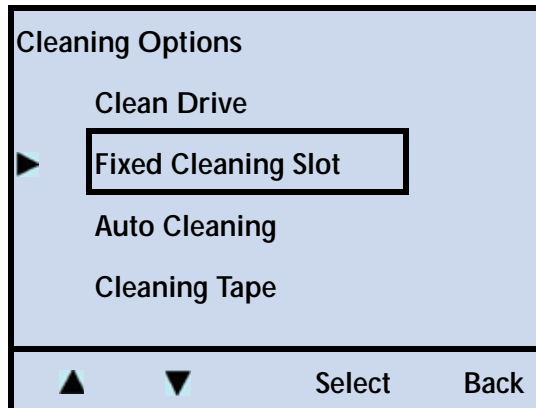

- Press **Select**.

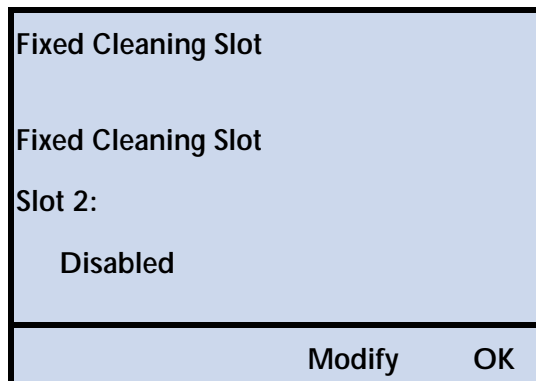

6. Press **Modify**.

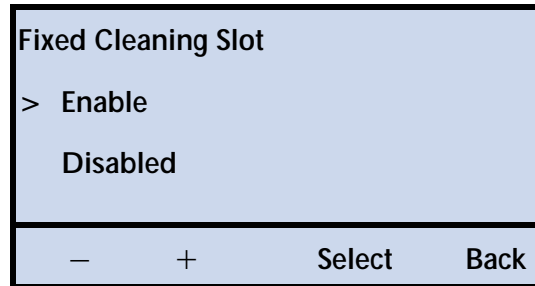

7. Press + or – until the selection arrow (▶) points to *Enable*, and then press **Select**.

8. Press **Back** (as needed) to return to the Home screen.

Enabling the Autoclean Option


After enabling the fixed cleaning slot, you can activate automatic tape drive cleaning by enabling the Autoclean option.

To enable the AutoClean option:


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Cleaning Options**.

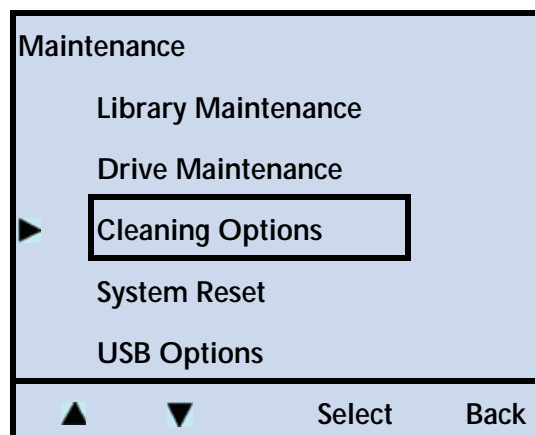


3. Press **Select**, and then press ▲ or ▼ until the selection arrow (▶) points to **Auto Cleaning**.

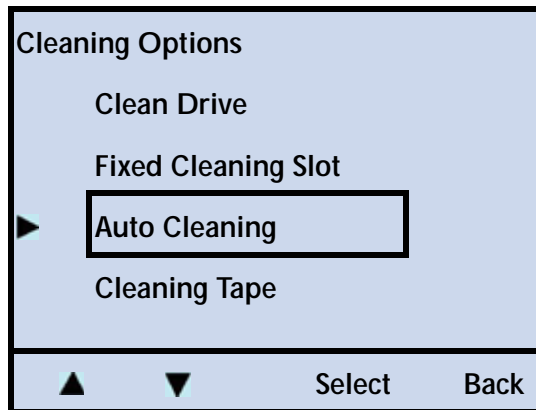


4. Press **Select**.

Note: The Fixed Cleaning Slot must be enabled prior to enabling the Auto Cleaning option.

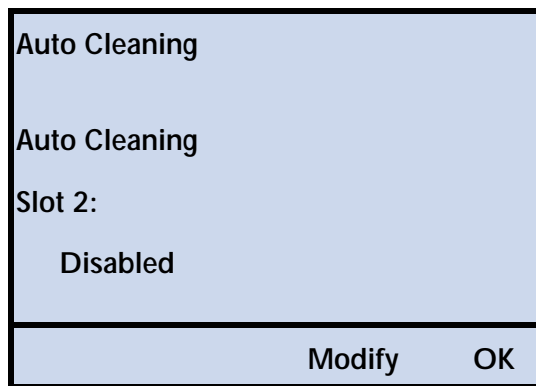

5. Press + or – until the selection arrow (▶) points to *Enable*, and then press **Select**.

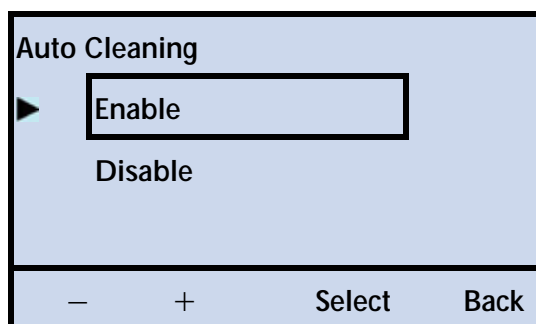

6. Press **OK**.
7. Press **Back** (as needed) to return to the Home screen.

SETTING ETHERNET CONFIGURATION OPTIONS

Table 3-4 Ethernet configuration options

Remote Management Utility	<p>The Remote Management utility allows you to connect to the library's Ethernet interface to remotely monitor operations, upgrade firmware, and create diagnostic listings. See:</p> <ul style="list-style-type: none"> ▪ Connecting the library to Ethernet—page 24 ▪ Using the Remote Management utility—Chapter 4
Ethernet	<p>Configuring the library's Ethernet interface typically involves specifying the library's IP address, subnet mask, and gateway address.</p> <ul style="list-style-type: none"> ▪ IP address—Used to route information from the library to the server. You can choose between dynamic (server-assigned) or static (user-assigned) addressing for the IP address. ▪ Subnet Mask—Used to route information to designated devices within the network. ▪ Gateway address—Allows information to be routed outside the subnet. ▪ MAC address—Displays the Media Access Control address for the library.
Network Addresses	<p>This allows you to select the method used to set the Internet Protocol (IP) address for the library, as follows:</p> <ul style="list-style-type: none"> ▪ Static—The library uses a fixed IP Address, which is assigned in the IP Address option. ▪ DHCP—The library uses an IP address assigned by the network DHCP (Dynamic Host Configuration Protocol) server. This is the default setting for the library (DHCP enabled).

Table 3-4 Ethernet configuration options (continued)

SNMP	<p>If you are using a network-based monitor/management application other than the library's Remote Management utility, you may need to identify the library's Simple Network Management Protocol (SNMP) settings to the application. These settings include:</p> <ul style="list-style-type: none"> ▪ Read community string ▪ Write community string ▪ Broadcast community string ▪ Trap address ▪ Trap port <p>You can view and change these settings only through the library's Remote Management utility. See Chapter 4 for instructions.</p>
FTP Interface	<p>The library also includes an FTP interface that you can use to transfer firmware files or create diagnostic listings. You can:</p> <ul style="list-style-type: none"> ▪ Set up an FTP user name and password for this interface or use the library's defaults ▪ View and change the FTP settings only through the library's Remote Management utility ▪ For instructions, see Chapter 4. <p>For information about accessing the library's FTP interface and using an FTP utility to upgrade firmware or obtain diagnostic listings, see page 187.</p>


Enabling Network Addressing and Setting the Ethernet Addresses

To enable or disable Network addressing:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library Settings**.

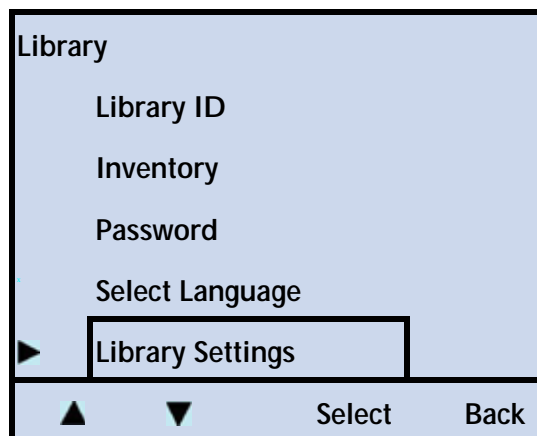

3. Press **Select**.
4. Press ▼ until the selection arrow (▶) points to **Ethernet**.

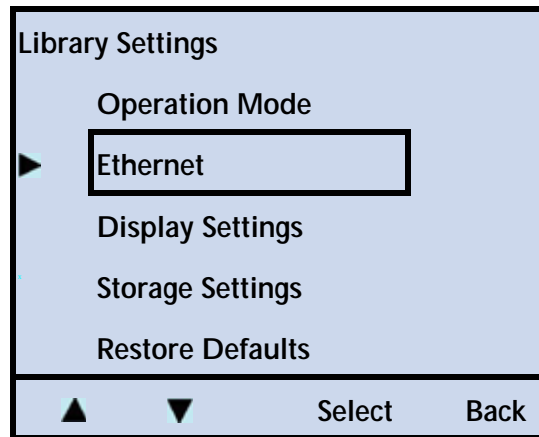


5. Press **Select**.


Changing the DHCP setting

The default setting for the library is DHCP enabled.

1. To change the DHCP setting, press ▲ or ▼ until the selection arrow (▶) points to **DHCP**.

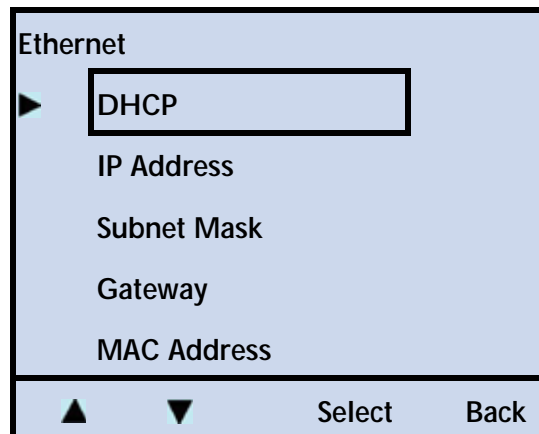

2. Press **Select**.

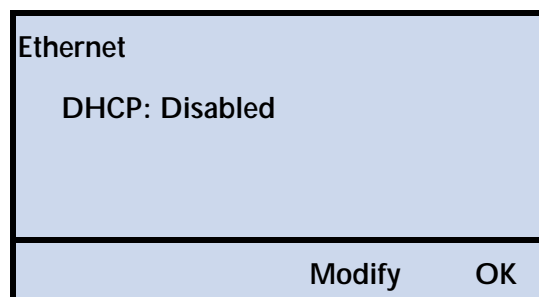

3. Press **Modify**. Press + or – to toggle between Enable and Disable.

Disabling DHCP addressing (assigned by the server) enables Static addressing (a fixed IP address).


! Important Dynamic assignment of the library's IP address may require periodic reinstallation or reconfiguration of some monitoring software applications.

4. Press **Select**.


5. Press **OK**.

Changing the IP Address

1. To change the IP address, press ▼ until the selection arrow (▶) points to **IP Address**.

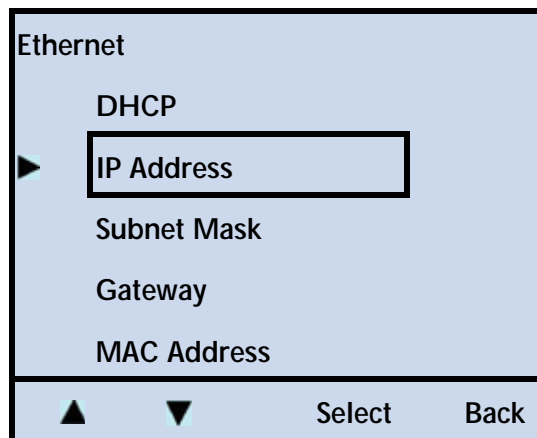

2. Press **Select**.

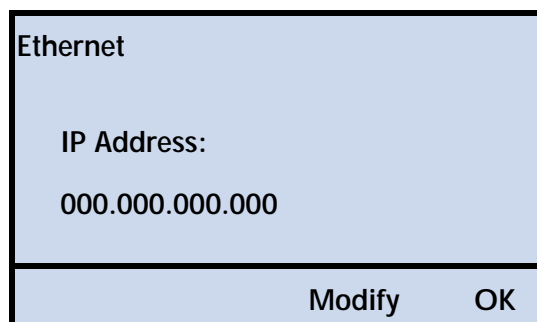

3. Press **Modify**. Press + to increase the value.

Note: Press the + to cycle through all the number choices.


4. Press ▶ to move to the next number.

Repeat steps 4 and 5 to change the remaining values in the address.


5. Press **Done**.
6. Press **OK**.

Changing the Subnet Mask

1. To change the Subnet Mask address, press ▼ until the selection arrow (▶) points to **Subnet Mask**.

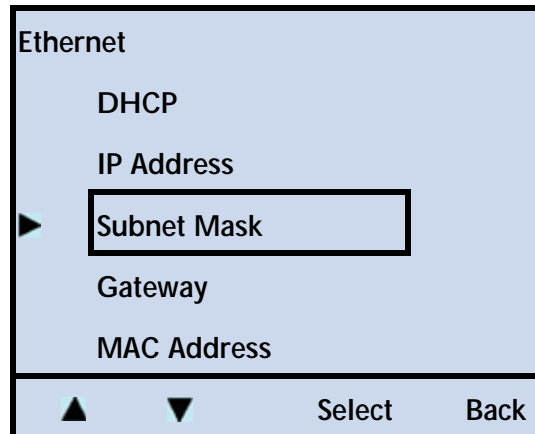

2. Press **Select**.

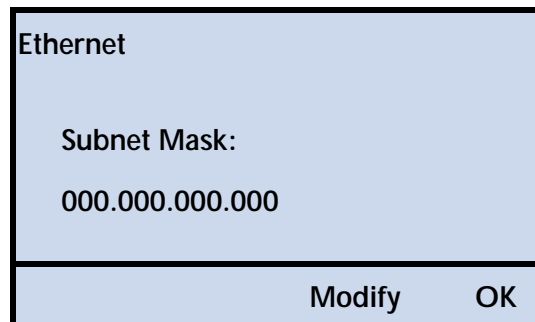

3. Press **Modify**. Press + to increase the value.

Note: Press the + to cycle through all the number choices.


4. Press ▶ to move to the next number.

Repeat steps 4 and 5 to change the remaining values in the address.


5. Press **Done**.
6. Press **OK**.

Changing the Gateway Address

1. To change the Gateway address, press ▼ until the selection arrow (▶) points to **Gateway**.

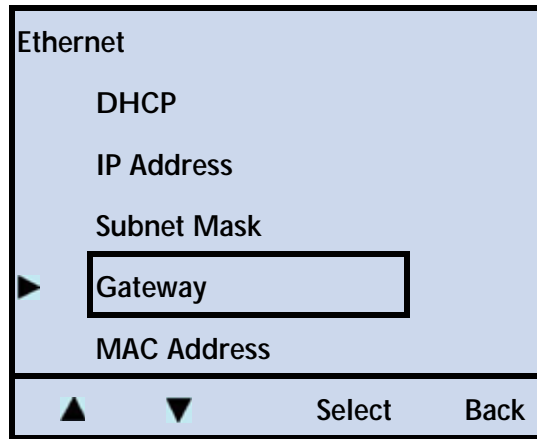

2. Press **Select**.

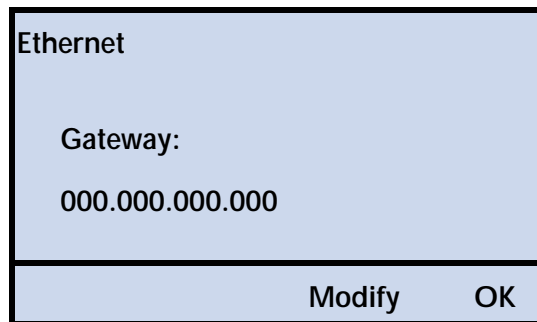

3. Press **Modify**. Press + to increase the value.

Note: Press the + to cycle through all the number choices.


4. Press ▶ to move to the next number.

Repeat steps 4 and 5 to change the remaining values in the address.


5. Press **Done**.
6. Press **OK**.
7. Press **Back** (as needed) to return to the Home screen.

Viewing the MAC Address

1. To view the MAC address, press ▼ until the selection arrow (▶) points to **MAC Address**.

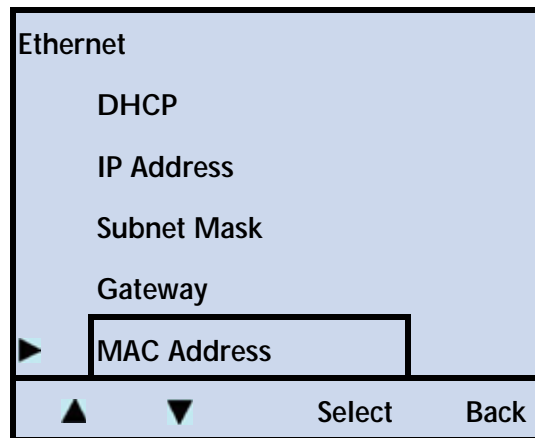

2. Press **Select**.

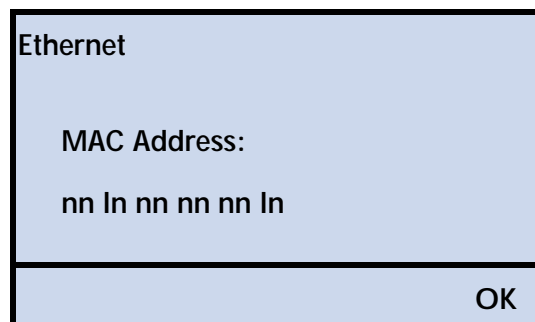

3. Press **OK**.
4. Press **Back** (as needed) to return to the Home screen.

SETTING USB OPTIONS

You can use the library's USB to share the user selectable configurations between libraries. Also see [“Upgrading Library Firmware and Creating Diagnostics \(USB Port\)”](#) on page 190 and [“Upgrading Tape Drive Firmware and Creating Diagnostics \(USB Port\)”](#) on page 194.

To share the configuration settings between libraries, you need to perform these two steps:

- ▶ **Save configuration to USB** —The library writes data to the file shown (CAL3CLON.BIN) that contains the user selectable configuration values (SCSI IDs, I/E Port Enable, Cleaning Cartridge Information, SCSI element addresses, emulation mode, language, password, saved Mode Select data, drive configuration, and so forth).

- ▶ **Get configuration from USB** —Use this option to “clone” the user selectable configurations from a different library. Use this in conjunction with the “Save configuration from USB” option.
 - ▶ The library reads data from the file shown (CAL3CLON.BIN) that contains the user selectable configuration values (SCSI IDs, I/E Port Enable, Cleaning Cartridge Information, SCSI element addresses, emulation mode, language, password, saved Mode Select data, drive configuration, and so forth).
 - ▶ The library then saves those settings to its own non-volatile RAM so that it “clone’s” the device which stored the data. The user selected option will be identical to that original machine.


Saving Configurations

To Save the Configurations to load into a different library:

1. At the Home screen, press **Maint**.


If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **USB Options**.

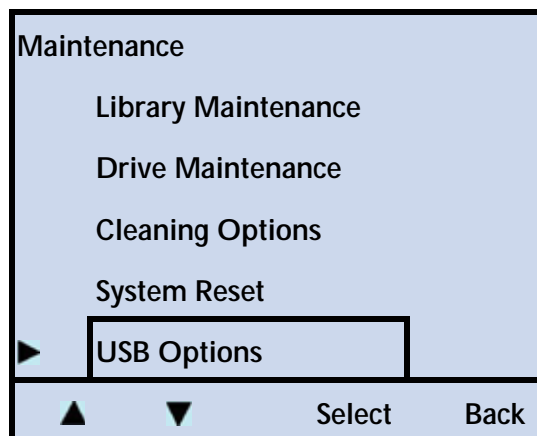


3. Press **Select**.

- Press ▲ or ▼ until the selection arrow (▶) points to **Save Configuration**.

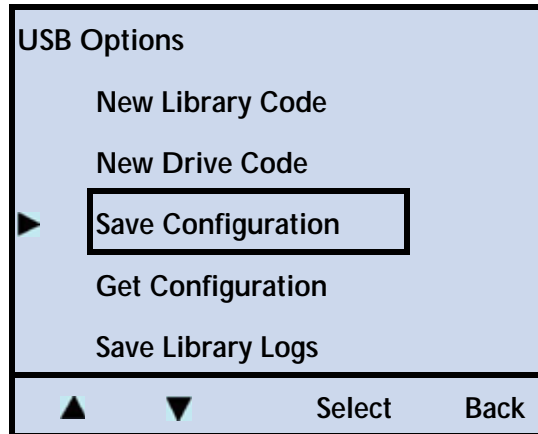

- Press **Select**.

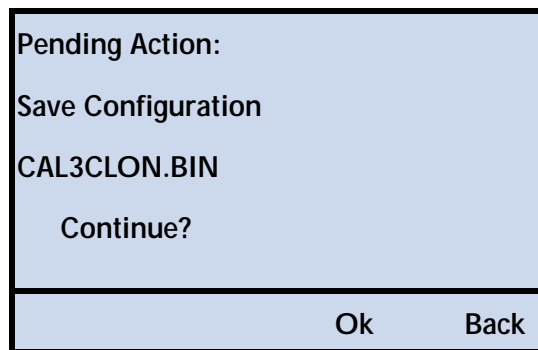

- Press **OK** to continue with the action, or **Back** to cancel the action.
- Press **Back** (as needed) to return to the Home screen.


Getting Configurations

To Get the Configurations from a different library:


- At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).


- Press ▼ until the selection arrow (▶) points to **USB Options**.

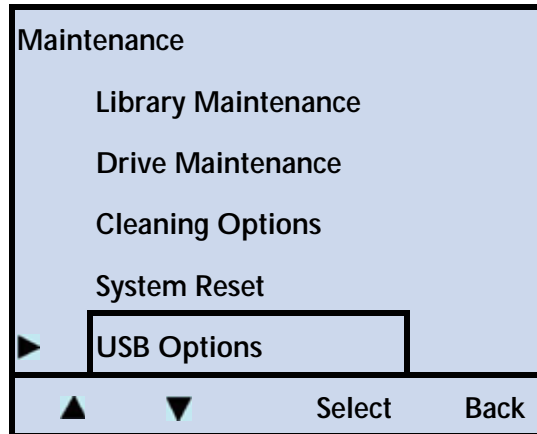

- Press **Select**.
- Press ▲ or ▼ until the selection arrow (▶) points to **Get Configuration**.

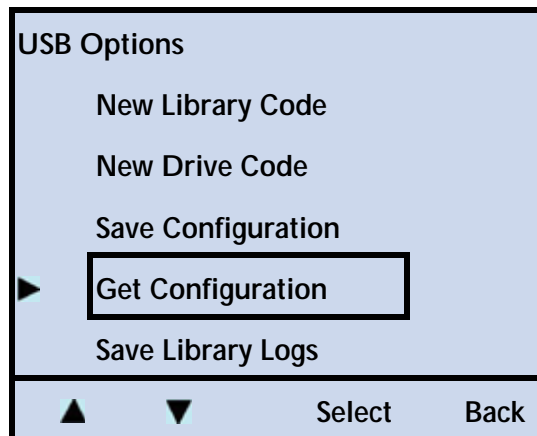

- Press **Select**.

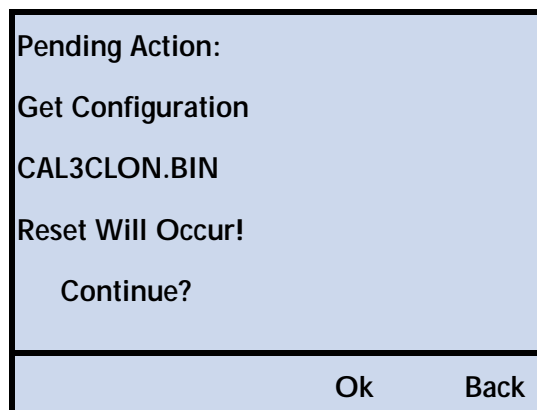

- Press **OK** to continue with the action (and reset the library), or **Back** to cancel the action.

- Press **Back** (as needed) to return to the Home screen.

SETTING UP LIBRARY PASSWORD PROTECTION

To prevent unauthorized users from disrupting library operation, you can set up a password for accessing operator panel menus. When you enable the password, all operator panel functions are prevented. When you press any of the main menu buttons (Move, Lib, Maint, or Drive), the library prompts you for the password.

Note: If you are using the library's Remote Management utility (see [Chapter 4](#)), you can set up a separate password to prevent unauthorized users from using the utility to access the library's configuration settings.

If you forget the password, see ["Getting your password hint"](#) on page 75.


Setting up an operator panel password

To set up a password for the operator panel:


- At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).


- Press **▼** until the selection arrow (**▶**) points to **Password**.

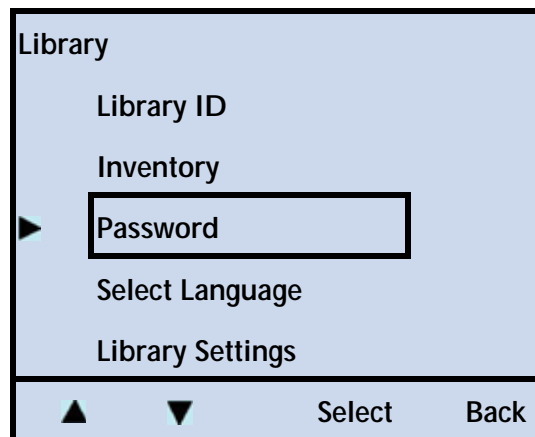

- Press **Select**.

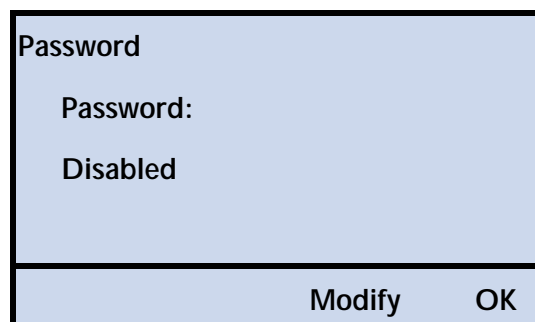

4. Press **Modify**. Press + or – to switch between Enable and Disable.

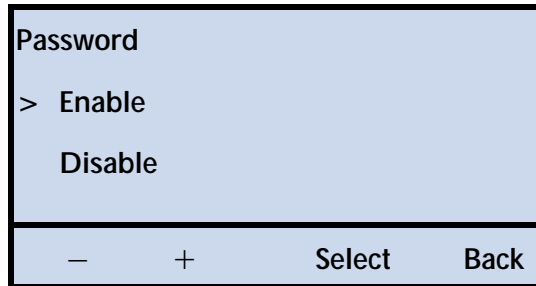


5. With the arrow pointed to **Enable**, press **Select**.

Note: The password can be between 3 and 11 characters long and consists of upper case alphabet letters ("A" to "Z"), lower case alphabet letters ("a" to "z"), and numbers ("0" to "9").

Characters increment as follows:

First	Second	Third	Last
(upper case letters)	(lower case letters)	(numbers)	(blank space) (if the cursor is beyond the third character)
"A" to "Z"	"a" to "z"	"0" to "9"	" "


The blank allows you to truncate the password at the current letter and will remove all characters beyond that point. If you continue to press " + ", the characters will begin again at "A" (upper case A).

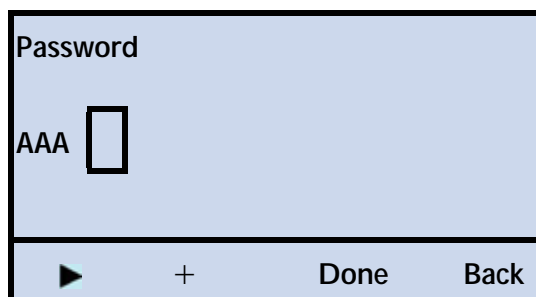

6. Press + to increase the letter (the library starts at "A").
7. Press (▶) to move to the next field and repeat step 8.


Pressing the (▶) button scrolls the cursor through the current letters of the password, including an extra "blank" character at the end, which allows you to add to the length of the password. Scrolling beyond the end of the password causes the cursor to wrap to the first character of the password.

This screen shows an example of a password using upper and lower case letters and numbers.

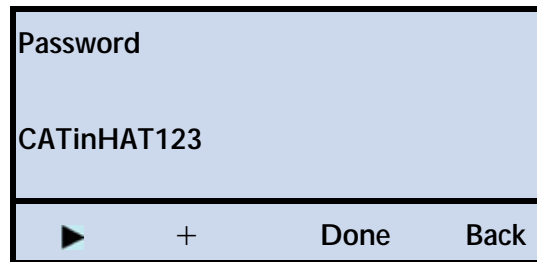

8. Press **Done** to accept the change, or press **Back** to reject the change.

Once you enable the password, a padlock icon appears in the upper right screen to show that the operator panel is password protected.

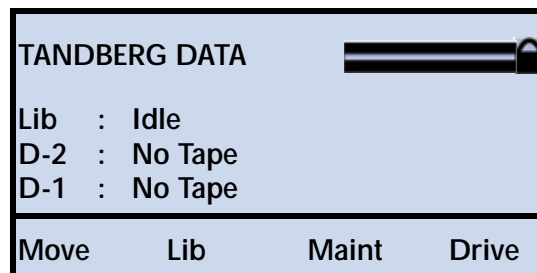


9. Press **Back** (as needed) to return to the Home screen.

When password protection is in effect, you must enter the password before you can use the operator panel menus. Each time you return to the Home screen and press a different button, password protection is re-activated; you must enter the password again to access the menus.

Accessing password protected operator panel menus

If you need to gain access to the operator panel menus, but want password protection to remain in effect, follow these steps:

1. At the Home screen, press the mode you need to access. The following screen appears.

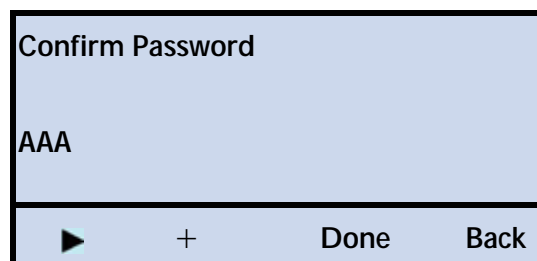

2. Enter the operator panel password by following the steps on [page 72](#).

If you forget your password, see [“Getting your password hint” on page 75](#).

3. Press **Done**. If you entered the correct password, the library displays the screen you requested.


Disabling the operator panel password

To turn off password protection for the operator panel:


1. At the Home screen, press **Lib**.
2. Enter the operator panel password (see [page 73](#)).

If you forget your password, see [“Getting your password hint” on page 75](#).


3. Press ▼ until the selection arrow (▶) points to **Password**.

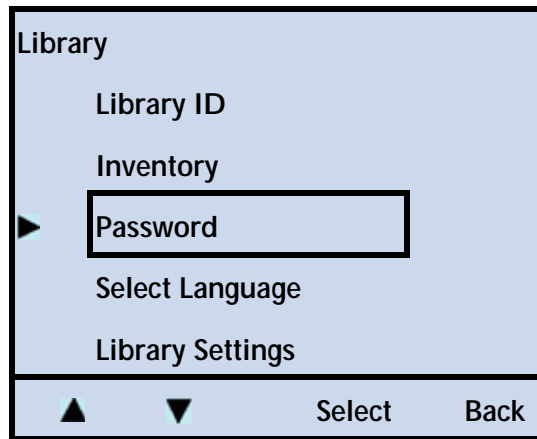

4. Press **Select**.

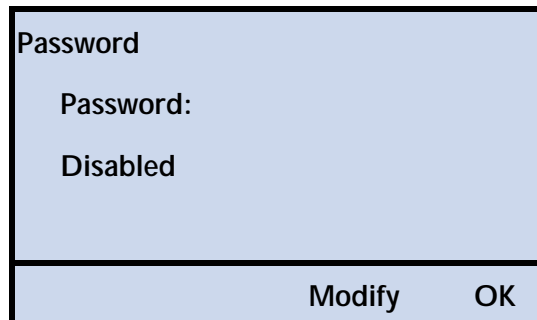

5. Press **Modify**. Press + or – to switch between Enable and Disable.

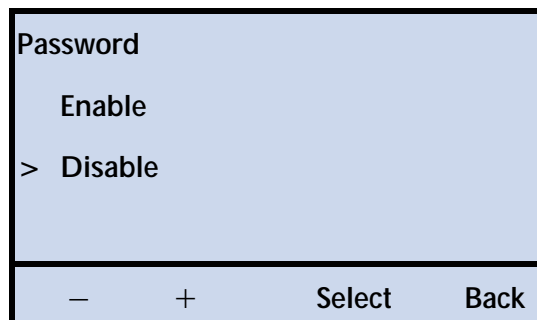


6. With the arrow pointed to **Disable**, press **Select**.
7. Press **OK**.
8. Press **Back** (as needed) to return to the Home screen.

Getting your password hint


In case you forget your password, you can get a password hint. Once you get the hint, contact Technical Support and give them the hint. They will provide the password.

When you try to access any screen, and the password is enabled, the library will prompt you to enter the password. From this point, follow these steps:

1. Hit the **Back** button, and the following screen appears:

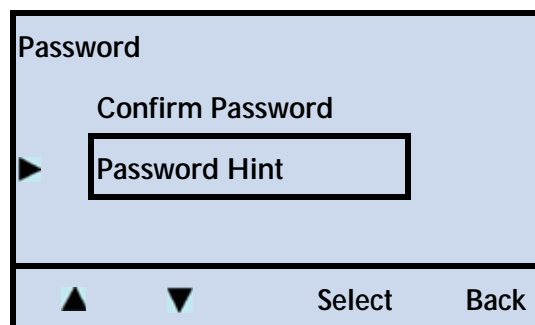

2. Press ▼ until the selection arrow (▶) points to **Password Hint**.
3. Press **Select**.

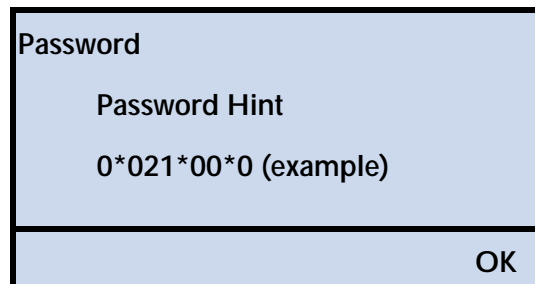

4. Copy down the password hint and contact Technical Support (see www.tandbergdata.com). They will provide you with your password.

RESTORING THE DEFAULT CONFIGURATION

If necessary you can return all of the library configuration settings to their default values.


! Important When you use this option all changes that you previously made to any of the library's configuration settings are lost.

To restore the default configuration values:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Library Settings**.

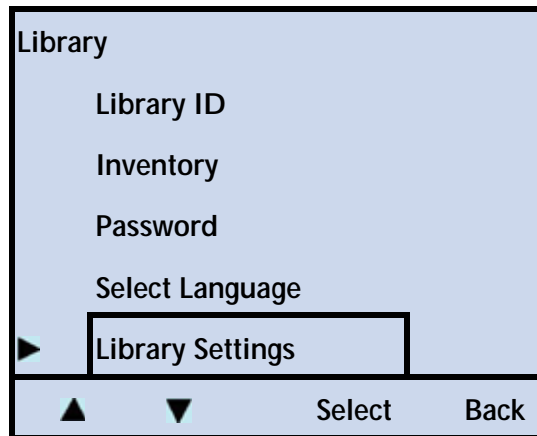

3. Press **Select**.
4. Press ▼ until the selection arrow (▶) points to **Restore Defaults**.

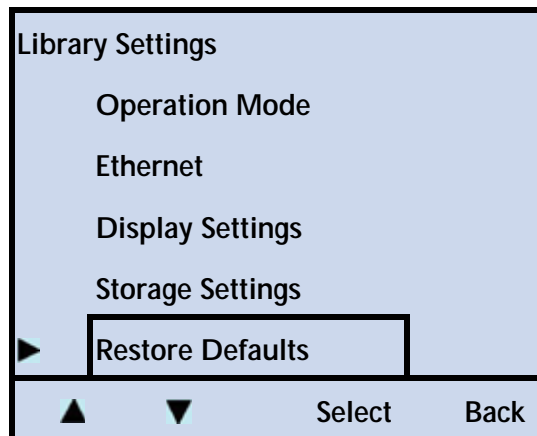

5. Press **Select**. The following screen appears.

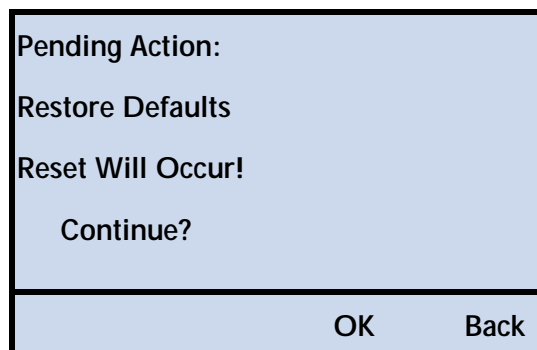

Note: This action will reset the library, which will re-boot the system.

6. Press **OK** to reset the library, or **Back** to cancel the action.

After approximately five seconds, the library resets itself.

CHECKING THE SETUP

After configuring the library, check the setup by performing the exercises suggested below. While these exercises are not required, it is a good idea to verify that your software and hardware are properly communicating before you begin operation.

- ▶ Import several cartridges into the library, and load and unload cartridges into the tape drive or tape drives (see [page 130](#)).
- ▶ Run a system demo (see [page 185](#)).
- ▶ If you have not already done so, install the backup application on the host computer. Instruct the software to load and unload one or more cartridges in the tape drive(s). This helps determine whether the software and library are communicating properly.
- ▶ Back up several megabytes of data with the tape drive(s) and perform a comparison check on the backed-up data. This determines whether the software and tape drive are communicating properly.

If the library and tape drive are not operating as expected:

- ▶ See [Chapter 8](#) for troubleshooting tips
- ▶ See [Appendix E](#) for error message descriptions

If you cannot resolve the problem yourself, contact Technical Support (see [page iii](#)).

NOTES

4

USING THE REMOTE MANAGEMENT UTILITY

The library's Remote Management utility (RMU) allows you to set configuration options, view library and tape drive information, and monitor operation across an Ethernet network. You can access the RMU using a standard web browser.

NOTICE—The functions described in this chapter are subject to change.

This chapter explains how to access the Remote Management utility and describes the configuration options and information available through the utility. If you plan to use the utility, refer to this chapter in conjunction with [Chapter 3 – Configuring the Library](#).

To view this information...	go to...
Home Page (Viewing the Home page)	page 81
Configuration (Setting Configuration options)	page 89
Statistics (Viewing information on the Statistics page)	page 99
Tools (Using the Utility's Tools)	page 103

ACCESSING THE REMOTE MANAGEMENT UTILITY

To access the library's RMU:

1. Connect the library to your Ethernet network as described on [page 24](#).
2. If not already powered on, power on the library as described on [page 25](#).
3. Use the library's operator panel to set up the Ethernet interface as described on [page 61](#). Make a note of the library's IP address.

Note: If you set DHCP on, you can view the current server-assigned IP address for the library through the Status menu (see [page 144](#)).

4. Launch your web browser, enter the library’s IP address in the following format: `http://IP address` and press **Enter**.

The utility’s Home page appears.



Figure 4-1 RMU–Home page

NOTES:

Navigation tip – To help you more easily navigate, the screen that you are currently viewing is indicated by italics. For example, in Figure 4-1, both the *Home* and *Info* text is in italic font.

Quick links – Click on these links from any page:

Click this Link...	for quick access to this location...
Home, Configure, Statistics, and Tools	Library and tape drive options and information
Tandberg Data Logo	Tandberg Data’s web site at www.tandbergdata.com
Product Image	The utility’s Home screen page

Magazine configuration – The left magazine is optional in some configurations. With this configuration, the library ships with the right magazine installed and a “blank” installed in the left magazine’s location.

Tape drive configuration – You can configure your library for the following tape drive configuration options:

- One half height LTO-2, LTO-3, LTO-4, or LTO-5 tape drive
- Two half height LTO-2, LTO-3, LTO-4, or LTO-5 tape drives
- One full height LTO-3 tape drive
- One full height LTO-4 tape drive

VIEWING THE HOME PAGE

This is the “home page” for the utility. The Home page provides information in four sections. See [Figure 4-1](#) to view the Home page.

- ▶ Library Information (Home/Info) – shown in [Figure 4-1](#)
- ▶ Library Status (Home/Status) – shown in [Figure 4-2](#)
- ▶ Tape Drive Status (Home/Status) – shown in [Figure 4-2](#)
- ▶ Inventory (Home/Inventory) – shown in [Figure 4-4](#)

LIBRARY INFORMATION PAGE–SCSI CONFIGURATION

Library SCSI Information

Device	Vendor ID	Product ID	Serial Number	Firmware Rev	SCSI ID:LUN
Library	EXABYTE	MAGNUM 224	000089002516	C221	3:1
Drive	HP	Ultrium 3-SCSI	HU10623ER8	D217	3:0
Drive	HP	Ultrium 2-SCSI	HU10547PA2	S53U	4:0

The library information page (the Home page) provides this information:

Device

This shows the library and tape drive or tape drives installed (the above screen shows two Hewlett Packard LTO tape drives installed). The library is configured for:

- ▶ One or two LTO-2 half height (HH) tape drive(s)
- ▶ One or two LTO-3 half height (HH) tape drive(s)
- ▶ One or two LTO-4 half height (HH) tape drive(s)
- ▶ One or two LTO-5 half height (HH) tape drive(s)
- ▶ One LTO-3 full height (FH) tape drive
- ▶ One LTO-4 full height (FH) tape drive

Vendor

This shows the manufacturer of the product.

Product

This shows the identification for the library and tape drive(s).

Serial Number

This lists the serial numbers of the individual devices.

Firmware Revision

This shows the firmware revision of each device installed – the library and tape drive(s).

SCSI ID:LUN

This shows the SCSI ID for the tape drive(s) and the library.

LIBRARY INFORMATION PAGE—FIBRE CHANNEL CONFIGURATION

Library SCSI Information

Device	Vendor ID	Product ID	Serial Number	Firmware Rev	WWNN
Library	EXABYTE	MAGNUM 224	000089004156	C221	200100d08051bdec
Drive	IBM	ULTRIUM-TD4	1310000865	74H6	5005076312019dea

WWNN

This shows the number for the World-Wide Node Name, which is the unique identifier of the device in a Fibre Channel network environment.

Notes: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive. The library appears as LUN 1 on the same SCSI ID as the tape drive.

For additional information, see:

The tape drive's *Product Manual* for tape drive information.

Automation/Drive Interface - Command (ADC) for ADI information.

LIBRARY AND TAPE DRIVE STATUS PAGE

At the bottom of the Status page is an Update button that refreshes the information on the page. An option for automatically refreshing the page is also available. Check this option to have the information refreshed approximately every 6 seconds.

The information available on the Status page is shown in the following figure and described below.

TANDBERG DATA
Securing your Information

Home
Info
Status
Inventory
Configure
Statistics
Tools

Library Status

Item	Status
Motion:	Idle
Robot Status	Alive
Intervention Required:	NO
Robot Control Mode:	Random
I/E Port	Locked
Right Magazine	Locked
Left Magazine	Locked
Library Temperature	Normal: 28/82°
Clean	No Clean Slot

Tape Drive Status


Element ID	Status
81	No Tape

Status window button → Click for **Status in a Window**

Refresh update buttons (manual and automatic) → Automatically refresh library status

Figure 4-2 RMU–Library and Tape Drive Status

If desired, you can click the Status Window button to open a separate Status window. [Figure 4-3](#) shows an example of a stand-alone Status window.

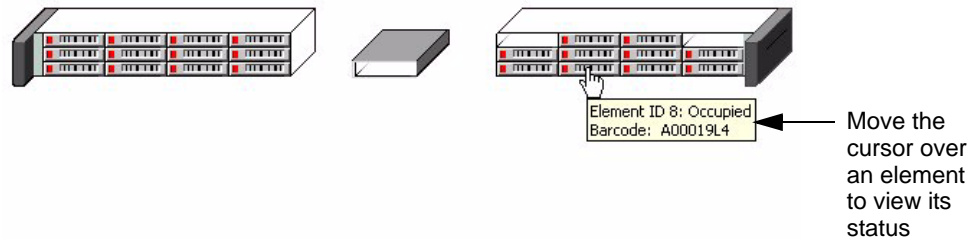

Library Status

Item	Status
Motion:	Idle
Robot Status	Alive
Intervention Required:	NO
Robot Control Mode:	Random
I/E Port	Locked
Right Magazine	Locked
Left Magazine	Locked
Library Temperature	Normal: 28/82°
Clean	No Clean Slot

Tape Drive Status

Element ID	Status
81	No Tape

Figure 4-3 RMU-Status window

Motion

This indicates if the robot is active (moving a cartridge) or idle.

Robot Status

This indicates if the robot has an error. See [Appendix E, Error Messages](#) for help troubleshooting errors.

Intervention Required

This indicates if you need to intervene. See [Appendix E, Error Messages](#).

Robot Control Mode

This indicates the control mode—Random or Sequential.

I/E Port

This indicates if the I/E Port is locked or unlocked. See [“Enabling and Disabling the I/E Port” on page 45](#) for instructions on how to lock and unlock the I/E port.

Right Magazine

This indicates if the right magazine is locked or unlocked. See [“Loading Cartridges into a Magazine” on page 120](#) for instructions on how to lock and unlock the magazines.

Left Magazine

This indicates if the left magazine (if present) is locked or unlocked. You can operate the library with one or two magazines (the second magazine is optional). You can also limit the number of slots visible to the SCSI interface for compatibility with backup software. See [“Setting the Data Cartridge Slot Count” on page 43](#)

Library Temperature

This indicates if there is a problem with the library’s temperature. See [“Over Temperature” on page 253](#) for the corrective action for an over temperature condition.

Auto Clean

This indicates if Auto Clean is turned on or off. See [“Setting Up Automatic Tape Drive Cleaning” on page 57](#) to determine if you want this function enabled or disabled.

Clean

This indicates if a “fixed” cleaning slot has been set. Use this function in conjunction with the Auto Clean option. See [“Setting Up Automatic Tape Drive Cleaning” on page 57](#) for instructions on how to set a fixed cleaning slot.

Cleans Remaining

This indicates the number of cleanings remaining on the cleaning cartridge. See [“Check the Cleaning Cartridge Status” on page 134](#) for additional information.

Notes: The cleaning count information is stored in the cartridge, so it must be used once to “start” the count. Until it is used the first time, the utility displays an “unknown” status.

The utility only displays the count if it is known.

If there is no barcode label on the cleaning cartridge, a power cycle causes the cleaning count information to be lost. If there is a barcode label on the cleaning cartridge, the library stores the information and recognizes it after a power cycle.

Element ID

Indicates the element address of the tape drive. Element addresses (indexes) identify locations within the library that can accept a cartridge. The library has three tape drive configuration options.


Tape Drive Status

Element ID	Status
81	No Tape
82	No Tape

Tape drive style	Location	Element Address
Single full height	Default	81
Second half height	Top	82
Single half height	Bottom	81

Status

Indicates whether the tape drive is active (tape motion is occurring) or inactive.

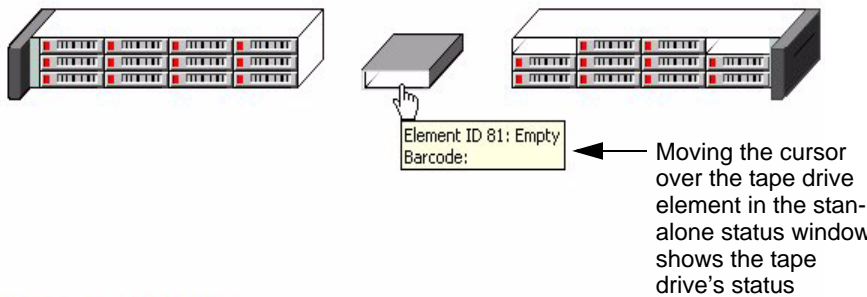

Library Status

Item	Status
Motion:	Idle
Robot Status	Alive
Intervention Required:	NO
Robot Control Mode:	Random
I/E Port	Locked
Right Magazine	Locked
Left Magazine	Locked
Library Temperature	Normal: 28/82°
Clean	No Clean Slot


Tape Drive Status

Element ID	Status
81	No Tape

INVENTORY

The Inventory section provides information from the library's cartridge inventory. The library maintains a cartridge inventory to keep track of where cartridges are located. An inventory is automatically performed each time the library is powered on, each time a cartridge is inserted or removed from the library, and each time a magazine is inserted into the library. In performing an inventory, the library checks for cartridges in the cells and scans each cartridge's bar code label.

Note: You can move the cursor over any inventory location to view that location's status.

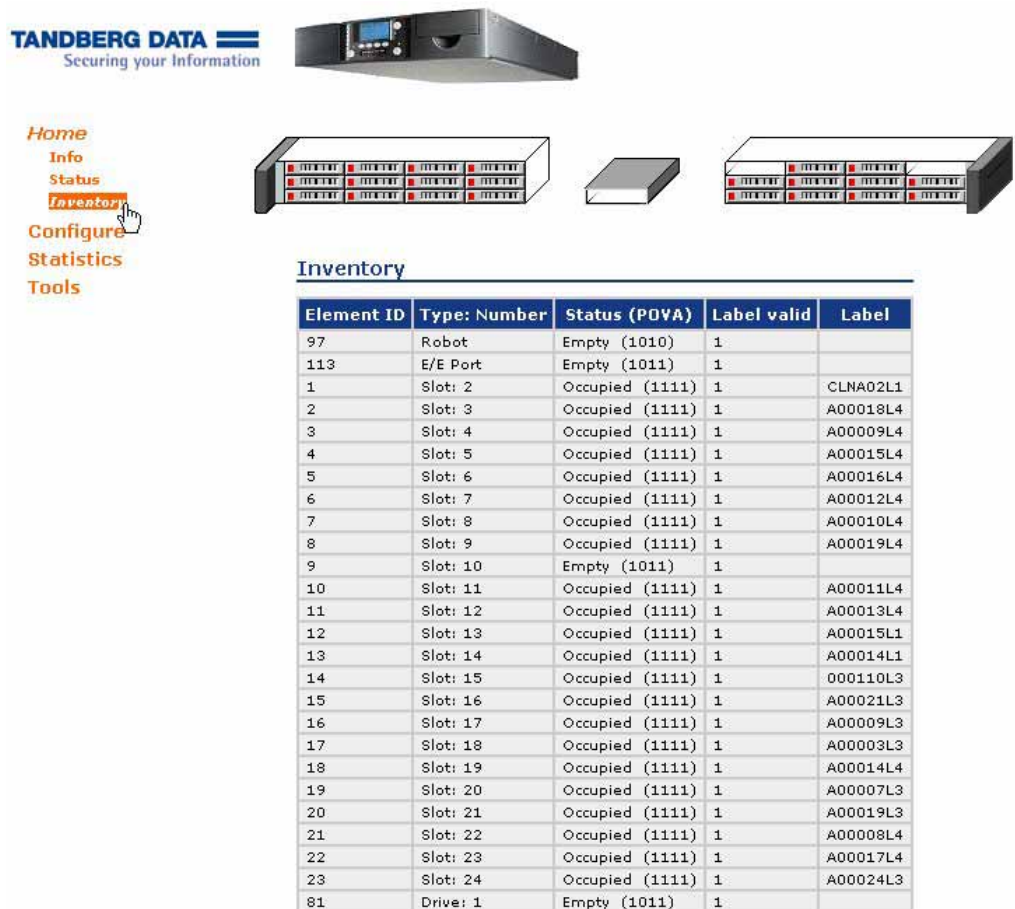

The screenshot shows the RMU-Inventory page. At the top left is the Tandberg Data logo with the tagline "Securing your Information". Below the logo is a navigation menu with options: Home, Info, Status, **Inventory** (highlighted with a mouse cursor), Configure, Statistics, and Tools. To the right of the menu are three images: a top-down view of a server rack, a single cartridge, and a side view of a server rack. Below the images is the "Inventory" table.

Element ID	Type: Number	Status (POVA)	Label valid	Label
97	Robot	Empty (1010)	1	
113	E/E Port	Empty (1011)	1	
1	Slot: 2	Occupied (1111)	1	CLNA02L1
2	Slot: 3	Occupied (1111)	1	A00018L4
3	Slot: 4	Occupied (1111)	1	A00009L4
4	Slot: 5	Occupied (1111)	1	A00015L4
5	Slot: 6	Occupied (1111)	1	A00016L4
6	Slot: 7	Occupied (1111)	1	A00012L4
7	Slot: 8	Occupied (1111)	1	A00010L4
8	Slot: 9	Occupied (1111)	1	A00019L4
9	Slot: 10	Empty (1011)	1	
10	Slot: 11	Occupied (1111)	1	A00011L4
11	Slot: 12	Occupied (1111)	1	A00013L4
12	Slot: 13	Occupied (1111)	1	A00015L1
13	Slot: 14	Occupied (1111)	1	A00014L1
14	Slot: 15	Occupied (1111)	1	000110L3
15	Slot: 16	Occupied (1111)	1	A00021L3
16	Slot: 17	Occupied (1111)	1	A00009L3
17	Slot: 18	Occupied (1111)	1	A00003L3
18	Slot: 19	Occupied (1111)	1	A00014L4
19	Slot: 20	Occupied (1111)	1	A00007L3
20	Slot: 21	Occupied (1111)	1	A00019L3
21	Slot: 22	Occupied (1111)	1	A00008L4
22	Slot: 23	Occupied (1111)	1	A00017L4
23	Slot: 24	Occupied (1111)	1	A00024L3
81	Drive: 1	Empty (1011)	1	

Figure 4-4 RMU-Inventory page

SCSI Address

This indicates the element address. Element addresses identify locations within the library that can accept a cartridge. The addresses are defined as follows:

- ▶ **Slots**—Addresses 1 through 24 represent magazine slots for the library.

- ▶ The slot numbers begin with the right magazine and continue with the left magazine.
- ▶ The storage cells decrease or increase based on the I/E Port setting (enabled or disabled). Disabling the I/E Port increases the storage cell count. See “[Enabling and Disabling the I/E Port](#)” on page 45.
- ▶ **Tape Drives**—The addresses for the tape drives are defined as follows:

Tape drive style	Location	Element Address
Single full height	Default	81
Second half height	Top	82
Single half height	Bottom	81

Type: Number

This indicates the type of the address (I/E port, slot, or tape drive).

Status

This indicates the status (POVA) of the address, as follows:

Information	Letter or Number	Definition
Status (POVA)	“P”	Slot Present
	“O”	Slot Occupied
	“V”	Slot Occupied and Valid
	“A”	Slot Accessible
Label Valid	1	Yes
	0	No

Label Valid

Indicates whether the bar code label information for the element is considered valid (1) or questionable (0). The bar code label information is considered questionable if the library had a problem reading the label.

Label

If the element contains a cartridge, this field provides the bar code label information for the cartridge. If the cartridge does not contain a bar code label, it shows the cell number (the same as the address).

This field also indicates the type of data cartridge (L1=LTO-1, L2=LTO-2, L3=LTO-3, L4=LTO-4, and L5=LTO-5). [Table 5-1 on page 115](#) provides data cartridge compatibility.

SETTING CONFIGURATION OPTIONS

Click on Configure at the top of the page to view the Configuration page. [Figure 4-5](#) shows an example of the Configuration page.

From the Configuration page, you can change settings in the following sections:

- ▶ Change library configuration and operation modes
- ▶ Change front panel and Web access password
- ▶ Change the background color of the utility
- ▶ Change the tape drive cleaning options
- ▶ Change Ethernet configuration
- ▶ Establish a “hint” in case you forget your password

To enact changes you make on the Configuration page, enter the password (if you previously set one) in the Web Access Password field, and click the Update button below the fields. A confirmation message appears. Click on the link provided or the product name to return to the Status page.



Figure 4-5 RMU-Configuration home page

CHANGING LIBRARY CONFIGURATIONS

You can change the following settings:

SCSI ID (SCSI version)

You can change the SCSI IDs for the tape drive(s) if they conflict with other devices on the SCSI bus. See [page 49](#) for more information about SCSI IDs.

Notes: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive. The library is shown as LUN 1 of the tape drive's SCSI ID.

For additional information, see:

The tape drive's *Product Manual* for tape drive information.

Automation/Drive Interface - Command (ADC) for ADI information.

SCSI Bridge

If you have two tape drives installed in the library, you can assign one of them to act as the primary SCSI interface (bridge) for the library. If you have only one tape drive installed, it automatically acts as the SCSI bridge.

- ▶ **SCSI configuration**—to change the SCSI bridge assignment, click the radio button to the right of the tape drive and click Update.

Change SCSI ID

Library SCSI ID:	<input type="text" value="3"/>	Surrogate
Drive 1 SCSI ID:	<input type="text" value="3"/>	<input type="radio"/>
Drive 2 SCSI ID:	<input type="text" value="4"/>	<input checked="" type="radio"/>

- ▶ **Fibre Channel configuration**—to change the SCSI bridge assignment, click the radio button to the right of the tape drive and click Update.

Change SCSI ID

Library WWNN:	<input type="text" value="200100d08051bdec"/>	Surrogate
Drive 1 WWNN:	<input type="text" value="5005076312019dea"/>	<input checked="" type="radio"/>

Once you click the Update button and you receive the following confirmation message, you need to reset the library.

Configuration Change Results

SCSI ID(s) updated.

You will need to Power Cycle or Reset the Library now.

New configuration saved.

- ▶ See [“Advanced” on page 111](#) for instructions on how to reset the library.
- ▶ See [“Tape Drive SCSI Interface \(Library Bridge\)” on page 52](#) to set the SCSI bridge from the front panel.

Panel

If desired, you can use the RMU to change the password that protects access to the library’s menus from the front panel.

To set or change this password:

1. Enter a new password in the “New Front Panel Access Password” field. See [page 71](#) for more information about password protecting the front panel menus, including length restrictions.
2. Re-enter the new password in the “Confirm New Access Password” field.
3. If you are changing an existing password, enter the current password in the “Current Access Password” field.

To cancel an existing password, enter the current password in the “Current Access Password” field and leave the “New Front Panel Access Password” and “Confirm New Access Password” fields blank.

Note: The library's front panel access password is separate from the web access password (WAP). The front panel password limits actions from the front panel. The web access password prevents using the RMU (see [page 97](#) for more information about the WAP).

Mode

You can configure two library modes: Emulation and Control.

Change Library Emulation and Control Modes

Emulation Mode:

Native

Exabyte 221L

Exabyte 210

Exabyte EZ17

Control Mode:

Random

Sequential Loop: Restart:

Update

▶ **Emulation**—If your backup software has not yet been certified for the StorageLibrary T24 LTO, you can set the library to emulate one of these Tandberg Data products:

- ▶ Exabyte 221L
- ▶ Exabyte 210 library
- ▶ Exabyte EZ17 autoloader

Because most backup applications are certified for these products, changing the emulation mode may allow these applications to support the library. See [page 54](#) for more information about emulation modes.

- ▶ **Control (operation mode)**—You can operate your library in either Random mode or Sequential mode.

Mode	Description
Random (the default)	Use this mode with an application that controls the library.
Sequential	Only use this mode if you plan to operate the library without a backup application. In Sequential mode, the library automatically processes cartridges in sequential order without direction from an application. See page 124 for information about setting the library to operate in Sequential operation from the front panel.

! Important If you are using a backup application that is capable of controlling the library, do *not* configure the library to operate in Sequential mode.

You can also set the restart and loop options as follows:

- ▶ **Restart option**—Determines what the library does after it is reset, power cycled, or when a magazine has been re-inserted.

Mode	Description
Enabled	The library restarts at the beginning of the cartridge sequence.
Disabled	The library resume where it left off when the interruption occurred.

- ▶ **Loop option**—Determines what the library does after it has finished processing the last cartridge in the sequence.

Mode	Description
Enabled	The library loops back to the first cartridge in the sequence and begins processing the cartridges again.
Disabled	The library stops and waits for operator intervention. Operator intervention typically means removing cartridges for storage and inserting new cartridges.

Skin

This option allows you to change the background color of the utility.

Change WEB Skin Selection

Skin Selections:

- Default
- Fujitsu Siemens
- Yellow
- Blue
- Jamaica
- Red
- Tan
- Black

Update

Cleaning

The Autoclean option enables the library to automatically perform tape drive cleaning without operator intervention.

Change Tape Cleaning Configuration

Fixed Cleaning Slot Enabled:

Auto Clean On:

Update

Cleaning the tape drive(s):

- ▶ **Via the RMU**—To set automatic cleaning with the RMU:
 - a. Enable the cleaning slot via the front panel (see [page 57](#)).
 - b. Load a cleaning cartridge into the library.
 - Slot/Cell 2—if the I/E Port is enabled (the factory default setting)
 - Slot/Cell 1—if the I/E Port is disabled
 - c. Toggle the Auto Clean On button (a check mark appears).

d. Click the Update button.

► **Via the front panel**—See [page 57](#) for information about using the front panel to set the Autoclean option.

See “[Check the Cleaning Cartridge Status](#)” on [page 134](#) for information about the cleaning cartridge “count” (number of cleanings remaining).

CHANGING ETHERNET CONFIGURATIONS

You can change the following settings:

NET

This option allows you to change the Ethernet addresses.

Setting ^a	Description
Static IP	If you are using static addressing (DHCP off), specify the values for this address. If you are using dynamic addressing, specify 0 for this address.
Subnet Mask	If you are using static addressing (DHCP off), specify the values for this address. If you are using dynamic addressing, specify 0 for this address.
Gateway	If you are using static addressing (DHCP off), specify the values for this address. If you are using dynamic addressing, specify 0 for this address.
DHCP	If you are using dynamic addressing (DHCP on), this field indicates the IP address. The default setting for the library is DHCP enabled. Note: If the DHCP address changes during your session, you will need to check the new address on the library’s LCD (see page 144) and re-direct your browser to the new address.

^a To change these settings via the front panel, see “[Setting Ethernet Configuration Options](#)” on [page 61](#).

SNMP

If you need to identify the library’s SNMP settings to an application, you can view the settings and change them, if desired.

Both the SNMP System Name and SNMP System Location are displayed on the Home page.

Change SNMP Configuration

SNMP Community String:	<input type="text" value="public"/>
SNMP Trap Address:	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
SNMP System Name:	<input type="text" value="Name"/>
SNMP System Location:	<input type="text" value="Location"/>
SNMP System Contact:	<input type="text" value="Contact"/>

FTP

If you plan to use the library's FTP interface to upgrade firmware or obtain diagnostic listings, you can view the default FTP User Name and change it, if desired.

Change FTP Configuration

FTP User Name:	<input type="text" value="anonymous"/>
FTP Password:	<input type="password" value="....."/>
FTP Password (again):	<input type="password" value="....."/>

The default values are:

- ▶ User name: anonymous
- ▶ Password: Exabyte

Note: The user name and password are case-sensitive.

For information about accessing the library's FTP interface and using an FTP utility to upgrade firmware or obtain diagnostic listings, see [page 187](#).

E-mail

If desired, you can receive e-mail alerts from the library in the event of error conditions or exceptions. If you want to receive these e-mail alerts, enter the IP address of your e-mail server, your e-mail user name, and your e-mail address. You can also enter a sender e-mail address that will appear in the “From” field of messages that are sent from the library. This address can be anything you like, but be aware that some e-mail servers have limitations on the type of address you can specify.

WAP

Web Access Password—If you have set up a password for changing options on the Configuration page, enter the password here before you click on the Update button to enact the changes.

Note: If you forget your web access password, click on Get Web PW Hint, described below.

SETTING WEB ACCESS PASSWORD PROTECTION

Set Web Access Password

If desired, you can set up a password to prevent unauthorized users from using the RMU to change the library’s configuration settings from the Configuration page.

Change Web Access Password	
Web Access Password:	Inactive
Current Web Access Password:	•••••
New Web Access Password:	•••••
Confirm New Web Access Password:	•••••••

Update

To set up a password, follow these steps:

1. If a password has already been set and you want to change it, enter the current password in the “Current Web Access Password” field.
2. Enter a new password for the page in the “New Web Access Password” field. The password can be from 1 to 11 letters and can include spaces. The password is not case-sensitive.


3. Re-enter the new password in the “Confirm New Web Access Password” field.

After filling in the fields, click on the Update button to enable the password.

To cancel the password, enter the current password in the Current Web Access Password, and leave the New Web Access Password and Confirm New Web Access Password fields blank. Then, click the Update button.


Get Web Password Hint

By clicking the Get Web Password Hint button, you will receive an encrypted version of a password. Contact Technical Support at www.tandbergdata.com to have your password decrypted.

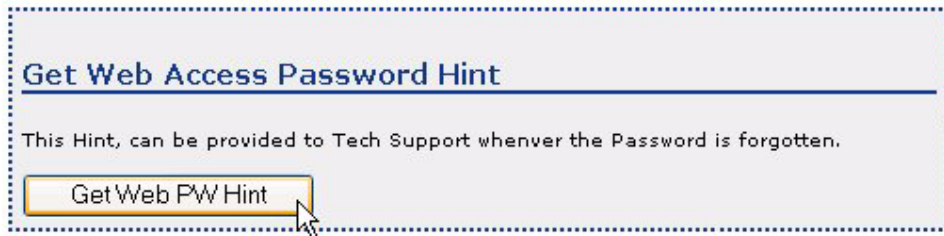

VIEWING INFORMATION ON THE STATISTICS PAGE

Click on Statistics to view the Statistics page. [Figure 4-6](#) shows the Statistics Home page.

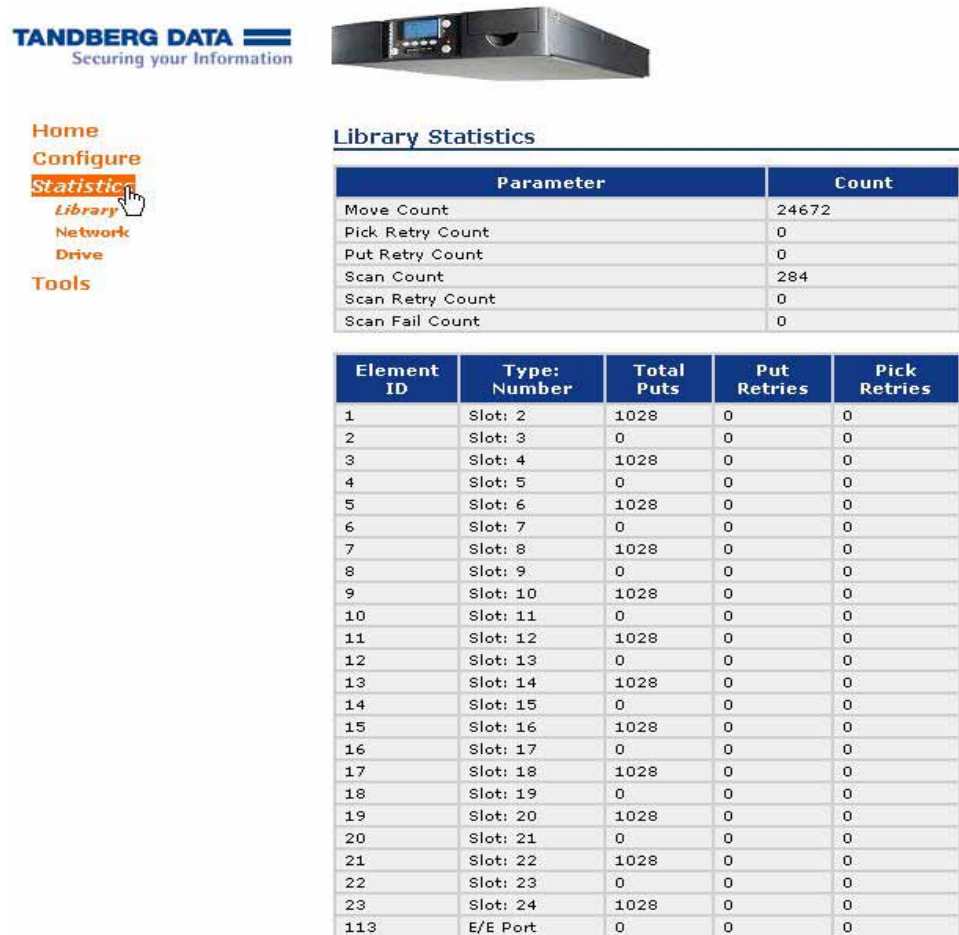

TANDBERG DATA
Securing your Information

Home
Configure
Statistic
Library
Network
Drive
Tools

Library Statistics

Parameter	Count
Move Count	24672
Pick Retry Count	0
Put Retry Count	0
Scan Count	284
Scan Retry Count	0
Scan Fail Count	0

Element ID	Type: Number	Total Puts	Put Retries	Pick Retries
1	Slot: 2	1028	0	0
2	Slot: 3	0	0	0
3	Slot: 4	1028	0	0
4	Slot: 5	0	0	0
5	Slot: 6	1028	0	0
6	Slot: 7	0	0	0
7	Slot: 8	1028	0	0
8	Slot: 9	0	0	0
9	Slot: 10	1028	0	0
10	Slot: 11	0	0	0
11	Slot: 12	1028	0	0
12	Slot: 13	0	0	0
13	Slot: 14	1028	0	0
14	Slot: 15	0	0	0
15	Slot: 16	1028	0	0
16	Slot: 17	0	0	0
17	Slot: 18	1028	0	0
18	Slot: 19	0	0	0
19	Slot: 20	1028	0	0
20	Slot: 21	0	0	0
21	Slot: 22	1028	0	0
22	Slot: 23	0	0	0
23	Slot: 24	1028	0	0
113	E/E Port	0	0	0

Figure 4-6 RMU-Statistics home page

LIBRARY STATISTICS

The Statistics/Library (Home) page provides the following information:

Library Statistics

Parameter	Count
Move Count	24672
Pick Retry Count	0
Put Retry Count	0
Scan Count	284
Scan Retry Count	0
Scan Fail Count	0

Move Count

This indicates the total number of moves that have taken place in the library. A move is when the robot removes a cartridge:

- ▶ from a slot (or the I/E port) to a tape drive
- ▶ from a tape drive to a slot (or the I/E port)

Pick Retry Count

This indicates the total number of times the robot has retried removing a cartridge from a cell or from the tape drive.

Put Retry Count

This indicates the total number of times the robot has retried placing a cartridge in a cell or in the tape drive.

Scan Count

This indicates the total number of times the bar code scanner has scanned a bar code label.

Scan Retry Count

This indicates the total number of times the bar code scanner has retried scanning a bar code label.

Scan Fail Count

This indicates the total number of times the bar code scanner failed scanning a bar code label. The scanner tries to scan a bar code several times before it logs a failure.

ELEMENT STATISTICS

The Element Statistics section of this page provides the following information:

Element ID

These are the populated slots in the library. This screen shows the library with two left magazine “blanks” installed.

Type: Number

This field shows either the type of slot: cleaning cartridge or I/E port, or the number of the cell.

Total Puts

This indicates the total number of times the robot put a cartridge into this cell.

Put Retries

This indicates the total number of times the robot has retried putting a cartridge into this cell.

Pick Retries

This indicates the total number of times the robot has retried picking a cartridge from this cell.

NETWORK STATISTICS

The Statistics Network page provides the following information:

Network Statistics

Parameter	Count
WWW Hit Count	78
FTP Count	0
E-mails Sent	0
Trapped Events	0

WWW Hit Count

This indicates the total number of times the library has been accessed from the Internet (via the RMU).

FTP Count

This indicates the total number of FTP sessions that have occurred.

E-mails Sent

This indicates the number of e-mail notifications sent on behalf of the library.

Trapped Events

This indicates the number of SNMP trapped events that have been detected and signed.

TAPE DRIVE STATISTICS

The Statistics Tape Drive page provides the following information (shown with two half-height tape drives installed):

Drive Statistics

Drive	Parameter	Count
1	Drive Load Count	27071
1	Pick Retry Count	0
1	Put Retry Count	0
2	Drive Load Count	1757
2	Pick Retry Count	0
2	Put Retry Count	0

Drive Load Count

This indicates the number of the library has loaded a cartridge into the tape drive.

Pick Retry Count

This indicates the total number of times the robot has retried removing a cartridge from the tape drive.

Put Retry Count

This indicates the total number of times the robot has retried placing a cartridge in the tape drive.

Drive Reload Count

This indicates the number of times the library has reloaded a cartridge into the tape drive.

- ▶ Drive 1 indicates either the lower half height tape drive or the full height tape drive.
- ▶ Drive 2 indicates the upper half height tape drive (if installed).

USING THE UTILITY'S TOOLS

Click on Tools at the top of the page to view the Tools Home page.

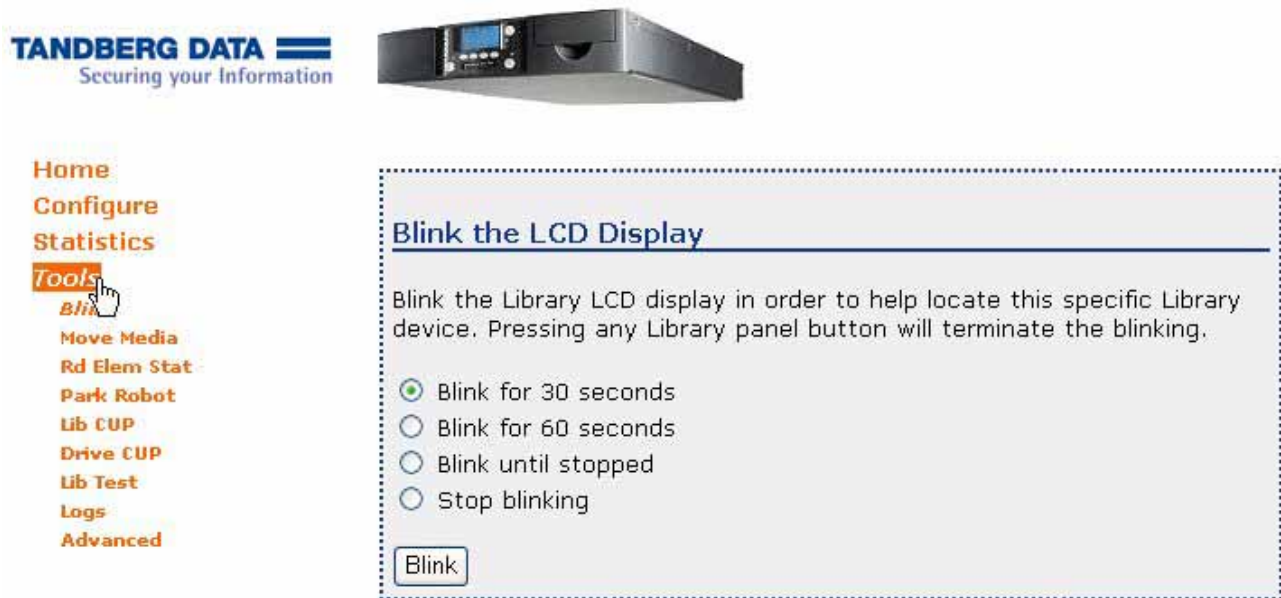


Figure 4-7 RMU-Tools home page

Blink

This option helps you to identify the library if it is in a rack with multiple devices. Use this option to locate the library to load cartridges, perform manual operations, and so forth.

Move Media

This option allows you to move media between slots (including the I/E port) and the tape drive(s).


Rd Elem Stat

Read Element Status Command – This option performs an Element Status Scan.

Park Robot

This option parks the robot. You need to park the robot before moving or shipping the library.

After you successfully park the robot (front panel confirmation message: Park for Shipping Good), replace the shipping lock prior to moving the library (see “Replacing the Shipping Locks” on page 238).

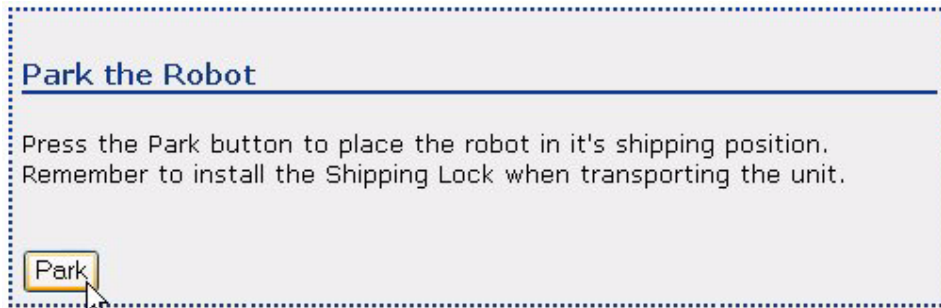


Review or Modify the **type** of Ship Lock to be used.

Ship Lock Type

If your library arrived with a red ship lock installed (see [Figure 2-11 on page 26](#)), you do not need to change this option. If your library shipped with an older version of ship lock, use this option to configure your library for the correct lock.

Ship Lock Type Control

This page is for Expert use only. Changing the Ship Lock selection incorrectly can cause your machine to be configured for the wrong type of Ship Lock device.

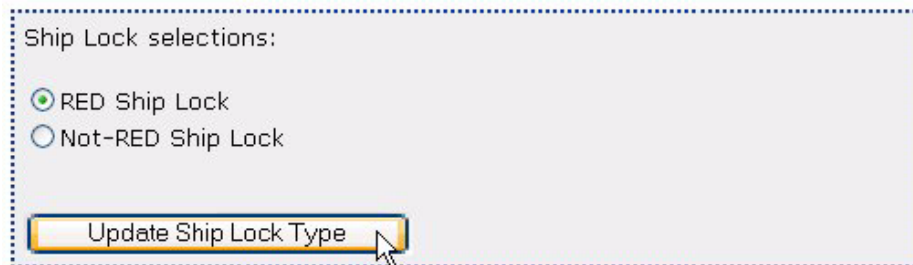

Lib CUP

Library Code Update – Use this option to update the code in the library. The following figure shows the options for updating the library’s code.

! Important Make sure that you select and download the correct firmware files. Firmware for other Tandberg Data products is not compatible with the StorageLibrary T24 LTO.

**Caution**

Do not attempt to perform library operations or power down the library until after it automatically resets.

Choose the option, press **Select**, and then follow the instructions as shown below.


Library Code Update

Select the method below that you would like to use to update the Library firmware.

- Update automatically from the WEB
- Update from the WEB but let me choose
- Update from a file of my choice
- Update from the USB port

Select

When you press the **Select** button, the following screen appears. Once you determine that it is acceptable to continue, press the **OK** button.

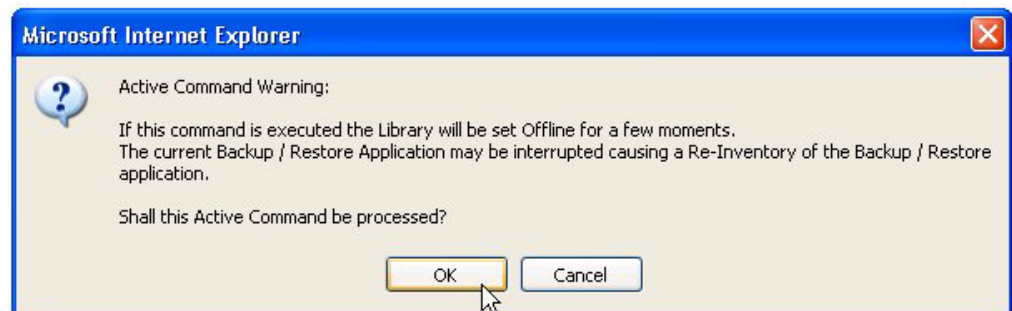

► Update automatically from the WEB**Automated WEB based Code Update**

Press the Find Latest Update button to start the Automated WEB based Code Update process.

After you press the button, the system will automatically establish the required connection to the server that holds the Firmware for this device. It will then determine if a newer version of the Firmware is available and prompt you to decide if you want it installed. The Code Update will start only after you have agreed to upgrade the Firmware.

The FTP location that this process will use is automatically entered for you. Only change the FTP Location if Technical Support has given you a specific IP address to use.



Ftp Location:

► Update from the WEB but let me choose**WEB based Code Update**

Press the Get File Selection button to start the WEB based Code Update process.

After you press the button, the system will automatically establish the required connection to the server that holds the Firmware for this device. You will then be given a selection of files to choose from. Only after you have chosen the desired file will the Code Update start.

The FTP location that this process will use is automatically entered for you. Only change the FTP Location if Technical Support has given you a specific IP address to use.



Ftp Location:

► **Update from a file of my choice**

WEB based Library Code Update

Enter the file name below or use the Browse button to locate the desired file. Then press the Update button.

After you press the Update button, this page will remain displayed until all of the data has been transferred to the Library.

Do not turn off power to the Library after you have pressed the Update button

Update using this file:

► **Update from the USB port**

USB File System Navigation

Navigate the USB File System until the desired TFW file is located. Click on that file to select it. You will be prompted before any firmware is transferred.

Name	Size	Date
V1G213.TFW	4194560	2007-04-19 13:41:08
V1G222.TFW	4194560	2007-07-31 13:52:04


Drive CUP

Tape Drive Code Update – Use this option to update the code in the tape drive(s). The following figure shows the options for updating the code.

! Important Make sure that you select and download the correct firmware files. Firmware for other Tandberg Data products is not compatible with the tape drives.

! Caution Do not attempt to perform library operations or power down the library until after it automatically resets.

Choose the options, press **Select**, and then follow the instructions as shown below.

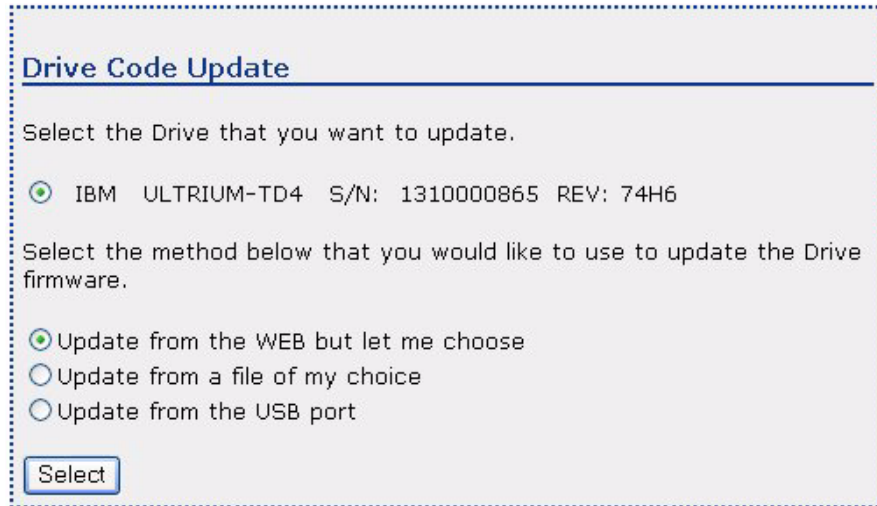

Drive Code Update

Select the Drive that you want to update.


IBM ULTRIUM-TD4 S/N: 1310000865 REV: 74H6

Select the method below that you would like to use to update the Drive firmware.

Update from the WEB but let me choose
 Update from a file of my choice
 Update from the USB port

Select

When you press the **Select** button, the following screen appears. Once you determine that it is acceptable to continue, press the **OK** button.

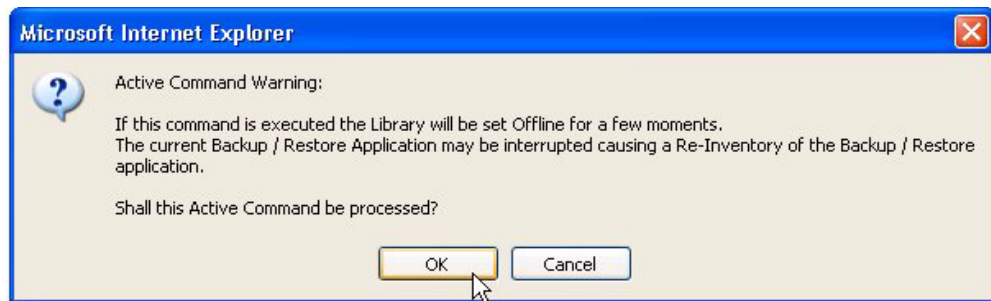

► **Update from the WEB but let me choose**

WEB based Drive Code Update

Press the Get File Selection button to start the WEB based Drive Code Update process.

After you press the button, the system will automatically establish the required connection to the server that holds the Firmware for this device. You will then be given a selection of files to choose from. Only after you have chosen the desired file will the Code Update start.

The FTP location that this process will use is automatically entered for you. Only change the FTP Location if Technical Support has given you a specific IP address to use.



Ftp Location:

► **Update from a file of my choice**


WEB based Drive Code Update

Enter the file name below or use the Browse button to locate the desired file. Then press the Update button.

After you press the Update button, this page will remain displayed until all of the data has been transferred from the File.

Once all the data has been transferred from the File, it will then be transferred to the Drive. That phase can take over 15 minutes to complete. A progress page will be displayed during that phase.

Do not turn off power to the Library after you have pressed the Update button

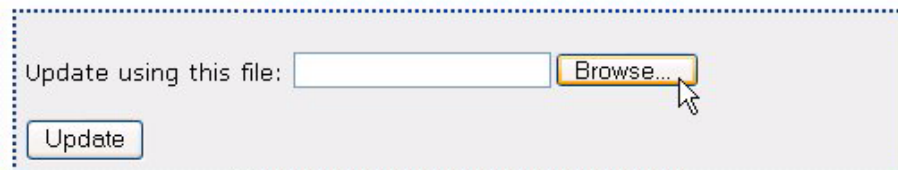

Update using this file:

► Update from the USB port

USB File System Navigation for Drive Code Update

Navigate the USB File System until the desired .FMR or .E file is located. Click on that file to select it. You will be prompted before any firmware is transferred.

Name	Size	Date
IBFHL4FC_74H6.fmr	2853120	2007-05-14 16:43:04

Lib Test

Library Test – Use this option to run test's on the library. None of these tests will write data to tape, but some of them will load cartridges into and out of the tape drive(s). The following tests are available:

Test	Description
Basic Load/Unload	Loads cartridges into and out of the tape drive(s)
Random Slot to Slot Move	Moves cartridges from slot to slot in random order (the library must have empty slots to conduct this test)
Simple Positioning	Moves the robot sequentially around the library starting at slot 1
Harder Positioning	Moves the robot randomly around the library and positions it at various locations

To stop a test in progress, click the Stop the Test button. If you press this button, the library completes the current action, and then stops. For example, if the library loaded a cartridge into a tape drive, it unloads it and returns it to its slot before stopping the test.

Diagnostic Test Results



Diagnostic test in progress. Please wait.

Logs

Occasionally, you may be asked by Technical Support to provide diagnostic logs (sometimes called *dumps*). Use this option to create these logs. You can select the device that you want logs for and how to handle them.

Log Tools

Look at the NVRAM log
 Look at the Cartridge Memory Information log
 Send the internal log to a local file
 Send the internal log to a USB device

Advanced

Use the advanced tools with caution as some of the features may alter the configuration in such a way that you may lose Network connectivity.

Advanced Features

Select the procedure you would like from the selections below then press the Submit button. Note that some of the procedures may alter the configuration of this library in such a way that you may lose network connectivity with this library. Use these procedures carefully.

Reset the Library
 Restore to Default Configuration

Update Library Ring - Click to update or enable the Library Ring system of WEB links.

- ▶ **Reset the library**—Resets the library remotely.
- ▶ **Restore to Default Configuration**—Restores the system defaults.

Update Library Ring

This option allows you to link multiple libraries in your system.

Update the Library Ring

Enter the IP address of the library that you want to link to with the Next and Prev links. Enter all ZERO's for the IP address to disable that link.

Next Library	<input type="text" value="0"/>	.	<input type="text" value="0"/>	.	<input type="text" value="0"/>	.	<input type="text" value="0"/>
Prev Library	<input type="text" value="0"/>	.	<input type="text" value="0"/>	.	<input type="text" value="0"/>	.	<input type="text" value="0"/>

5

OPERATING THE LIBRARY

After you have configured your library, you can add cartridges and put it into operation. You can operate the library in either Random or Sequential mode.


- ▶ **Random mode (the default)**—The library processes cartridges according to commands issued from an application.
- ▶ **Sequential mode**—The library automatically processes the cartridges in sequential order. See [page 124](#) for instructions on how to set the library to operate in Sequential mode.

! Important If you are using a backup application which is capable of controlling the library, do *not* configure the library to operate in Sequential mode.




During normal operation, you do not need to intervene in library activities. However, you may occasionally need to perform the following tasks, described in this chapter.

To view this information...	go to...
Preparing cartridges	page 115
Inserting and moving cartridges	page 116
Loading cartridges into a magazine	page 120
Removing cartridges from the library	page 122
Setting the library to operate in Sequential mode Important! Do not use this option with a backup application!	page 124
Issuing a Re-inventory command to the library	page 128
Loading and unloading cartridges from the tape drive(s)	page 130
Cleaning the tape drive(s)	page 133
Resetting the library	page 139
Storing cartridges that you have removed from the library	page 141

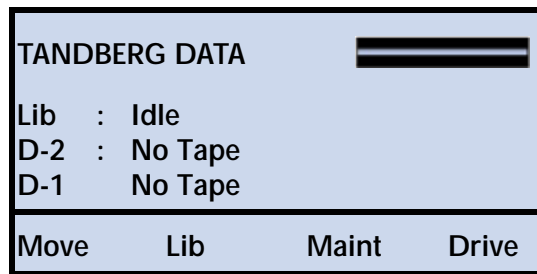You can monitor library operations by viewing the operator panel or by using the library's Remote Management Utility (see [Chapter 4](#)). The Home screen (shown here) provides continuous updates on the activities of the library and tape drive(s).



The status LEDs, located to the left of the operator panel buttons (see [Figure 5-1](#)), also indicate library activity as follows:

	Color	Status
	Off (no color)	The library is idle
	Green	The library is performing a mechanical operation
	Amber	The library encountered a hardware error See Appendix E, Error Messages

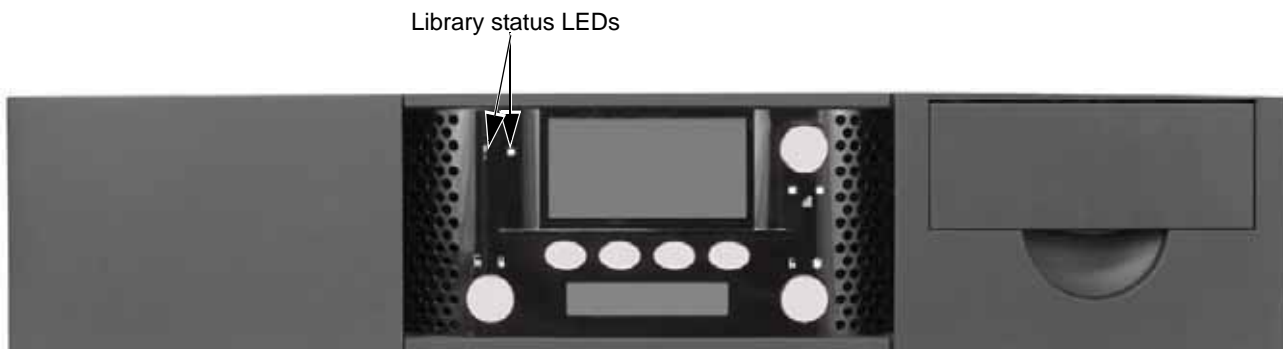


Figure 5-1 Location of status LED

PREPARING CARTRIDGES

Be sure to use the appropriate cartridges for the tape drive(s). [Table 5-1](#) shows the cartridge and write/read compatibility for the LTO Ultrium tape drive in the library.

Table 5-1 Tape drive cartridge read/write compatibility

LTO Ultrium Tape Drive	Ultrium 5 (sky blue)		Ultrium 4 (green)		Ultrium 3 (slate blue)		Ultrium 2 (purple)		Ultrium 1 (black)		LTO Ultrium cleaning cartridge
	Read	Write	Read	Write	Read	Write	Read	Write	Read	Write	
LTO-5	✓	✓	✓	✓	✓	No	No	No	No	No	✓
LTO-4			✓	✓	✓	✓	✓	No	No	No	✓
LTO-3			No	No	✓	✓	✓	✓	✓	No	✓
LTO-2			No	No	No	No	✓	✓	✓	✓	✓

! Tip Cartridges with bar code labels require much less time to scan than cartridges without bar code labels. We recommend attaching bar code labels to each cartridge, including the cleaning cartridge.

Before inserting cartridges into the library, prepare them as follows:

1. Affix the supplied bar code labels to the cartridges. Position each label in the indented area on the cartridge, as shown in [Figure 5-2](#).

To prepare your own labels, refer to the *Tandberg Data Bar Code Label Specification for LTO Ultrium Cartridges* available at www.tandbergdata.com.

Note: The bar code labels provided with the library include labels for both data cartridges and cleaning cartridges.

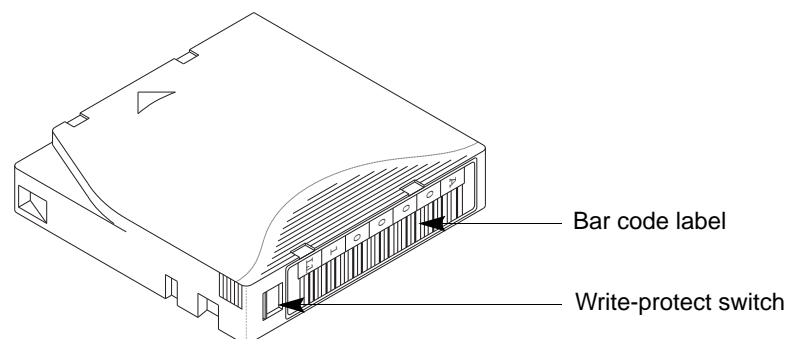


Figure 5-2 Bar code label placement and write-protect switch location

2. Make sure the write-protect switch on each cartridge is set for the desired operation.

If the switch...	the tape is...
does not cover the opening	write-enabled
covers the opening	write-protected

INSERTING AND MOVING CARTRIDGES

LOADING CARTRIDGES INTO THE I/E PORT

In order to use the I/E Port to import and export cartridges, it must first be “enabled.” See “[Enabling and Disabling the I/E Port](#)” on page 45.

To load cartridges through the I/E port:

1. Affix the bar code labels as described in “[Preparing Cartridges](#)” on page 115.
2. Press the I/E Port lock button. The unlock icon flashes (🔓) while the library initiates the unlock.

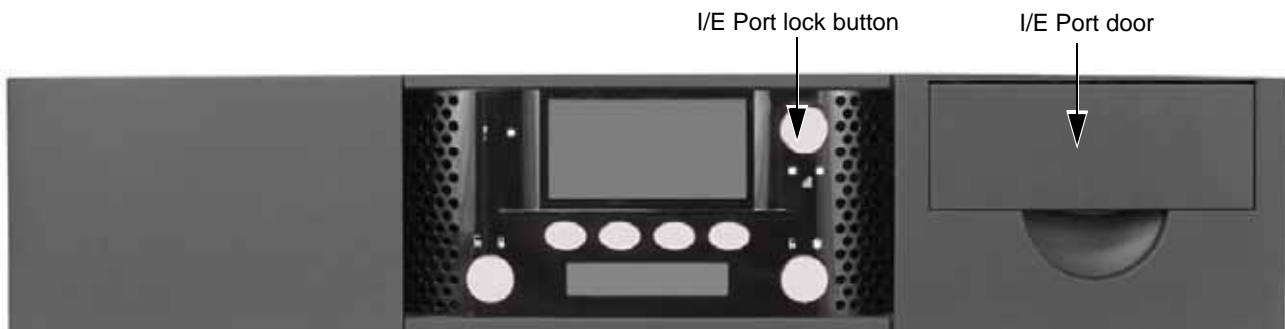


Figure 5-3 Location of I/E Port lock button

3. Once the library unlocks the door (the unlock icon remains illuminated 🔓), open it by pulling the door latch toward you. Slide the drawer out to the end of travel. Swing the handle down and out of the way.

4. Load the cartridge into the slot with the bar code label facing to the left and the arrow facing to the right.

Note the cartridge orientation (bar code label to the left)

Note illustration inside I/E port

Arrow

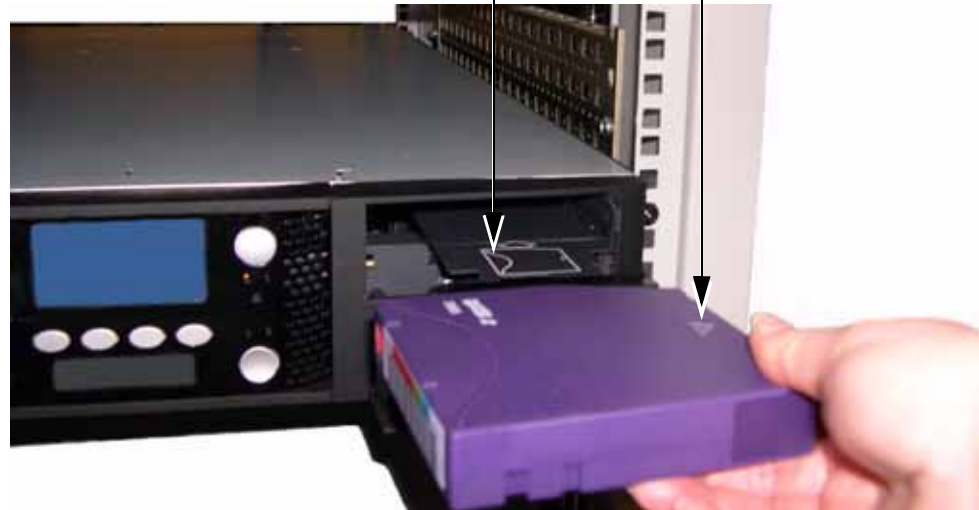


Figure 5-4 Inserting a cartridge into the I/E port

5. Push the cartridge into the slot until it stops.
6. Close the I/E port door. The lock icon illuminates solid green (🔒).
7. Continue with the next section.

! Important If you plan to store a cleaning cartridge in the library, see [“Setting Up Automatic Tape Drive Cleaning”](#) on page 57.

IMPORTING CARTRIDGES THROUGH THE I/E PORT

After you have loaded a cartridge into the I/E Port, you need to “import” it into the library. The I/E port must be “enabled” (see [“Enabling and Disabling the I/E Port”](#) on page 45).


Note: The following steps describe how to import a cartridge through the I/E Port. Reverse the steps to “Export” a cartridge through the I/E Port.

To import cartridges through the I/E Port:


1. At the Home screen, press **Move**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Import**, and then press **Select**.

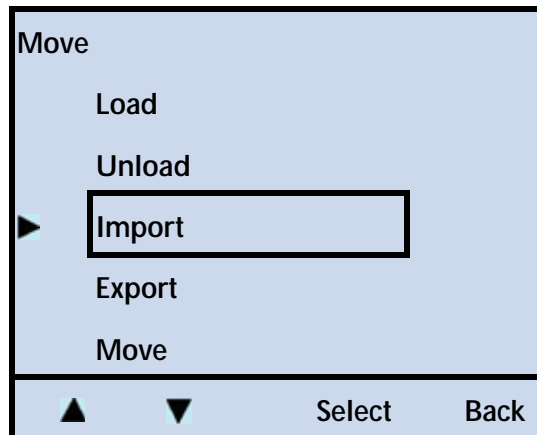

3. When the following screen appears, press **Select**.

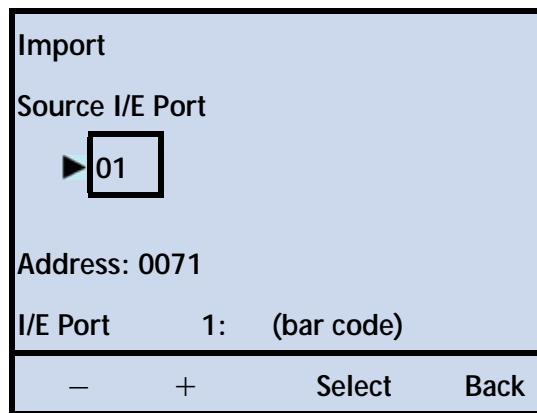

4. Press + or – to move through the slot choices. When the screen shows your “destination” (moving to) choice, press **Select**.

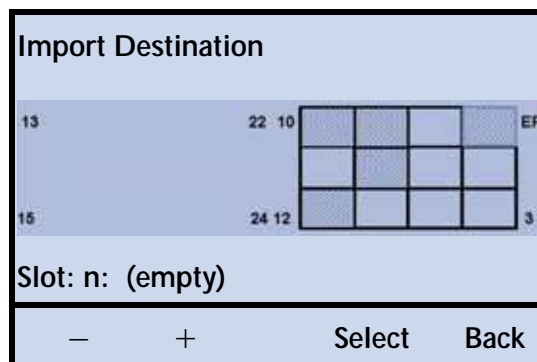

5. Press **OK** to continue, or **Back** to cancel.
- ▶ During the import, the front panel displays an Import Active message.
 - ▶ After a successful Import, the library displays this confirmation message: **Import Good**. Once the message appears, press **OK** to continue.

6. Press **Back** (as needed) to return to the Home screen.

MOVING CARTRIDGES

The front panel Move command allows you to move cartridges between any of the elements inside the library (slots, a tape drive, or the I/E Port).


Note: The following steps describe how to move cartridges between slots. Use the same procedure to move cartridges to and from a tape drive or to and from the I/E Port.

When you move a cartridge to a tape drive, the cartridge automatically “loads” (the tape drive engages the take up reel).


1. At the Home screen, press **Move**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Move**.

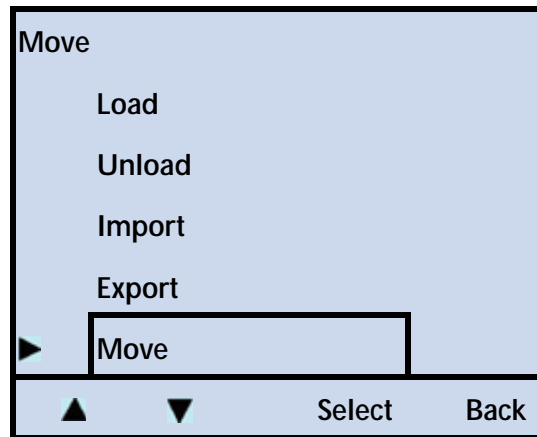


3. Press **Select**. Press ▼ until the selection arrow (▶) points to **Slot**.

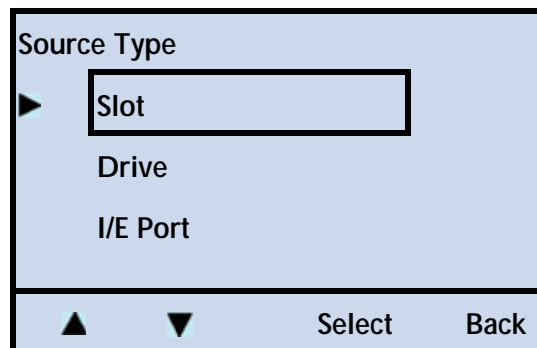

- Press **Select**, and then press + or – to move through the slot choices. When the screen shows your “source” (moving from) choice, press **Select**.

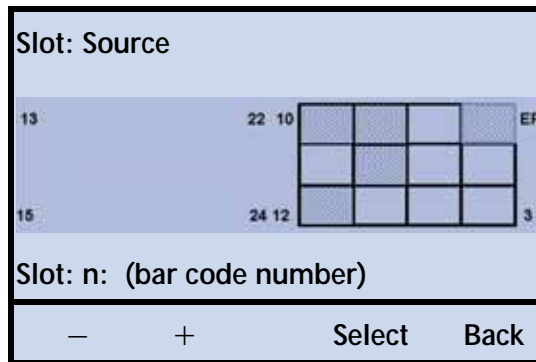

Repeat steps 4 and 5 above to select your “destination” (moving to) choice.

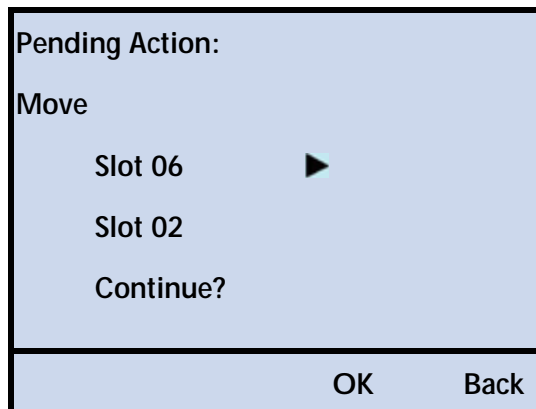

- Press **OK** to continue, or **Back** to cancel.
 - ▶ During the move, the front panel displays a Move Active message.
 - ▶ After a successful Move, the library displays this confirmation message: **Move Good**. Once the message appears, press **OK** to continue.
- Press **Back** (as needed) to return to the Home screen.

LOADING CARTRIDGES INTO A MAGAZINE

If you want to populate the entire magazine rather than loading cartridges one at a time, follow these steps.

! Tip Cartridges with bar code labels require less time to scan than cartridges without bar code labels. We recommend applying bar code labels to each cartridge, including the cleaning cartridge.

To load cartridges into a magazine:

- Affix the bar code labels as described in “[Preparing Cartridges](#)” on page 115.

2. Press the magazine lock buttons shown in [Figure 5-5](#).

If there is a command in progress, the library completes the command and positions the robot before unlocking and releasing the magazine.

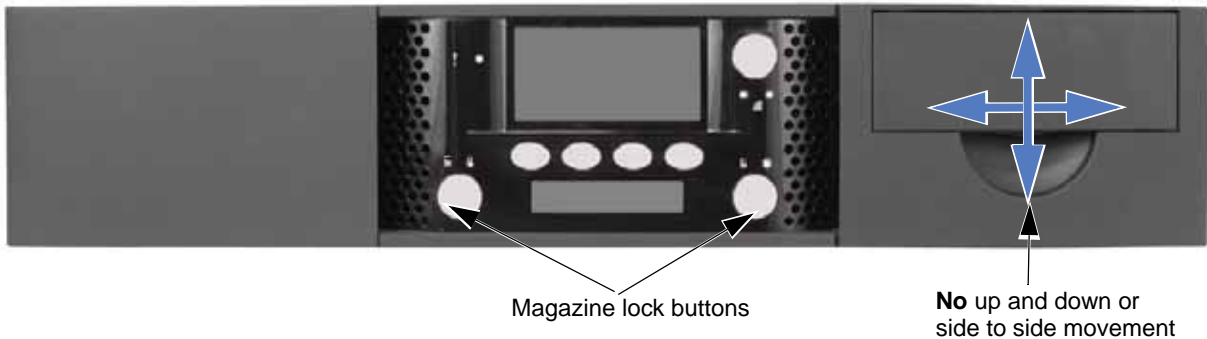


Figure 5-5 Magazine lock buttons

3. While supporting it, gently slide the magazine directly out of the library.



Caution

Use care not to twist the magazine or move it side to side as you insert or remove it from the library. Not inserting it straight into / pulling it straight out of the opening can damage components inside the library.

4. Load the cartridges as shown here.

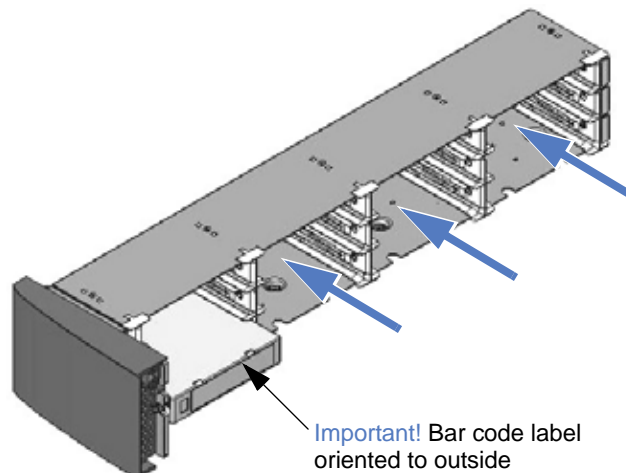


Figure 5-6 Loading cartridges into a magazine

Notes: Use caution handling a magazine that is loaded with cartridges. Each cartridge weighs ½ lb. (0.24 kg). Fully loaded, each magazine can weigh up to 8.8 lbs. (4.0 kg).

- Securely grasp the magazine and slide it straight into the library (use care not to twist the magazine or move it side to side—it must be inserted “straight” into the opening). When you encounter resistance, press the magazine firmly, and you will hear it “snap” into place.

When the magazine is fully seated, the lock icon is solid green (🔒), indicating that it is locked.

REMOVING CARTRIDGES FROM THE LIBRARY

This section describes removing cartridges one at a time through the I/E Port.


- ▶ To remove multiple cartridges—see “Loading Cartridges into a Magazine” on page 120.
- ▶ To remove cartridges after a power failure—see “Removing Cartridges Without Power” on page 179 (for both the library and a tape drive).

To remove cartridges:


- At the Home screen, press **Move**.

If necessary, enter the operator panel password (see page 73).


- Press ▼ until the selection arrow (▶) points to **Export**.

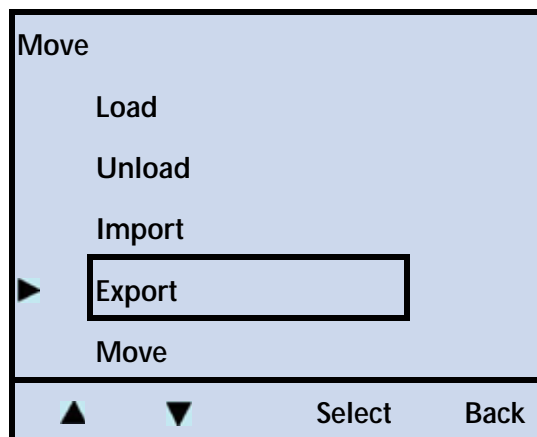

3. Press **Select**, and then press + or – to move through the choices. When the screen shows your “source” (moving from) choice, press **Select**.

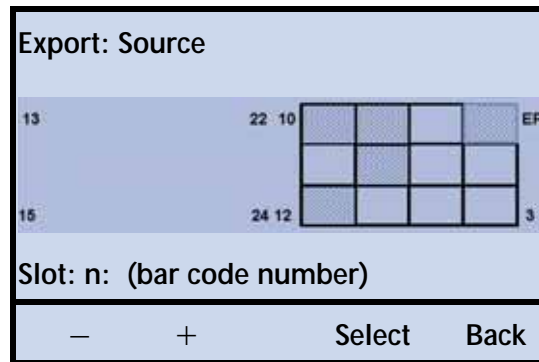

4. When the following screen appears, press **Select**.

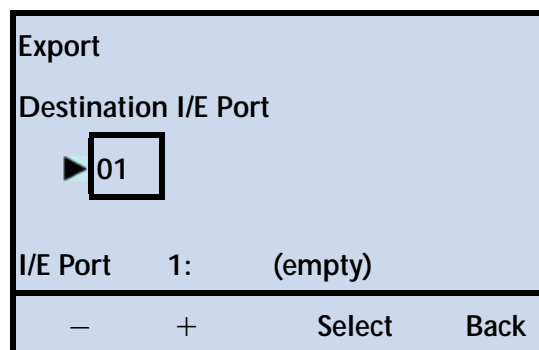


5. Press **OK** to continue, or **Back** to cancel the action.
 - ▶ During the export, the front panel displays an Export Active message.
 - ▶ After a successful export, the library displays this confirmation message: **Export Good**. Once the message appears, press **OK** to continue.
6. Remove the cartridge:
 - ▶ Press the I/E Port lock button. The unlock icon flashes (🔓) while the library initiates the unlock.
 - ▶ Once the library unlocks the door (the unlock icon remains illuminated 🔓), open it by pulling the door latch toward you. Slide the drawer out to the end of travel. Swing the handle down and out of the way to access the cartridge.
 - ▶ Remove the cartridge and close the door (the lock icon illuminates green 🔒).
7. Press **Back** (as needed) to return to the Home screen.

SETTING THE LIBRARY TO OPERATE IN SEQUENTIAL MODE

! Important If you are using a backup application which is capable of controlling the library, do *not* configure the library to operate in Sequential mode.

The operation mode determines how the library processes cartridges. The library operates using one of these two options.

- ▶ **Random**—This is the factory default setting where the library processes cartridges according to commands issued from an application.
- ▶ **Sequential**—The library processes cartridges sequentially without direction from an application.
 - ▶ Sequential mode restricts the Front Panel or RMU usability, as the application controls the actions of the library. Using either of these options while the library is set to operate in Sequential mode causes failures!
 - ▶ When the library unloads a cartridge from the tape drive, the robot automatically advances to the next occupied cell and loads that cartridge into the tape drive.
 - ▶ In Sequential mode, magazines are automatically associated with tape drives so that each tape drive and its associated magazine (or magazines) becomes an independent autoloader.

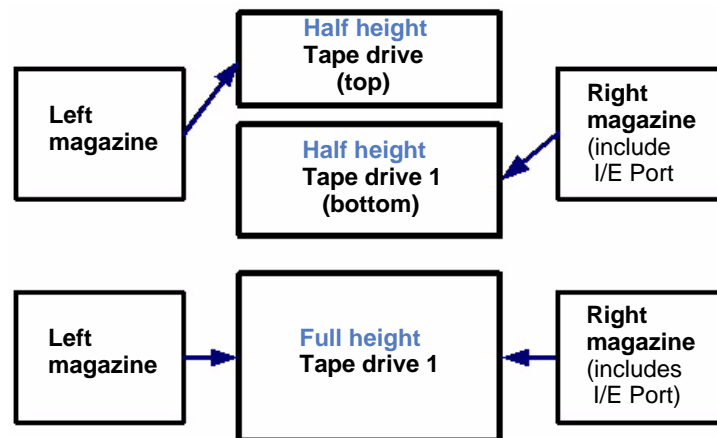


Random is the default operating mode for the library. To change the operating mode to Sequential, you need to enable the Sequential Mode, and set the Restart and Loop options.

-
- ! Important**
- Ensure that the tape drives do NOT contain cartridges prior to setting the library to operate in sequential mode! Check the tape drives via the Lib/Inventory/View Drives option.
 - Prior to enabling Sequential mode, load cartridges into the magazines. If the library contains no cartridges, you will receive the following error message: A-1: Operator Action. See “Loading Cartridges into a Magazine” on page 120.
-

1. At the Home screen, press **Lib**.


If necessary, enter the operator panel password (see page 73).

2. Press ▼ until the selection arrow (▶) points to **Library Settings**.

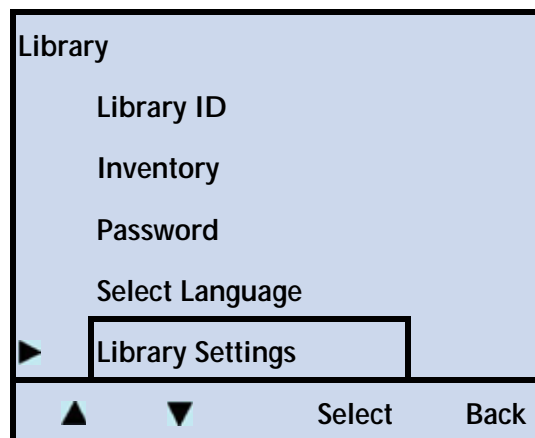


3. Press **Select**.

4. Press ▼ until the selection arrow (▶) points to **Operation Mode**.

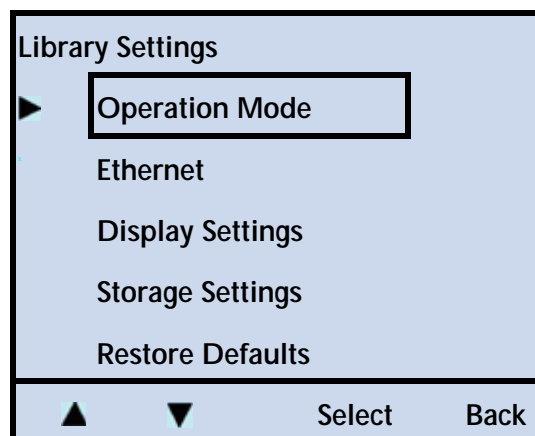


5. Press **Select**. Press ▼ until the selection arrow (▶) points to **Sequential Mode**, and press **Select**.

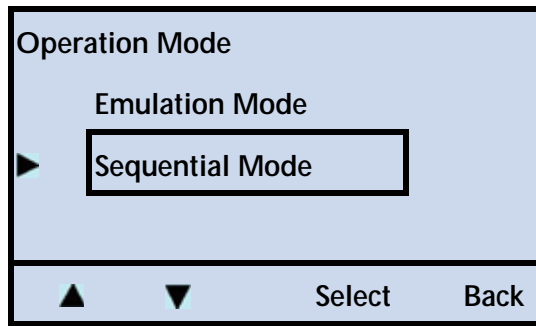


Enabling Sequential Mode

- ! Important**
- If you are using a backup application which is capable of controlling the library, do *not* configure the library to operate in Sequential mode.
 - Ensure that the tape drives do NOT contain cartridges prior to setting the library to operate in sequential mode!

- a. Press **Modify**.

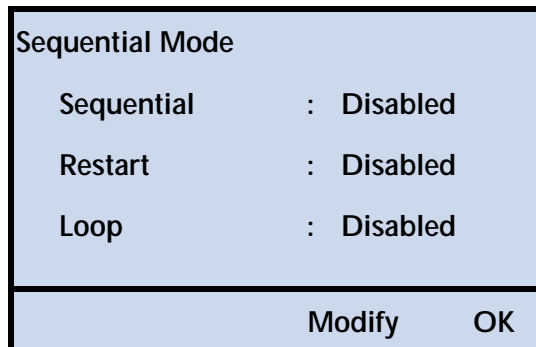

- b. At the first screen (Sequential), press + or – to select *Enable*.

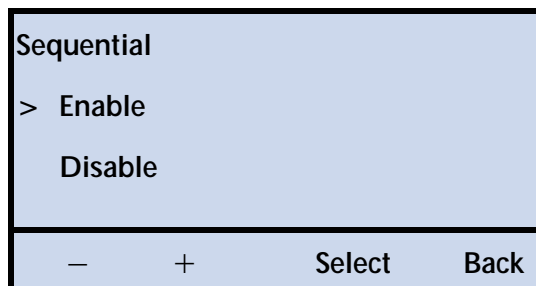


- c. Press **Select**, and then continue with [Setting the Restart Option](#).

Setting the Restart Option

The Restart option determines what the library does after it is reset, power cycled, or when a magazine has been re-inserted.

Mode	The library...
Enabled	Restarts at the beginning of the cartridge sequence
Disabled	Resumes where it left off when the interruption occurred

- a. At the Restart screen, press + or – to select *Enable* or *Disable*.

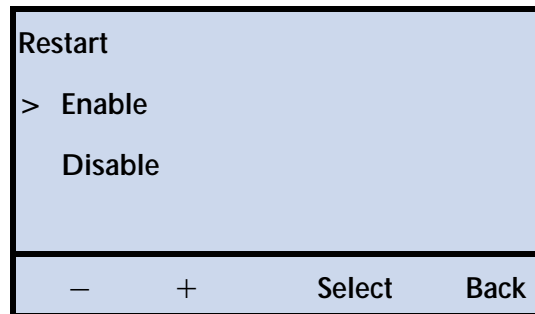


- b. Press **Select**, and then continue with [Setting the Loop Option](#).

Setting the Loop Option

The Loop option determines what the library does after it has finished processing the last cartridge in the sequence.

Mode	The library...
Enabled	Loops back to the first cartridge in the sequence and begins processing the cartridges again.
Disabled	Stops and waits for operator intervention. You need to set the library to operate in Random mode, and then reset it to Sequential mode.


- a. At the Loop screen, press + or – to select *Enable* or *Disable*.

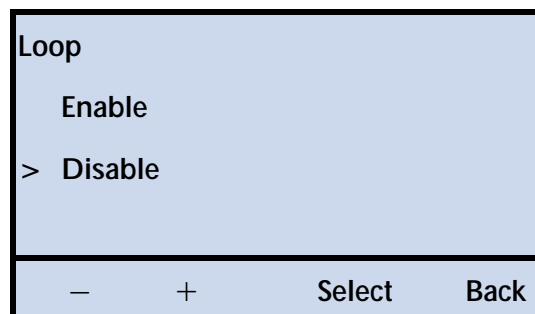

- b. Press **Select**.

6. Press **OK**.
7. Press **Back** (as needed) to return to the Home screen.

The Home screen now indicates that the library is operating in Sequential Mode by the following changes. The library also loads a cartridge into the tape drive or tape drives so the application can begin the backup job.

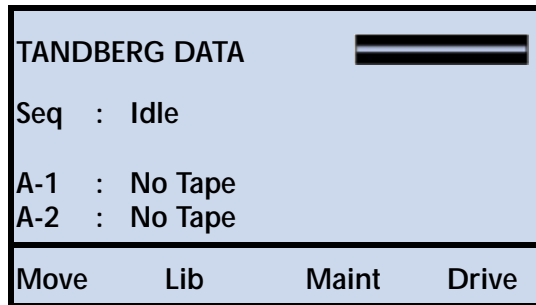

- ▶ Lib (Library) is replaced with Seq (Sequential).
- ▶ D-1 (Drive-1) and D-2 (Drive-2) are replaced with A-1 and A-2 (indicating autoload function).

! Important Do *not* load cartridges into the tape drive via the front panel or the Remote Management Utility while the library operates in sequential mode. This will result in a tape drive failure!

ISSUING A RE-INVENTORY COMMAND TO THE LIBRARY

Under normal circumstances, you should never have to issue a Re-inventory command to the library. The library automatically updates the inventory each time you power the unit on, reset the library from the front panel, and open and close an I/E Port or insert a magazine.

- ▶ If the bar code scanner has a problem reading a bar code label, you might want to update the inventory.
- ▶ If the bar code label screen indicates a blank for a label, you may want to have the library re-do the cartridge inventory to see if it can read the label.
- ▶ If the problem still exists, you may need to replace the label.


! Tip Cartridges with bar code labels require much less time to scan than cartridges without bar code labels. We recommend applying bar code labels to each cartridge, including the cleaning cartridge.

To re-inventory the library:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Inventory**.

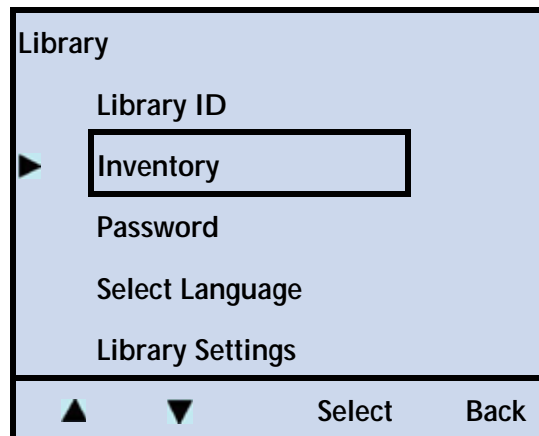


3. Press **Select**.
4. Press ▼ until the selection arrow (▶) points to **Re-Inventory**.

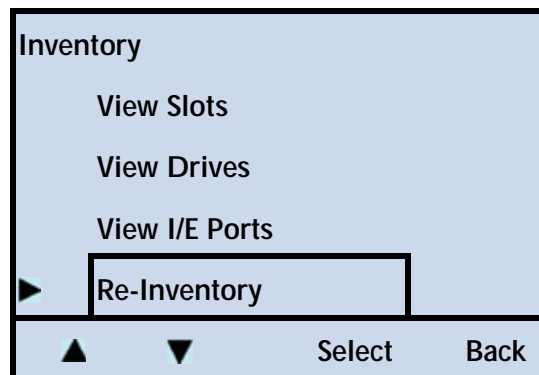

5. Press **Select**.
6. Press **OK** to continue or **Back** to cancel the action.

- ▶ During the inventory, the front panel displays a Re-Inventory Active message, a status (XX%), and the current action: positioning, scanning, and so forth.

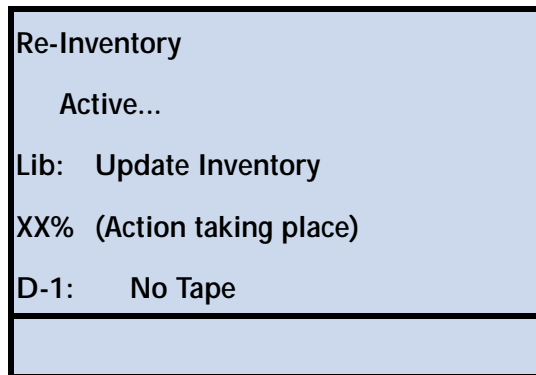

- ▶ After a successful inventory, the library displays this confirmation message: **Re-Inventory Good**. Once the message appears, press **OK** to continue.

7. Press **Back** (as needed) to return to the Home screen.

LOADING AND UNLOADING CARTRIDGES IN THE TAPE DRIVE

During normal operation, you do not need to instruct the library to load and unload cartridges in the tape drive(s). Your backup software controls these functions. However, you can use the operator panel to load and unload cartridges, if necessary. You may want to use these functions for testing purposes or for cleaning the tape drive(s). See [page 136](#) for cleaning instructions.


LOADING A CARTRIDGE INTO A TAPE DRIVE

To load cartridges into a tape drive:


1. At the Home screen, press **Move**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Load**.

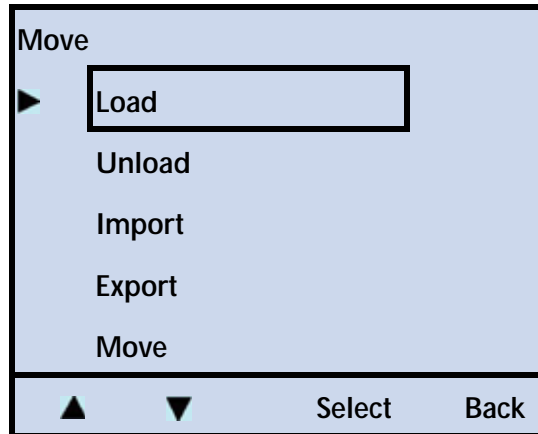

3. Press **Select**, and then press + or – to move through the slot choices. When the screen shows your “source” (moving from) choice, press **Select**.

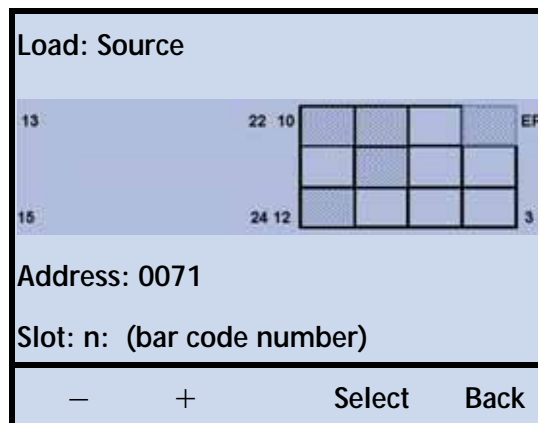

4. Press + or – to move through the tape drive choices (if more than one tape drive is installed). When the screen shows your “destination” choice, press **Select**.

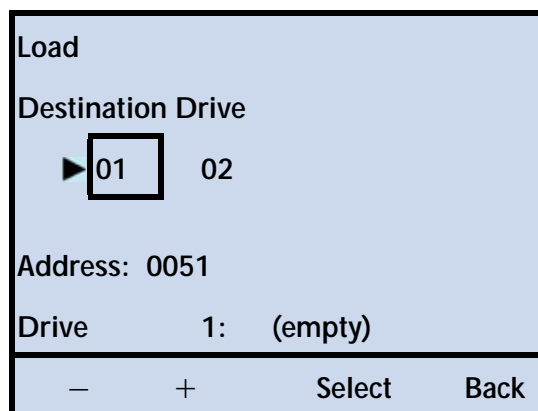

5. Press **OK** to continue, or **Back** to cancel.

▶ During the load, the front panel displays a Load Active message.


- ▶ After a successful Load, the library displays this confirmation message: **Load Good**. Once the message appears, press **OK** to continue.

6. Press **Back** (as needed) to return to the Home screen.


UNLOADING A CARTRIDGE FROM A TAPE DRIVE

To unload a cartridge from a tape drive:


1. At the Home screen, press **Move**.
If necessary, enter the operator panel password (see [page 73](#)).
2. Press ▼ until the selection arrow (▶) points to **Unload**.

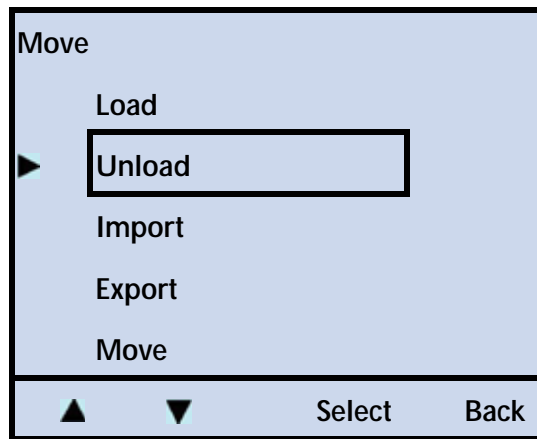

3. Press **Select**, and then press + or – to move through the tape drive choices (if more than one tape drive is installed). When the screen shows your “source” (moving from) choice, press **Select**.

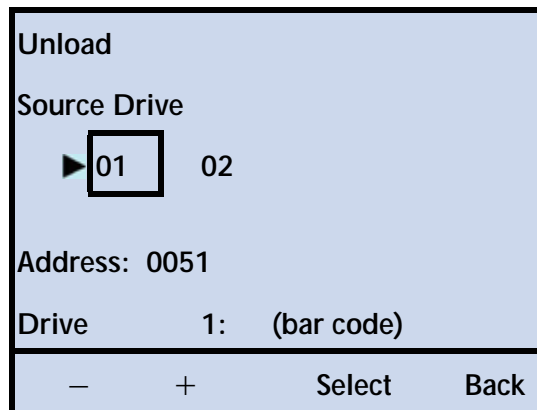

4. Press + or – to move through the slot choices. When the screen shows your “destination” (moving to) choice, press **Select**.

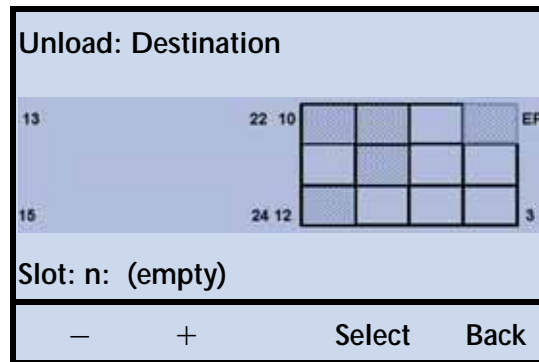


5. Press **OK** to continue, or **Back** to cancel.
 - ▶ During the unload, the front panel displays an Unload Active message.
 - ▶ After a successful Unload, the library displays this confirmation message: **Unload Good**. Once the message appears, press **OK** to continue.
6. Press **Back** (as needed) to return to the Home screen.

CLEANING THE TAPE DRIVE

Under normal operating conditions, the LTO Ultrium tape drive(s) installed in the library do not require regular cleaning. LTO Ultrium tape drives contain an automatic cleaning mechanism that allows them to clean themselves as necessary. Occasionally, a tape drive may require cleaning with a cleaning cartridge. LTO Ultrium tape drives monitor their cleaning needs internally and notify the library when they require cleaning.

- ▶ Auto cleaning disabled—Clean the tape drive(s) whenever the library displays the “Needs Cleaning” message on the Home screen, or your application software notifies you. Not all backup applications display cleaning requirements.

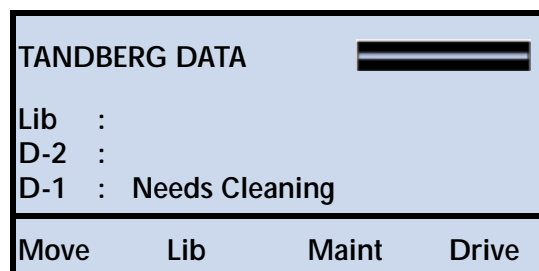

- ▶ **Auto cleaning enabled**—The library does not display this message if Auto Cleaning is enabled and a cleaning cartridge is in the fixed cleaning cell. In this case, the cleaning is done automatically (see “[Setting Up Automatic Tape Drive Cleaning](#)” on page 57).



Caution

Do not use any cleaning method other than the LTO Cleaning Cartridge. Using other cleaning methods will void your warranty.

Carefully follow all instructions and recommendations provided with the cleaning cartridge. Do not rewind and reuse the material in a cleaning cartridge. Reusing the material may redistribute contaminants previously removed from the tape path. If all of the cleaning material has been used, discard the cartridge and use a new cleaning cartridge.

You can clean the tape drive(s) in several ways:

To view this information...	go to...
Use the Library's Autoclean Function	page 136
Use your Backup Application's Cleaning Option	
Cleaning a Tape Drive Using the Clean Drive Option	

CHECK THE CLEANING CARTRIDGE STATUS

Before cleaning the tape drive, verify that the cleaning cartridge in the library is not depleted.

Notes: The cleaning count information is stored in the cartridge, so it must be used once to “start” the count. Until it is used the first time, the library displays an “unknown” (Remote Management Utility) or “no data available” (front panel) status.


If there is no barcode label on the cleaning cartridge, a power cycle causes the cleaning count information to be lost. If there is a barcode label on the cleaning cartridge, the library stores the information and recognizes it after a power cycle.

To view the status of the cleaning cartridge after it has been used:


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).


- Press ▼ until the selection arrow (▶) points to **Cleaning Options**.

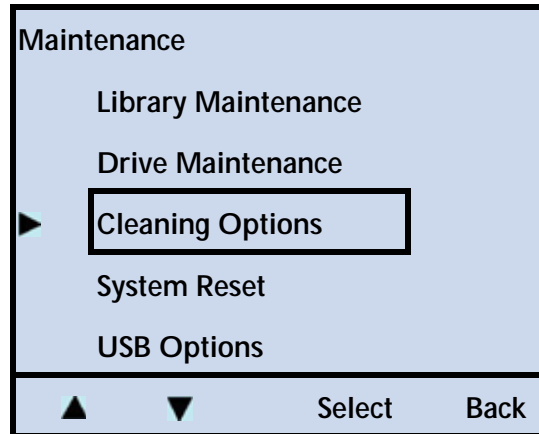

- Press **Select**.
- Press ▼ until the selection arrow (▶) points to **Cleaning Tape**, and then press **Select**.

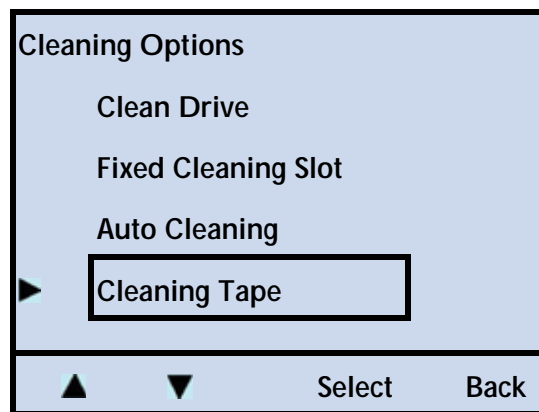

The library displays the number of cleanings left (if the count was previously started) or "No Data Available" (if the count was not previously started).

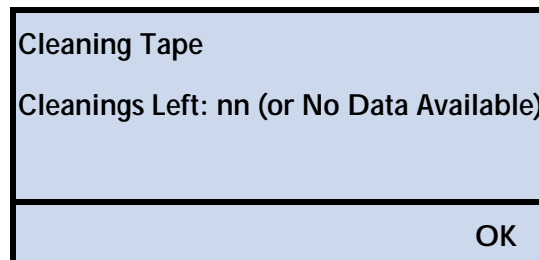

- Press **Back** (as needed) to return to the Home screen.

USE THE LIBRARY'S AUTOCLEAN FUNCTION

Set up automatic tape drive cleaning during library configuration, and store a cleaning cartridge in the library. See [page 57](#) for information about setting up automatic tape drive cleaning.

If the fixed cleaning slot is...	The library...
Enabled	attempts to load a cleaning cartridge from the fixed cleaning cell
Disabled	looks for a cleaning cartridge in the I/E port Once the cleaning cycle is complete, the cartridge will be returned to its original element (fixed cell or I/E port)

USE YOUR BACKUP APPLICATION'S CLEANING OPTION

Set the cleaning option in your backup application (if available) so that the software monitors tape drive cleaning requirements and automatically cleans the tape drive(s) using a cleaning cartridge stored in the library. Refer to your software documentation for information about setting this option.

CLEANING A TAPE DRIVE USING THE CLEAN DRIVE OPTION

Use the front panel Clean Drive option to clean the tape drive(s) when the library or backup application notifies you to do so. When you select the Clean Drive option, the library loads the cleaning cartridge into the tape drive, waits until the cleaning is finished, unloads the cleaning cartridge, returns it to its cell, and resumes normal operation.

Before using the Clean Drive option, make sure that you have turned the Auto Cleaning option OFF (see [page 59](#)).

The Clean Drive option allows you to select any slot/cell as the source for a cleaning cartridge, including an I/E Port. Determine the location of your cleaning cartridge, and then proceed.


Cleaning Cartridge	Condition	Description
Not stored in library	Cells all occupied	Use the Export command to remove a cartridge from the library, as described on page 122 . Before closing the I/E Port door, insert the cleaning cartridge.
	Cells not all occupied	Load the cleaning cartridge into an enabled I/E Port, and then select it as the "source" in Step 4 below.
Stored in library	I/E Port enabled	Store in Slot/Cell 2
	I/E Port disabled	Store in Slot/Cell 1

When a tape drive requires cleaning:


1. At the Home screen, press **Maint.**

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Cleaning Options**.

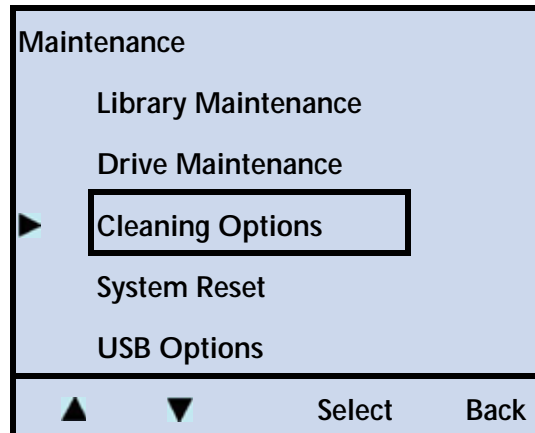


- Press ▼ until the selection arrow (▶) points to **Clean Drive**, and then press **Select**.

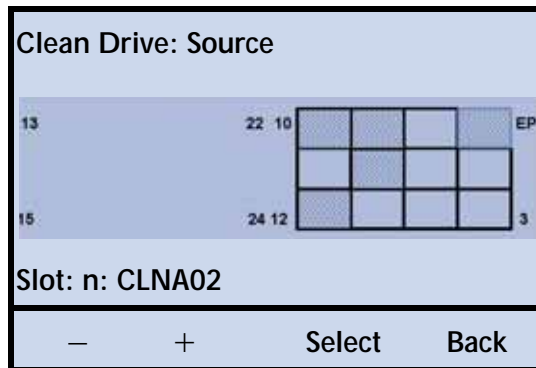

- Press + or - to select the “source” slot where the cleaning cartridge is located (either a slot or the I/E Port), and then press **Select**.

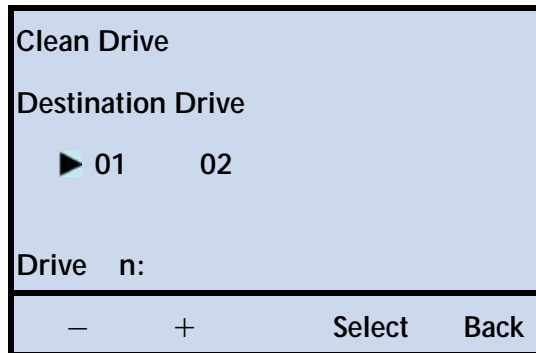

- Press + or - to toggle between tape drives (if more than one tape drive is installed), and then press **Select**.

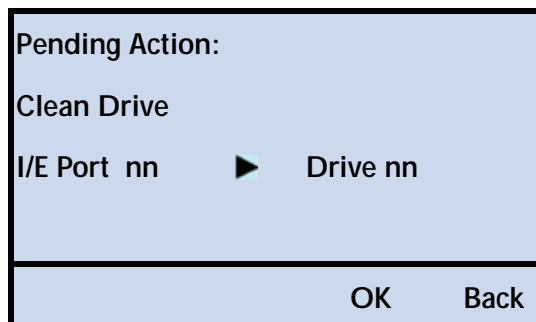

- Press **OK** to clean the tape drive, or **Back** to cancel the action.

! Important If there are no more cleaning cycles remaining on the cleaning cartridge, the tape drive ejects the cartridge immediately without performing the cleaning. Remove the cleaning cartridge from the library and use a new one. **Do not rewind and reuse the material in a cleaning cartridge. Reusing the material may redistribute contaminants previously removed from the tape path.**

- ▶ The tape drive automatically performs the cleaning in less than a minute and ejects the cartridge when finished.
 - ▶ During the cleaning, the front panel displays an Clean Drive Active message.
 - ▶ After a successful cleaning, the library displays this confirmation message: **Cleaning Good**. Once the message appears, press **OK** to continue.
 - ▶ If the cleaning was not successful, a message explaining the failure appears on the screen. You may be prompted to insert a new cleaning cartridge.
 - ▶ If necessary, use the **Export** command to remove the cleaning cartridge from the library, as described on [page 122](#). Before closing the I/E port door, insert the data cartridge you removed previously (if applicable). Then, firmly push the door closed.
7. Press **Back** (as needed) to return to the Home screen.

RESETTING THE LIBRARY

If the library or tape drive has encountered an error and is not operating as expected after you have tried the recommended corrective actions, you may need to perform a reset.

- ▶ Front panel reset—Instructions begin on [page 140](#).
- ▶ Back panel reset—You can reset both the library and the tape drive(s) by powering the library off and back on (press the **0** to power the library off, and then press the **1** to power the library back on).

Note: You may also be able to perform resets from your application software. Refer to your software documentation for instructions.

Resetting the library from the operator panel or powering the library off and back on causes it to perform its power-on self-test and a cartridge inventory. Powering the library off and back on to reset the tape drive(s) cause the tape drive to perform a power-on self-test and to rewind a loaded tape to the beginning.

! Important If you need to power the library off, first unload the cartridge from the tape drive(s), if possible. If you power the library off and back on while a cartridge is in a tape drive, the tape drive may have to perform a lengthy format recovery process.

If a cartridge is loaded in a tape drive when the library is powered off and back on, the tape drive rewinds the tape but does not eject the cartridge. Make sure that it is safe to overwrite the tape before performing a backup so that you don't lose previously recorded data. If necessary, unload the cartridge as described on [page 132](#).


Before resetting, make sure that the library or tape drive is not communicating across the bus. The reset may disrupt communications on the bus.

To reset the library from the operator panel:


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **System Reset**.

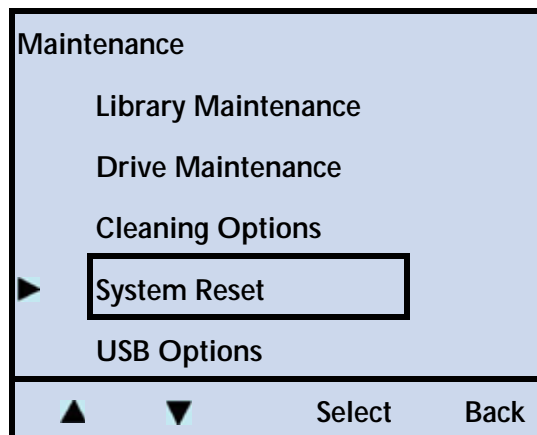

3. Press **Select**.

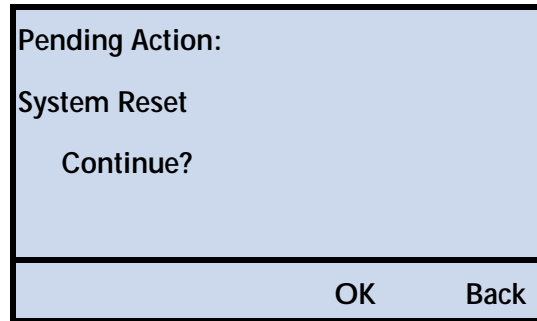

4. Press **OK** to reset the library, or **Back** to cancel the action.

The time it takes the library to reset is based on the number of cartridges in the library and the number of cartridges without bar code labels. The library takes considerably longer to perform an inventory on cartridges without bar code labels.

5. Press **Back** (as needed) to return to the Home screen.

STORING CARTRIDGES

Whenever you remove cartridges from your library, be sure to store them properly to maximize archival life and ensure data integrity. Follow these guidelines for proper cartridge storage:

- ▶ **Store cartridges in a suitable environment.** Follow the specifications for storage temperature and other environmental requirements, as described on the cartridge packaging. Do not allow the temperature and humidity in the storage environment to fluctuate.
- ▶ **Store cartridges with the write-protect switch in the protected position.**

If the switch...	the tape is...
does not cover the opening	write-enabled
covers the opening	write-protected

- ▶ **Keep the storage location as free of airborne particulates as possible.** To eliminate obvious sources of particulates, do not permit anyone to smoke, eat, or drink near the storage area, and do not store cartridges near a copier or printer that may emit toner and paper dust.
- ▶ **Store cartridges as soon as possible after you remove them from the library.** Immediate storage helps avoid many of the conditions that can damage tapes, such as temperature and humidity fluctuations, particulate contamination, and excessive handling.

NOTES

6

VIEWING LIBRARY INFORMATION

The library maintains an internal database containing extensive information about its configuration and operations. This information is available through the front panel. During day-to-day operation, you typically do not need to access this information. However, if you need to contact Tandberg Data Technical Support about your library, you may be asked to check and report back on various settings and event results.


This chapter explains how to view the following information.

To view this information...	go to...
Library information – library type, serial number, and SCSI ID (or WWNN or SAS Port number)	below
Library status – fans, cable, and temperature	page 145
Library history – event logs	page 148
Library statistics – view slots, drives, and I/E port	page 150
Library settings – emulation mode, operation mode, ethernet, I/E port, and the display and storage settings	page 153
Tape drive information – <ul style="list-style-type: none">▪ Tape drive status messages▪ SCSI tape drive–serial number, SCSI ID, and type, and the tape drive designated as the SCSI interface (bridge)▪ FC tape drive–NPort Address, Loop ID, Port number, and WWNN number▪ SAS tape drive–SAS Port ID, SAS address, Hashed SAS address, Negotiated Physical Link Rate, SAS signal detected, and Port initialization	page 155
Cartridge inventory	page 162

VIEWING BASIC LIBRARY INFORMATION

Because the library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface, the SCSI interface seen by the host is the SCSI interface (SCSI ID) of the tape drive.

All instructions begin at the library's Home screen.

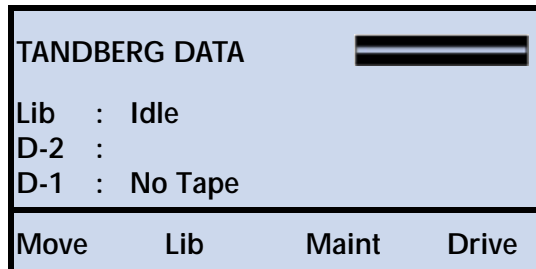


To check the library's basic information:

1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library ID**.

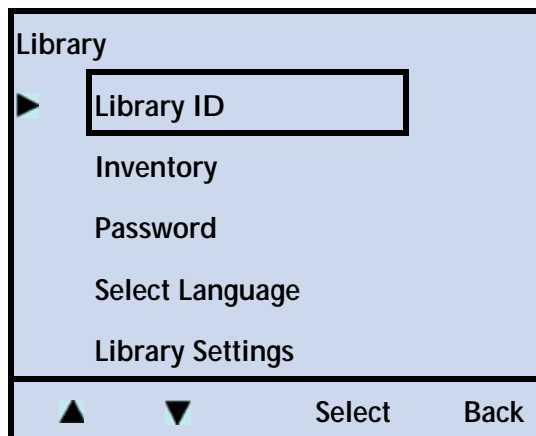

3. Press **Select**.

Library ID (manufacturer) (product name) nnnnnn nnnnnn (serial number) nnnnnn mmddyy (code level/date) SCSI ID: nn LUN: 01 (or WWNN or SAS Port number)
OK

! Important

Because the library uses the ADI serial interface, the SCSI ID indicates the ID of the tape drive.

The library appears to the host as LUN1 of the SCSI ID of the tape drive.

See the tape drive's *Product Manual* and the *Automation/Drive Interface - Command (ADC)* for more information.

4. Press **OK**.

5. Press **Back** (as needed) to return to the Home screen.

VIEWING LIBRARY STATUS

LIBRARY STATUS MESSAGES

Some examples of library status messages are shown in [Table 6-1](#) and [Table 6-2](#). The display for the library will be:

TANDBERG DATA			
Lib	:	<command>	
		<command-state>	
D-2	:		
D-1	:		
Move	Lib	Maint	Drive

Table 6-1 shows the < command > messages for the library.

Table 6-1 Library command status messages

Message	Meaning
Idle	No command is active (the library is idle).
Initialize	The library is initializing hardware.
Abort	The library is cancelling the current command.
Digital Self Test	The library is executing a test of its electronics.
Update Inventory	The library is scanning the barcodes to update its inventory.
Position	The library is positioning the robot to an element (slot, I/E port, or tape drive).
Move Medium	The library is moving medium from one location to another.
Unlock I/E Port	The library is unlocking the I/E port.
Unlock Mag	The library is unlocking a magazine.
Clean Drive	The library is cleaning a tape drive.
Park Robot	The library is parking the robot for moving or shipping.

Table 6-2 shows the current state < command-states > of the commands.

Table 6-2 Library command-state status messages

Message	Meaning
Calibrate	The library is calibrating a mechanism.
Positioning	The library is positioning the robot to the desired location.
Loading	The library is loading a cartridge into a tape drive.
Wait Drive Load	The library is waiting for a tape drive to complete a load.
Unloading	The library is unloading a cartridge from a tape drive.
Wait Drive Unload	The library is waiting for a tape drive to complete an unload.
Scanning	The library is scanning a bar code.
Unlock	The library is unlocking the I/E port or a magazine.
Lock	The library is locking the I/E port.
Picking	The robot removing a cartridge from an element (slot, I/E port, or a tape drive).
Putting	The robot placing a cartridge into an element (slot, I/E port, or a tape drive).

If a hardware error occurs, an error message appears on the Home screen. Refer to [Chapter 8](#) and [Appendix E](#) for help in diagnosing and correcting errors. You must correct the error before operation can continue.


STATUS INFORMATION

To check the library's status:

1. At the Home screen, press **Maint.**


If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library Maintenance**.

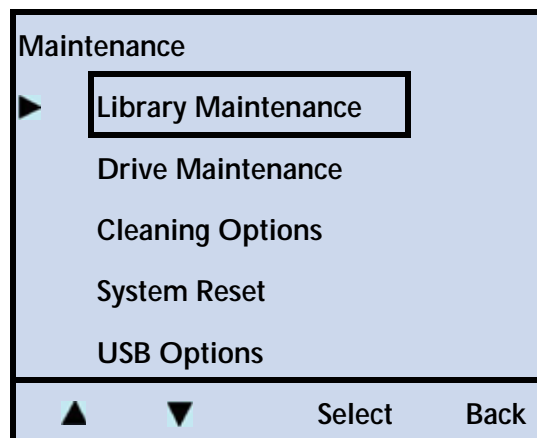

3. Press **Select**.

4. Press ▼ until the selection arrow (▶) points to **Library Status**.

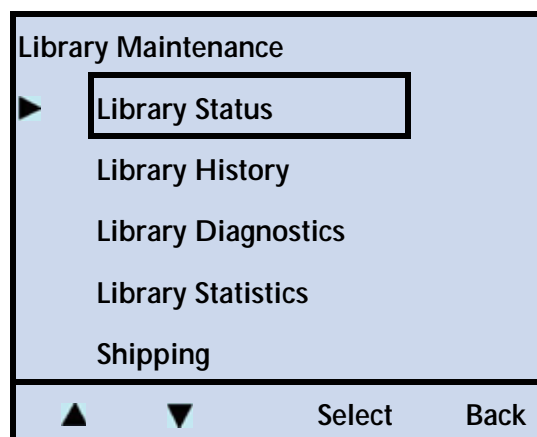

5. Press **Select**. A screen similar to this one appears.

Library Status			
Power Fan	:	Good	
System Fan	:	Good	
Right Cable	:	Good	
Temperature	:	nn°	nn°F
HW: 02	02	05	07 03
			OK

6. Press **OK**.
7. Press **Back** (as needed) to return to the Home screen.

VIEWING LIBRARY HISTORY

The library history (sometimes called the event log) lists any events that prevented a library operation from completing (up to four events). If you contact Tandberg Data Technical support, you may be asked to check this history buffer to help troubleshoot a problem. The most recent event appears first.

The library displays the event logs in this format:


Example history screen	Definition
Library History	Page Title
#1	History entry number
Move Medium	Command that failed
Servo Failure	Type of error
Slot: 1	Primary slot involved
Power time: 1234567890	Cumulative power-on time (minutes)

To view the library's history:


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Library Maintenance**.

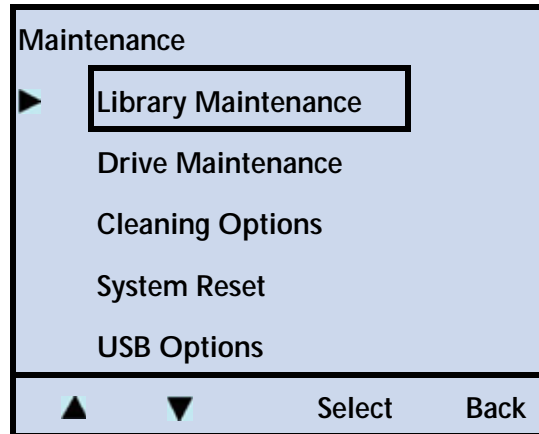


3. Press **Select**.
4. Press ▼ until the selection arrow (▶) points to **Library History**.

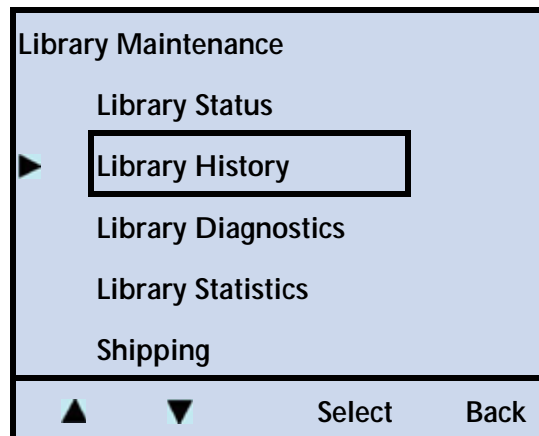

5. Press **Select**. A screen similar to the following one appears (Library History #0).

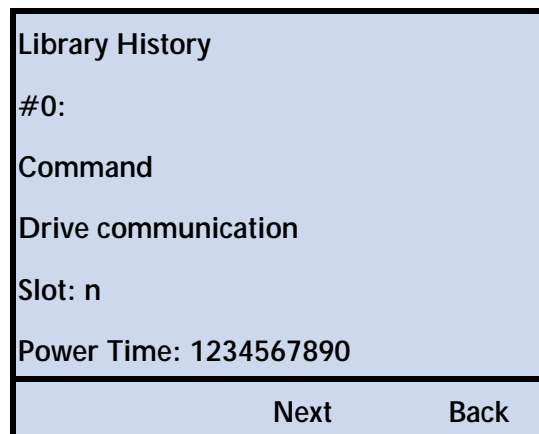

- Press **Next** to view the next screen (Library History #1).

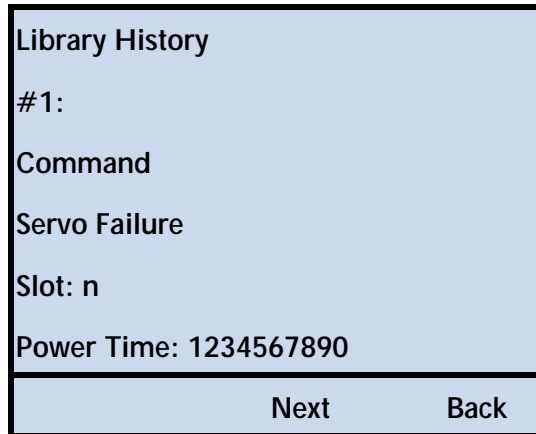

Note: Continue pushing the “Next” button to cycle through the remaining Library History screens.

- Press **Back** (as needed) to return to the Home screen.

VIEWING LIBRARY STATISTICS


The library’s statistics menu provides you with information on the slots, the tape drive(s), and the I/E port.

VIEWING SLOTS

- At the Home screen, press **Maint**.


If necessary, enter the operator panel password (see [page 73](#)).

- Press ▼ until the selection arrow (▶) points to **Library Maintenance**.

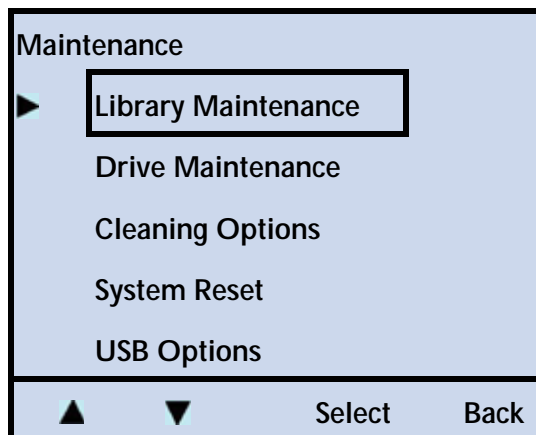


- Press **Select**.


4. Press ▼ until the selection arrow (▶) points to **Library Statistics**.

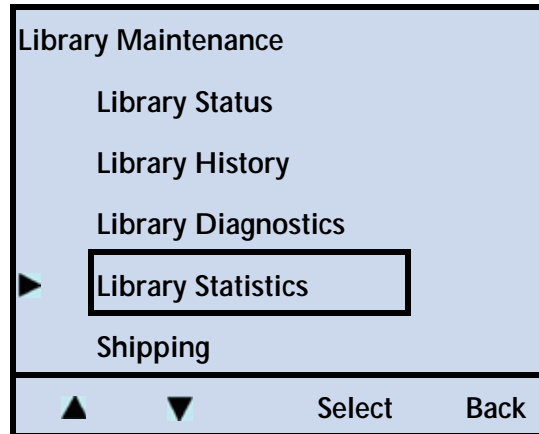

5. Press **Select**, and then press ▼ until the selection arrow (▶) points to **View Slots**.

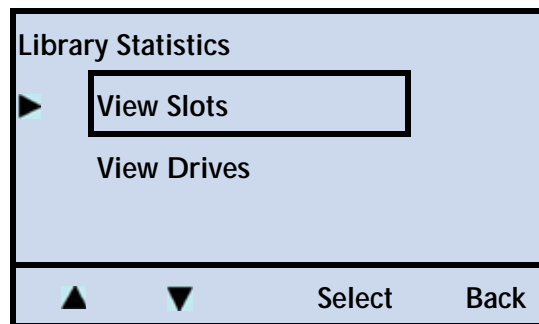

6. Press **Select**. A screen similar to this one appears. In this example, slot 1 (the I/E Port) is highlighted. Press + or - to move through the slots.

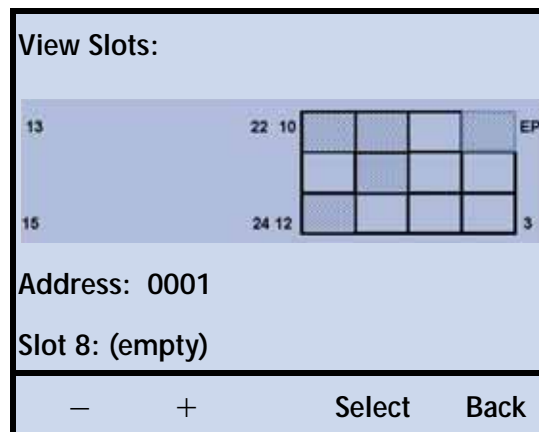

Notes: The screen above shows the library with only one magazine installed.


7. Press **Back** (as needed) to return to the Home screen.

VIEWING TAPE DRIVE(S)

1. At the Home screen, press **Maint.**


If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library Maintenance**.

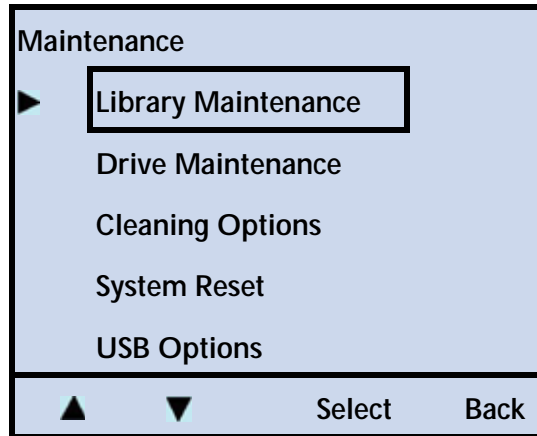


3. Press **Select**.

4. Press ▼ until the selection arrow (▶) points to **Library Statistics**.

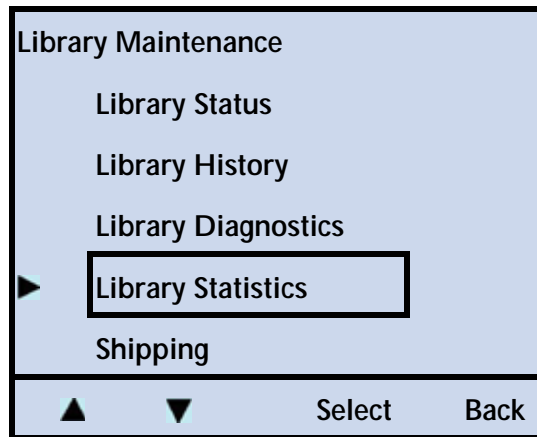


5. Press **Select**. Press ▼ until the selection arrow (▶) points to **View Drives**.

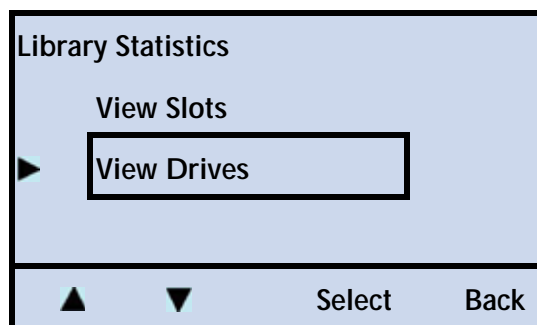


6. Press **Select**. A screen similar to the following one appears.

Press + or – to advance through the tape drives (if more than one tape drive is installed in the library).

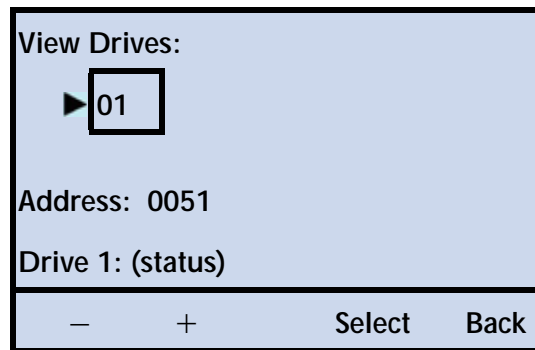

Note: The screen above shows the library with only one tape drive installed.

7. Press **Select**. A screen similar to this one appears.

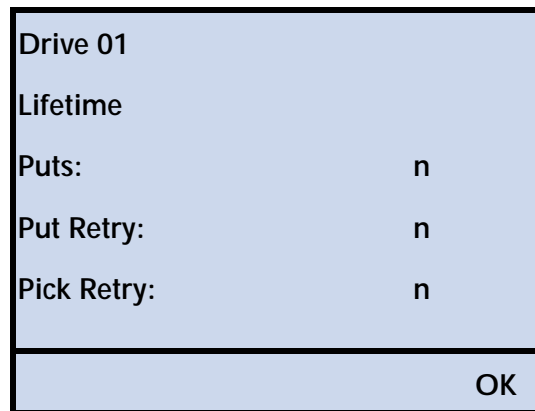

8. Press **OK**.
9. Press **Back** (as needed) to return to the Home screen.

VIEWING LIBRARY SETTINGS


You may need to access the library settings before performing some of the maintenance procedures described in [Chapter 7](#).

To view the library's settings:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).

- Press ▼ until the selection arrow (▶) points to **Library Settings**.

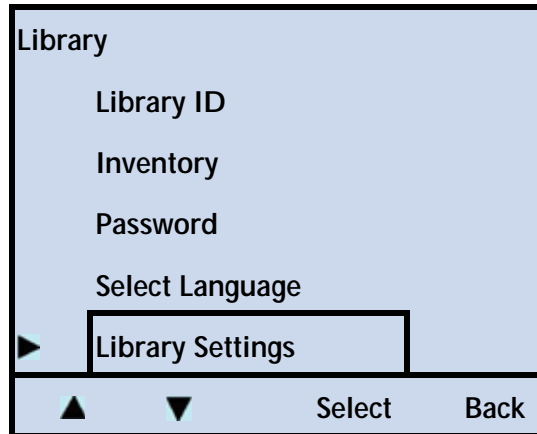

- Press **Select**.
- Press ▼ until the selection arrow (▶) points to the setting that you wish to view.

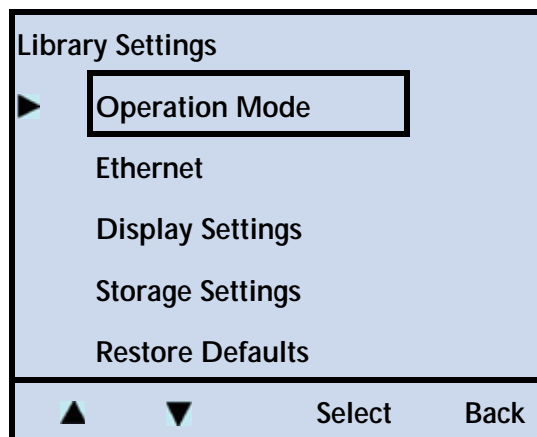

- Press **Select**.
- Repeat these steps to view the library's settings.

To change the...	See...
Emulation mode (under Operation Mode) ^a	page 54
Operation mode (Random or Sequential)	page 124
Ethernet settings	page 61
Display settings	page 39
Storage settings (slot count)	page 43
(I/E port enabling)	page 45
To restore the default settings	page 75

^a Go to [page 35](#) to view the home screen menu to help navigate through the options.

7. Press **Back** (as needed) to return to the Home screen.

VIEWING BASIC TAPE DRIVE INFORMATION

TAPE DRIVE STATUS MESSAGES

Some examples of tape drive status messages are:

Table 6-3 Tape drive status messages

Message	Meaning
D-n: Ready	A tape is loaded in the tape drive and is ready for write or read operations.
D-n: No tape	No tape is loaded in the tape drive. See "Loading and Unloading Cartridges in the Tape Drive" on page 130.
D-n: Tape Ejected	The tape drive ejected a tape and it is located at the tape drive's door. See "Loading and Unloading Cartridges in the Tape Drive" on page 130.
D-n: Loading	The tape drive is loading the tape.
D-n: Unloading	The tape drive is unloading the tape.
D-n: Needs Cleaning	The tape drive requires cleaning. See "Cleaning the Tape Drive" on page 133.
D-n: Cleaning	The tape drive is in the process of using a cleaning cartridge.
D-n: Replace Cln Cart	The cleaning cartridge has reached the end of its useful life and must be replaced.
D-n: Writing+	The tape drive is currently writing data to tape with compression on.
D-n: Writing	The tape drive is currently writing data to tape with compression off.
D-n: Reading	The tape drive is currently reading data from the tape.
D-n: Erasing	The tape drive is erasing data from the tape.
D-n: Locating	The tape drive is locating data on the tape.
D-n: Rewinding	The tape drive is rewinding the tape.

Table 6-4 IBM-specific tape drive status messages

Message	Meaning	
IBM Message	Error Code	Message (display condition)
D-n: No error	0	Not used
D-n: Cooling Problem	1	The tape drive detected an over-temperature condition. The error clears when the tape drive is powered off.
D-n: Power Problem	2	The tape drive detected that the externally supplied power is outside the specified voltage limits. The error clears when the tape drive is powered off.

Table 6-4 *TIBM-specific tape drive status messages (continued)*

Message	Meaning	
D-n: Microcode Problem	3	The tape drive determined that a microcode error occurred. A tape drive “dump” is required prior to powering-off the tape drive.
D-n: Microcode or Drive Problem	4	The tape drive determined that a tape drive hardware or microcode failure occurred. A tape drive “dump” is required prior to powering-off the tape drive.
D-n: Drive Error	5	The tape drive determined that a tape drive hardware failure occurred. Tape drive replacement is required.
D-n: Drive or Media Error	6	The tape drive determined that an error occurred, but cannot isolate it to faulty hardware or media. The error clears when the cartridge is unloaded.
D-n: Media Error	7	The tape drive determined that an error occurred because of faulty media. TA tape drive “dump” is required prior to unloading the tape in the drive.
D-n: SCSI Bus Interface or Fibre Channel Error	8	The tape drive determined that a primary port interface error or Fibre Channel error occurred. The error clears after 10 seconds if the error condition does not reoccur.
D-n: RS422 Error	9	The tape drive determined that an interface or library interface failure occurred. The error clears after 10 seconds if the error condition does not reoccur.
D-n: Drive Error	A	The tape drive determined that a tape drive hardware error occurred. The error clears when the tape drive is powered off. The tape drive is not disabled.
D-n: Drive Needs to be Cleaned	C	The tape drive determined that it needs to be cleaned. The error clears when the tape drive is cleaned.
D-n: Fibre Port Offline	E	The Fibre port is offline.
D-n: Drive of Fibre Channel Error – NO LIGHT	F	Displayed If dip switch 3 is “on” and the tape drive does not see light or when a Fibre wrap diagnostic fails because the tape drive did not see the light.
NA	H	Reserved for future use.
D-n: Write Protect Error	P	The cartridge is in a physical or logical write-protect state or an Illegal Write sequence was attempted with a WORM cartridge.
NA	J	Reserved for future use.
NA	c	Reserved for future use.
D-n: Fibre AL_PA conflict	d	Two tape drives on the Fibre Channel loop have the same AL_PA.
D-n: Encryption Verification Error	e	Corruption may have occurred in the VPD related to the Drive encryption certificate. This is not reparable in the field.
NA	h	Reserved for future use.
NA	n	Reserved for future use.
NA	u	Reserved for future use.


LVD SCSI TAPE DRIVE—BRAND AND SERIAL NUMBER

To check a tape drive's type and serial number:


1. At the Home screen, press **Drive**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Drive ID**.

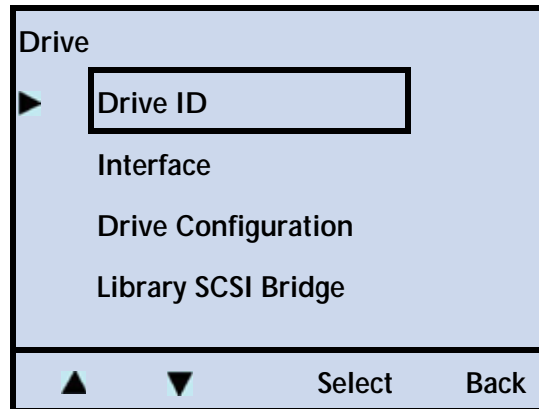

3. Press **Select**.

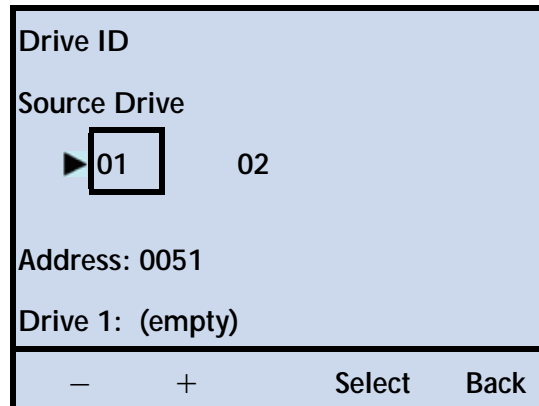

4. Press **+** or **-** to toggle between tape drives (if more than one tape drive is installed), and then press **Select**.

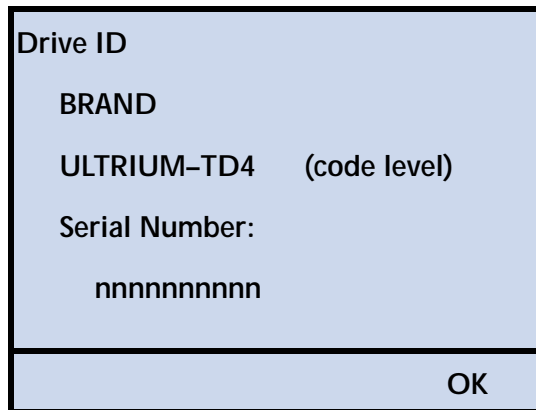


5. Press **OK**.
6. Press **Back** (as needed) to return to the Home screen.

LVD SCSI, FIBRE CHANNEL, OR SAS TAPE DRIVE—INTERFACE

To view a tape drive's interface information:

1. At the Home screen, press **Drive**.
If necessary, enter the operator panel password (see [page 73](#)).
2. Press **▼** until the selection arrow (▶) points to **Interface**.

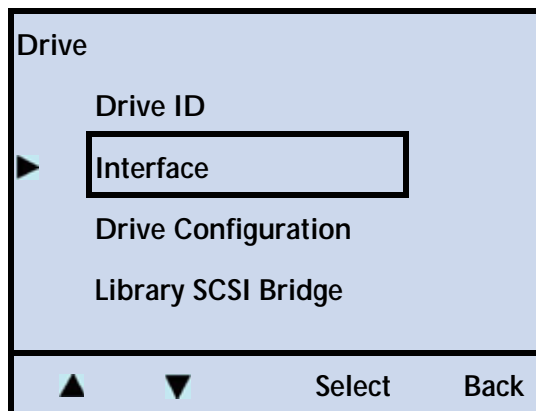

3. Press **Select**.

Interface			
Source Drive			
▶	01	02	
Address: 0051			
Drive n: (empty)			
–	+	Select	Back

4. Press + or – to toggle between tape drives (if more than one tape drive is installed), and then press **Select**.

SCSI Tape Drive

Drive SCSI ID	
Drive nn	
SCSI ID: n	
Modify	OK

Note: See “[Changing the SCSI IDs or WWNN Number](#)” on page 49 for instructions on how to change the tape drive SCSI IDs.

Fibre Channel Tape Drive

FibreChannel	
Drive nn	
N Port Address: nnnnnn	
Loop-ID: nl	
Port:	nnnnnnnnnnnnnnnnnn
WWNN:	nnnnnnnnnnnnnnnnnn
OK	

SAS Tape Drive

SAS		
Drive nn		
Port: 500507631242aebd (example)		
Addr	:	nnnnnnnnnnnnllll
Hash	:	nnllll
PHY: 0	Signal: 0	PIC: 0
		OK

Name	Description
Port	SAS Port ID
Addr	SAS address
Hash	Hashed SAS address
PHY	Negotiated Physical Link Rate
Signal	SAS signal detected on at least one Phy in the SAS port
PIC	Port initialization has successfully completed

5. Press **OK**.
6. Press **Back** (as needed) to return to the Home screen.


TAPE DRIVE CONFIGURATION (TYPE)

To check a tape drive's serial number:


1. At the Home screen, press **Drive**.

If necessary, enter the operator panel password (see [page 73](#)).

- Press ▼ until the selection arrow (▶) points to **Drive Configuration**.

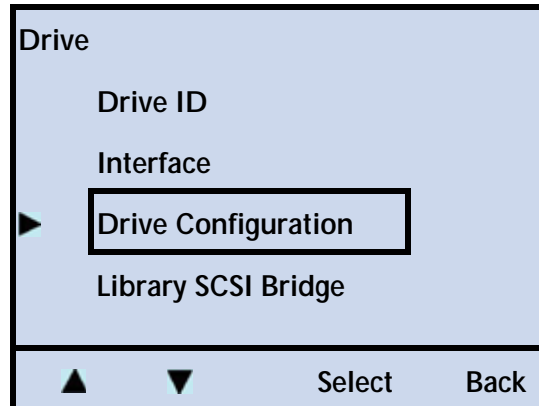

- Press **Select**.

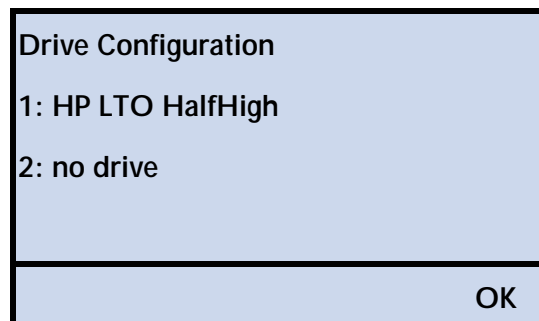

- Press **OK**.
- Press **Back** (as needed) to return to the Home screen.

TAPE DRIVE SCSI BRIDGE INTERFACE

If you have two tape drives installed in the library, you can assign one of them to act as the primary SCSI interface (bridge) for the library. If you have only one tape drive installed, it automatically acts as the SCSI bridge.

For instructions on how to assign one of the tape drives to act as the SCSI interface (bridge), see [“Tape Drive SCSI Interface \(Library Bridge\)” on page 52](#).

Note: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive.


See the tape drive *Product Manual* for tape drive information.
See *Automation/Drive Interface - Command (ADC)* for ADI information.

To check a tape drive’s SCSI interface (bridge) assignment:


- At the Home screen, press **Drive**.

If necessary, enter the operator panel password (see [page 73](#)).

- Press ▼ until the selection arrow (▶) points to **Library SCSI Bridge**.

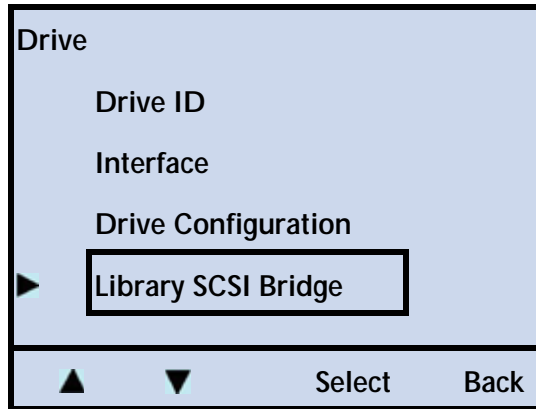

- Press **Select**.

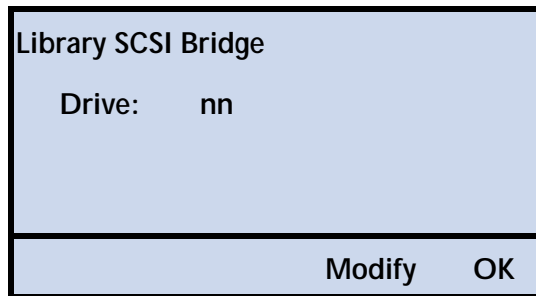

- Press **OK**.
- Press **Back** (as needed) to return to the Home screen.

VIEWING AND UPDATING THE CARTRIDGE INVENTORY

The library maintains a cartridge inventory to keep track of where cartridges are located. In performing an inventory, the library checks for cartridges in the cells and scans each cartridge's bar code label. The library uses this information to process commands from an application.

VIEWING CARTRIDGE INVENTORY

A cartridge inventory is automatically performed each time the library is powered on, each time a cartridge is inserted or removed from the library, and each time a magazine is inserted into the library. You can view the cartridge inventory to quickly determine which cells contain cartridges and whether a cartridge is loaded in a tape drive.


Magazine inventory (slots)

To view the magazine inventory:


- At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).


- Press ▼ until the selection arrow (▶) points to **Inventory**.

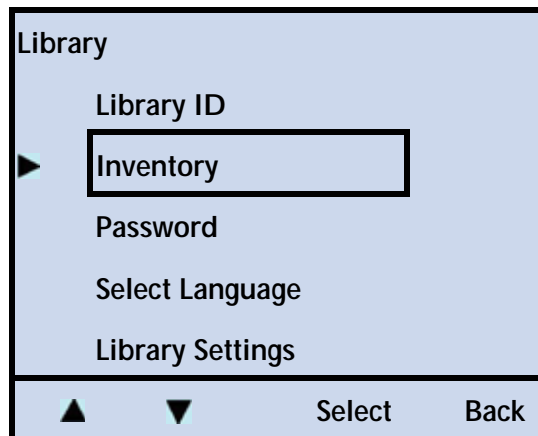

- Press **Select**.
- Press ▼ until the selection arrow (▶) points to **View Slots**.

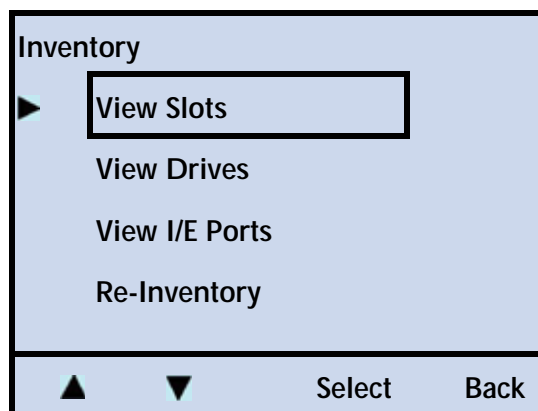

- Press **Select**.

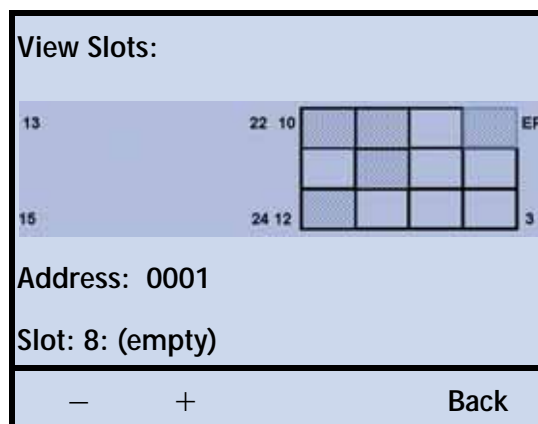

Notes: The slot/cell count changes depending on whether you have the I/E Port and the fixed cleaning slot enabled or disabled. If there is no cartridge in the slot/cell that you are viewing, the library indicates an (empty) status.

If you enabled the Media Identifier (see “[Enabling the Media Identifier](#)” on page 47), the library also displays the type of cartridge (LTO-5, LTO-4, and so forth). The library scans the bar code label, not the cartridge, so if you affix an LTO-4 bar code label to an LTO-5 data cartridge, it displays as an LTO-4 cartridge.

6. Press **+** or **-** to move between the slots.

This moves the cursor to the next (or previous) occupied slot and shows the slot number and the barcode number (if there is a cartridge and it has a barcode). The library skips slots that do not contain a cartridge.

7. Press **Back** (as needed) to return to the Home screen.


Tape drive inventory

To view a tape drive’s inventory:


1. At the Home screen, press **Lib**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press **▼** until the selection arrow (**▶**) points to **Inventory**, then press **Select**.

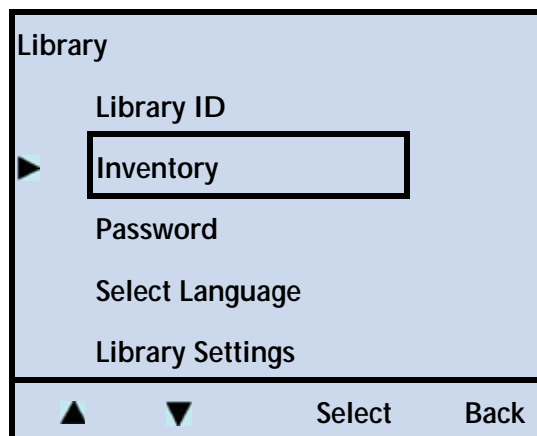

- Press ▼ until the selection arrow (▶) points to **View Drives**.

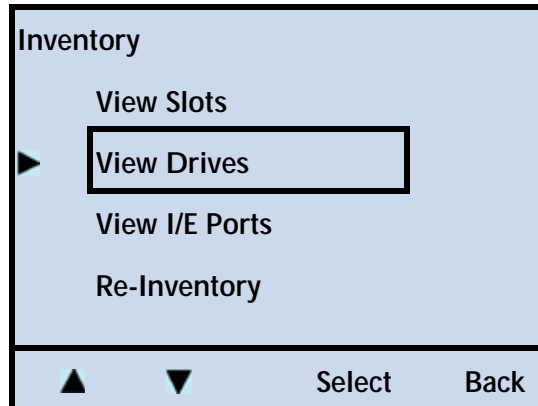

- Press **Select**.

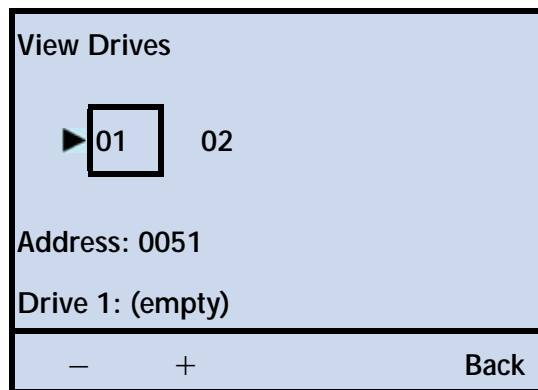

Notes: If there is no cartridge in the tape drive that you are viewing, the library indicates an (empty) status. If the tape drive contains a cartridge, the library lists the bar code information.

- Press + or – to toggle between the tape drives (if you have two tape drives installed).
- Press **Back** (as needed) to return to the Home screen.


I/E port inventory

To view the I/E port inventory:

- At the Home screen, press **Lib**.


If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Inventory**.

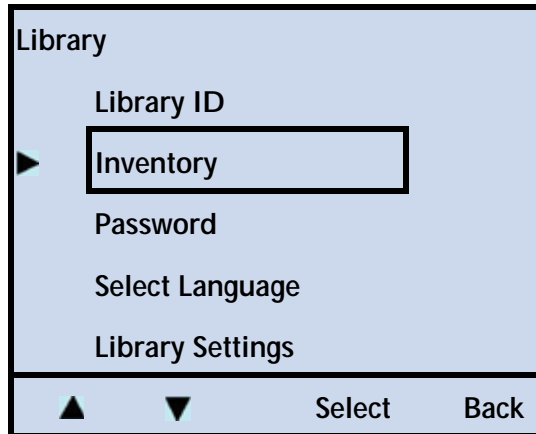


3. Press **Select**.

4. Press ▼ until the selection arrow (▶) points to **View I/E Ports**.

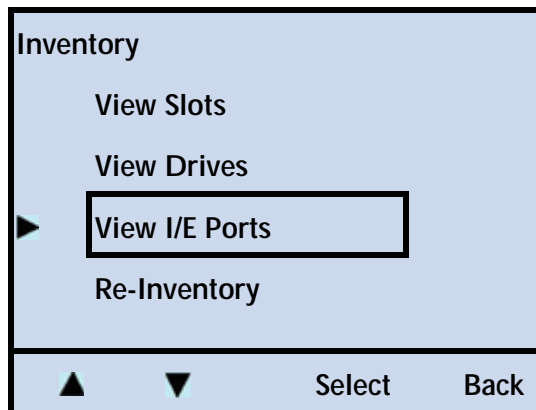

5. Press **Select**.

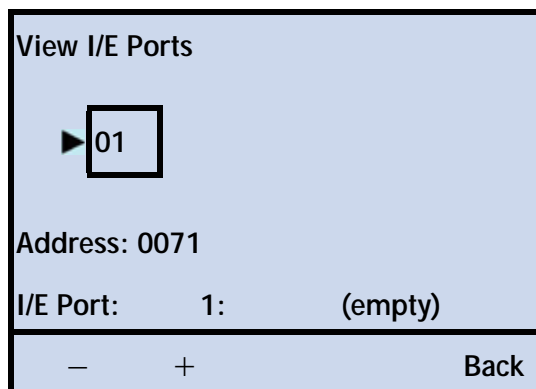

Notes: If there is no cartridge in the I/E Port, the library indicates an (empty) status. If the I/E Port contains a cartridge, the library lists the bar code.

If the I/E Port is *not* enabled, the following screen appears:



6. Press **Back** (as needed) to return to the Home screen.

! Tip To issue a Re-inventory command in case of errors reading the bar code labels, see ["Issuing a Re-inventory Command to the Library" on page 128.](#)

NOTES

7

MAINTENANCE

This chapter describes basic library maintenance tasks that you can perform on-site without the aid of a service technician. .

To view this information...		go to...
Installing or replacing a tape drive		below
Removing cartridges without power – from the library or tape drive		page 179
Cleaning the library		page 180
Running tape drive diagnostics – self test		page 180
Running library diagnostics – system tests and demos		page 182
Upgrading library firmware	using FTP	page 189
	using LibTool	page 190
	using the USB port	page 190
Creating library diagnostic listings	Using FTP	page 189
	using the USB port	page 191
Upgrading tape drive firmware and creating diagnostic listings	using LTOTool	page 193
Upgrading tape drive firmware and creating diagnostic listings	using the USB port	page 194



Caution

Do not attempt to replace any components in the library, other than the tape drive. If you do so, you will void your warranty.

INSTALLING OR REPLACING A TAPE DRIVE

This section describes how to install or replace a tape drive in the library. Please read the [General Information](#) section, and the entire section that you are using prior to beginning the procedure.

GENERAL INFORMATION

Note: If your library is installed in a rack, it is *not* necessary to remove the library from the rack to complete this procedure. It is also not necessary to disconnect the Ethernet cable from the back of the library.

- ✓ **Obtain these items**—a #2 Phillips screwdriver and a small flat-blade screwdriver.
- ✓ **Ensure that the environment is free of conditions that could cause electrostatic discharge (ESD)**—If possible, use an antistatic mat and a grounded static protection wristband during installation. If a mat and wristband are not available, touch a known grounded surface, such as a computer's metal chassis.



Warning

Before performing any installation or maintenance procedures, be sure that the library's power switch is off and that the power cord is disconnected from the library and the outlet.



Warnung

Vor der Ausführung von Installations- oder Wartungsarbeiten ist darauf zu achten, daß der Library-Netzschalter auf "Aus" gestellt ist und daß das Anschlußkabel vom Library und der Steckdose entfernt ist.



Advertencia

Antes de realizar cualquier procedimiento de instalación o de mantenimiento, comprobar que el interruptor de alimentación de la biblioteca está apagado y que el cable de alimentación no está enchufado ni a la biblioteca ni a la toma de corriente.

The library accommodates Ultrium 5 (LTO-5), Ultrium 4 (LTO-4), Ultrium 3 (LTO-3), or Ultrium 2 (LTO-2) tape drives and both half height (HH) and full height (FH) configurations. The library does *not* accommodate LTO-1 tape drives.


! Important

The tape drives must be specially configured (at the factory) for use in a Tandberg Data library. Purchase tape drive kits only from Tandberg Data or Tandberg Data-approved suppliers.

To view this information...	go to...
Installing a tape drive	page 174
Resuming operation	page 177
Confirming the installation	page 178
Reference Illustrations (including serial and power cable routing)	page 171

Note: Most of the illustrations show SCSI configurations. Use the same steps to install Fibre Channel or SAS tape drives.

REFERENCE ILLUSTRATIONS

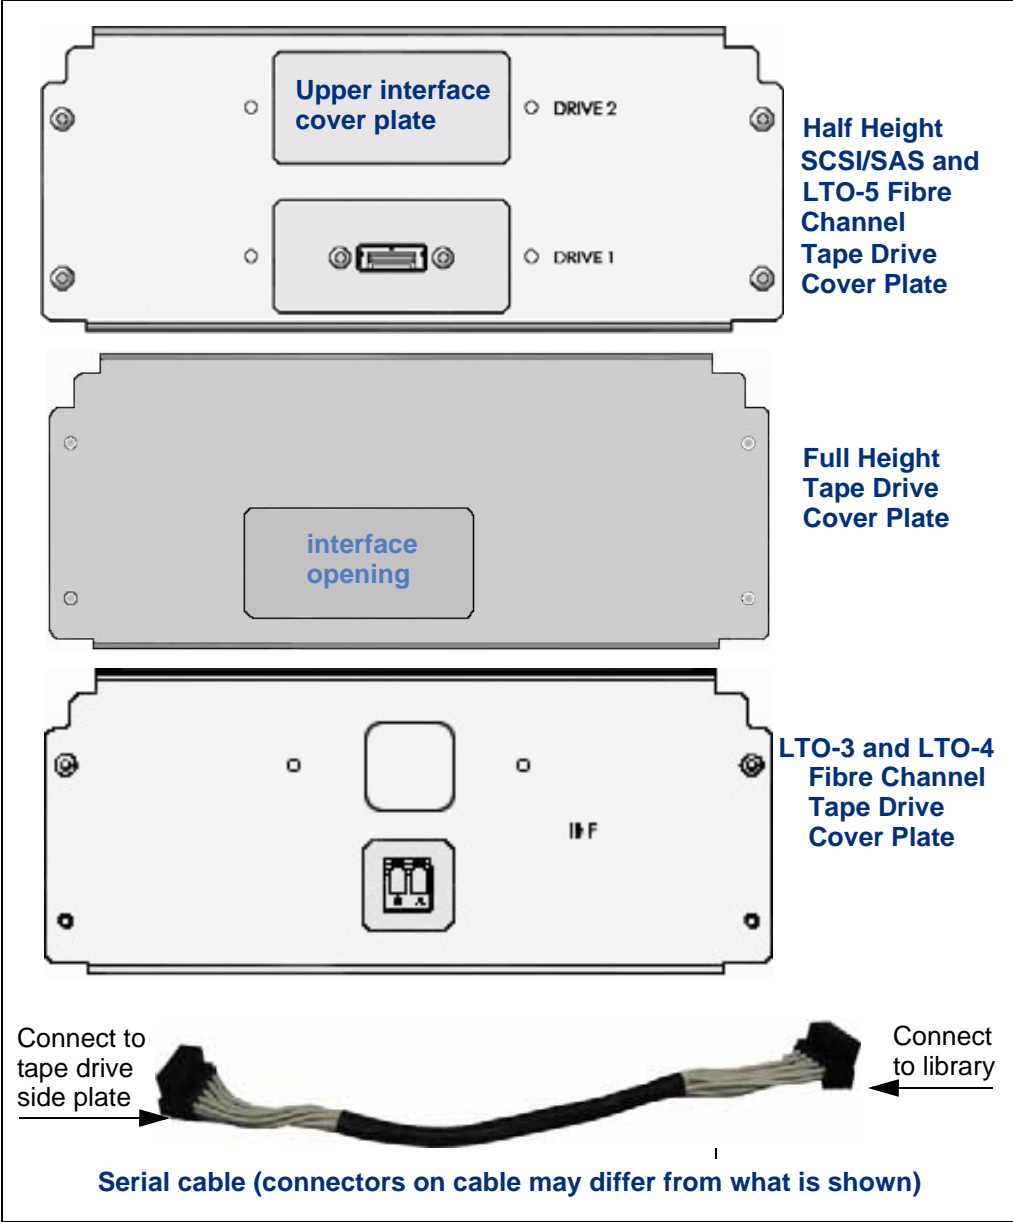

! Important

Be sure to use the serial cable that came with your replacement kit. The serial cables are specifically configured (at the factory) for use with the individual tape drives.

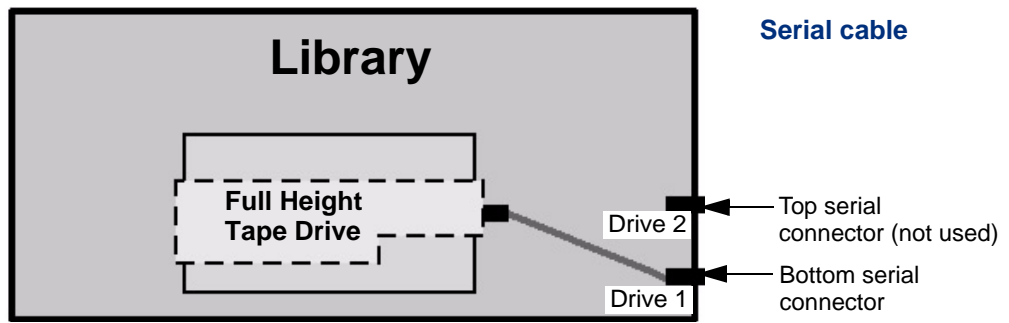


Figure 7-1 Serial cable routing—full height tape drive

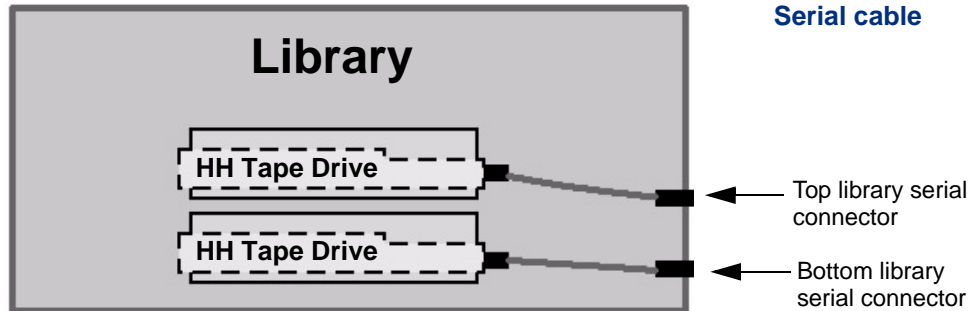


Figure 7-2 Serial cable routing—half height tape drives

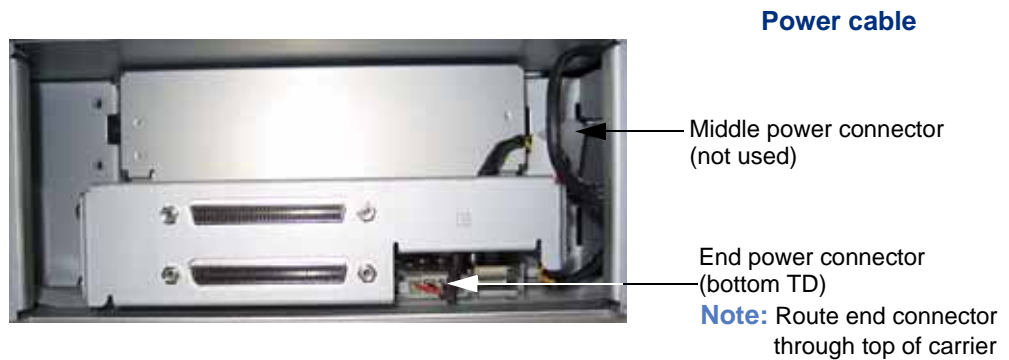


Figure 7-3 Power cable routing— IBM full height Fibre Channel or SCSI (pictured) tape drive

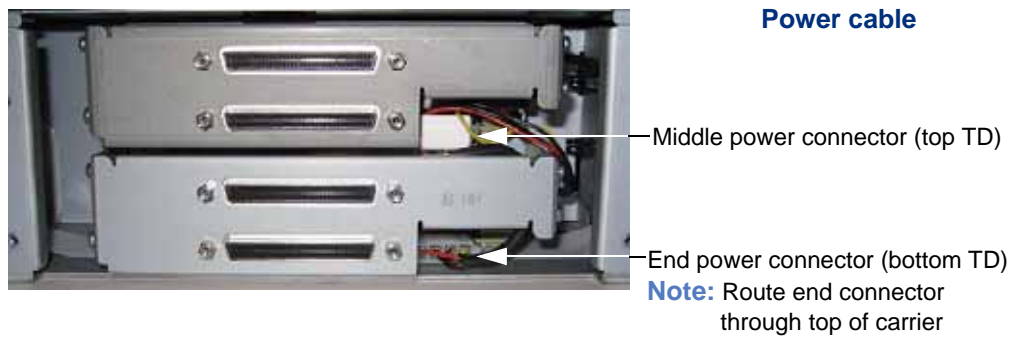


Figure 7-4 Power cable routing— IBM half height SCSI tape drive



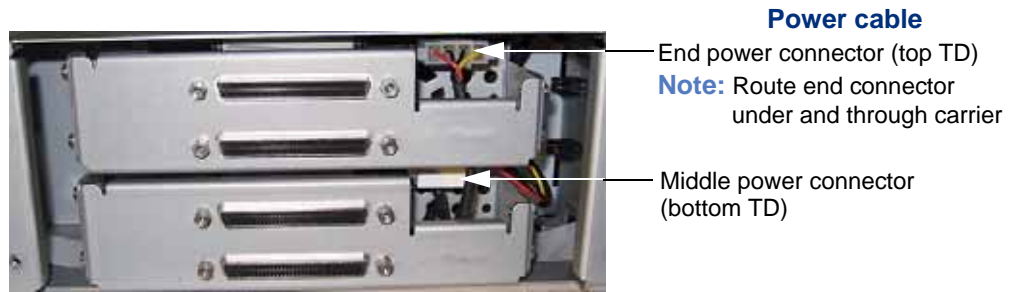


Figure 7-5 Power cable routing— HP half height SCSI tape drive

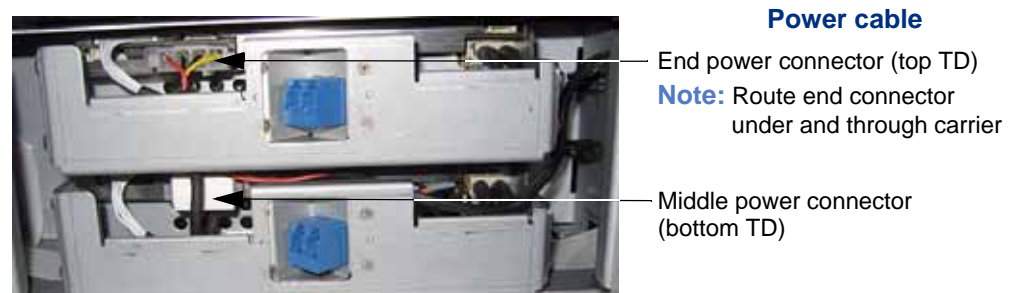

Note: In some cases, a power jumper cable may be needed. Refer to Appendix F for more information.

Figure 7-6 Power cable routing— HP half height Fibre Channel tape drive (LTO-4 tape drive pictured)

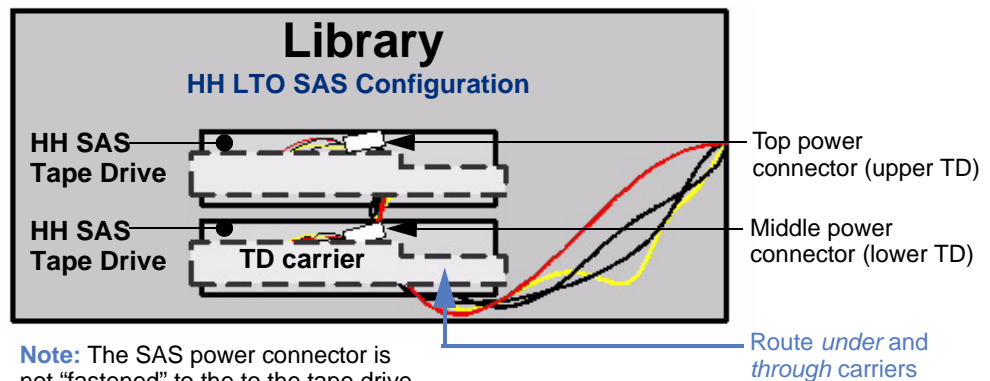

Note: The SAS power connector is not “fastened” to the to the tape drive. Gently push it below the top of the carrier after making the connection.

Figure 7-7 Power cable routing—half height SAS tape drive

Note: The above illustration shows an IBM drive configuration. HP LTO SAS tape drives may be slightly different.

INSTALLING A TAPE DRIVE

To install a tape drive (or tape drives) complete the following steps:

1. Preparing for installation
2. Removing an existing drive (if applicable)
3. Installing the tape drive(s)
4. Completing the installation

! Important

You must update your T24 library to the current firmware (v. V1C260 or higher) before you install your new drive. The firmware allows the library to auto-configure the tape drive installation upon power up, eliminating the step of manually configuring the library after tape drive installation.

If your library code is not updated to v. V1C260 or higher, you will need to contact Tandberg Data technical support for manual configuration instructions.

1. Preparing for installation —

- a. Update library firmware to v. V1C260 or higher (see Important note above).
- b. Power off the host.
- c. Power off the library (press the **0** on the back of the unit).
- d. Disconnect the power cord, the interface cable(s), and the terminator (applies to SCSI only).
- e. Remove the tape drive cover plate. Set the plate and the screws aside.

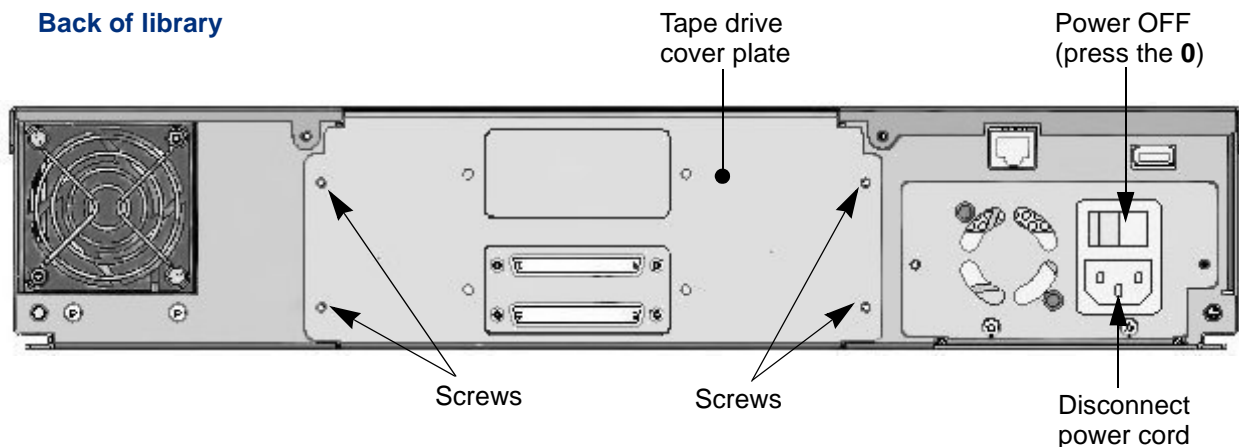


Figure 7-8 Tape drive cover plate (half height SCSI library pictured)

- f. Remove the internal cooling plate — This step is necessary if you are installing one full height or two half height tape drives. If you are installing only one half-height drive, go to the next step.

Remove the two screws (A) holding the tape drive cooling plate (B). Remove the plate, and discard it and the screws.

Looking inside back of library

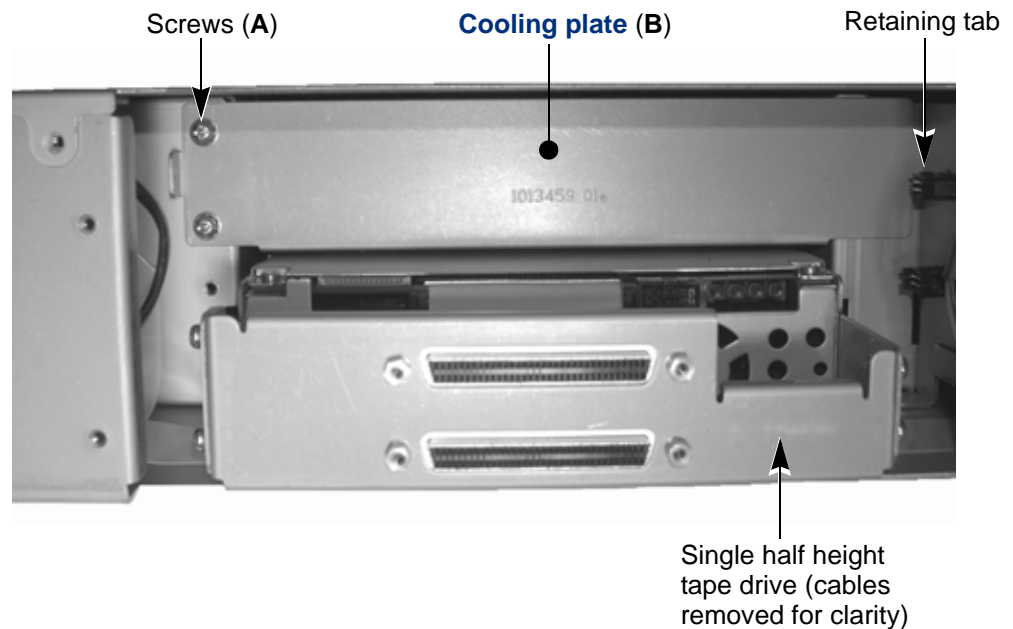


Figure 7-9 Tape drive cooling plate

! Important

Remove the internal cooling plate if you are installing a total of two HH drives or one FH drive, but leave the empty tape drive bay covered if you are installing a single HH drive (bottom slot). The plate is required for proper cooling.

- g. Disconnect the power cables to the power supply.

2. Removing an existing drive (if applicable) —

Complete the steps in this section if you are replacing a tape drive that is currently installed.

- a. Pull the tape drive a short distance out of the library, then disconnect the serial cables from the tape drive(s) that you are replacing.
- b. Disconnect the power cables on the back of the drive.

- c. While holding the cables out of the way, pull the tape drive straight out of the library.

**Caution**

Be certain to support the tape drive as you remove it from the library. LTO Ultrium tape drives weigh several pounds each.

- d. Disconnect the serial cable from the library and discard it. **Do not reuse the cable.**

3. Installing the tape drive(s) —

Note: You can mix HH SCSI, SAS, and Fibre Channel tape drives only if they are from the same manufacturer (for example, if they are both IBM tape drives).

- a. Locate the serial cable that came in your replacement kit and attach it to the appropriate serial connector *inside the library*. For example, if you are installing a bottom drive (one drive only), attach the serial cable to the “Drive 1” connector inside the library. Note the key tabs on the serial connector face down. See [Figure 7-1](#) and [Figure 7-2 on page 172](#) for correct serial cable routing information.
- b. While holding the cables to the side, slide the new tape drive directly into the library, leaving it a short distance out to access the cables. Use care not to damage the cables. Install the tape drives from bottom to top — fill the bottom slot first (Drive 1), and if applicable, the top slot (Drive 2) next.
- c. Connect the supplied serial cable(s) to the appropriate connector located on the side of the tape drive carrier. (See [Figure 7-1](#) and [Figure 7-2 on page 172](#).)
- d. Slide the tape drive(s) the remaining distance into the library.
- e. Connect the power cable(s) to the tape drive. Ensure that the power cable is not wrapped around the serial cable. See [Figure 7-4](#) through [Figure 7-7 on page 173](#) for correct power cable routing information.

! Important

If you are installing two **HP HH Fibre Channel** drives or adding a second drive, verify that the library power cable reaches the tape drive power connectors for both drives. If the cables do not reach, you must use the power jumper cables supplied with the drive kit.

Follow the instructions in [Appendix F](#) for connecting the jumper power cables that shipped with your tape drive.

- f. Verify all serial and power connections are secure, including the serial connection on the back of the tape drive(s).

4. Completing the installation—

- a. Attach the interface cover plate (if applicable) and the tape drive cover plate that came with your replacement kit. See “[Reference Illustrations](#)” on page 171 for more information.

! Important

If you have one bottom HH drive installed, the top (unused) drive interface cover plate must be attached. The library requires both the interface cover plate and tape drive cover plate for ESD protection. Do not leave any openings uncovered.

RESUMING OPERATION

1. Connect the interface cable(s), and the terminator (applies to SCSI only).
 - a. Connect the Fibre Channel cable (or cables if you installed more than one Fibre Channel tape drive). See “[Fibre Channel Optical Cable Specification \(FC Tape Drive\)](#)” on page 228.
or...
 - b. Connect the SAS cable (or cables if you installed more than one SAS tape drive). See “[SAS Cable Specifications](#)” on page 227.
or...
 - c. Connect the SCSI cable (or cables if you installed more than one tape drive) and a terminator (if needed).

! Important

LTO-2, LTO-3, and LTO-4 U160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator. LTO-4 U320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures. See “[Tape Drive Fails with Sporadic Errors](#)” on page 205.

Notes: You must install a terminator on the device at the physical end of the SCSI bus. If one of the tape drives in the library terminates the SCSI bus, you must install the required terminator on one of the tape drive’s SCSI connectors.

If there are additional devices on the SCSI bus, ensure that only the device at the physical end of the bus is terminated.

The library communicates with the host through the SCSI interface of one of the tape drive via the Automation Drive Interface (ADI) serial interface. See the tape drive’s *Product Manual* for tape drive information. See Automation/Drive Interface for ADI information: www.T10.org

2. Reconnect the power cord and power on the library (press the I on the back of the unit).
3. Power on the host.

The library is now ready to resume operation. The new tape drive defaults to the following SCSI IDs:

Tape Drive Configuration		SCSI ID
Single half height tape drive		3
Two half height tape drives	Upper tape drive	4
	Lower tape drive	3
Full height tape drive		3

! Important You may need to reconfigure your backup application to recognize the new tape drive. Refer to your application's documentation for instructions.

CONFIRMING THE INSTALLATION

You may want to perform a few load and unload operations and back up several megabytes of data to ensure that the library and the newly installed tape drive (or tape drives) are communicating correctly.

Use LibTool to	Detect the library
	View the library's cartridge inventory
	Move tapes into and out of the tape drive
Use LTOTool to	Detect the tape drive
	Perform a Read/Write test

Note: LibTool may return an error message with some tape drives, but still returns the requested information.

Download and install the tools from www.tandbergdata.com. The readme file that accompanies the program (or the online help for the Windows version) provides instructions for using the tools.

For questions regarding software configuration, operation (including how to perform a backup operation), or installation—contact your software provider.

REMOVING CARTRIDGES WITHOUT POWER

If you need to remove cartridges from the library when power is unavailable, either due to a general power failure or a failure of the library's power supply, use one of these methods.

REMOVING A MAGAZINE WITHOUT LIBRARY POWER



Caution

This method is for EMERGENCY magazine removal only. If you are unsure if the robot was idle when the power went out, be aware that there is a chance that the robot was moving a cartridge into or out of the magazine. If so, the magazine will not manually eject, and *you should not use force*. Contact Tandberg Data Technical Support if you encounter this situation (see [“Contacting Tandberg Data Corporation”](#) on page iii).

To remove a magazine without library power:

1. If your library is installed in a rack, disengage the screws securing the rails to the back of the rack, and slide the library forward approximately six inches to expose the access slots in the side of the library (see [“Attaching the Library to the Rails”](#) on page 19).
2. Insert the tip of a small flat-blade screwdriver into the bottom of the small slot and gently lift up to disengage the locking mechanism (see [Figure 7-10](#)). Each side of the library has an access slot—one for each magazine. The magazine will disengage and move a short distance out of the library.

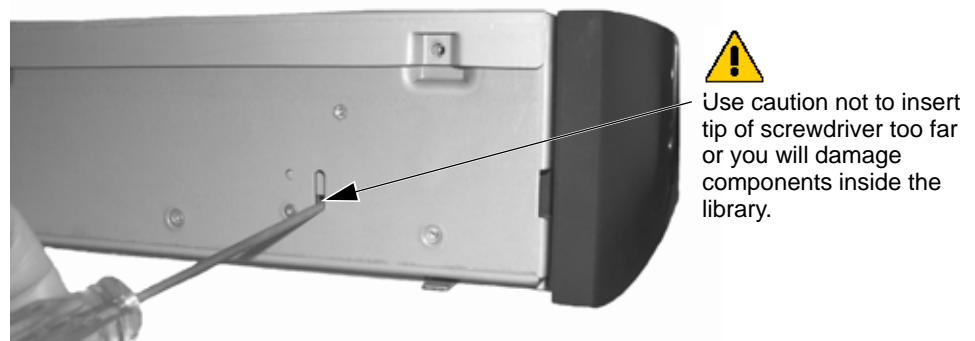


Figure 7-10 Manual magazine release

Note: Use caution handling a magazine that is loaded with cartridges. Each cartridge weighs over ½ lb. (0.24 kg). Fully loaded, each magazine weighs up to 8.8 lbs. (4.0 kg).

3. Pull the magazine straight out of the library. *Use caution not to move the magazine up or down, or from side to side as you pull it out of the library. This could cause damage to components inside the library.*

REMOVING A CARTRIDGE FROM THE TAPE DRIVE

If a cartridge is loaded in a tape drive when power to the library fails and you need to remove that cartridge, you must first remove the tape drive from the library (see “[Installing or Replacing a Tape Drive](#)” on page 169 for instructions).

- ▶ If the library’s power supply failed, you can attach the tape drive to another power source, such as an available power connector in a server and use the tape drive’s unload button to remove the cartridge.
- ▶ If a general power failure occurred, contact Tandberg Data Technical Support (see [page iii](#)) for information about removing the cartridge from the tape drive manually.

CLEANING THE LIBRARY



Caution

The library’s internal components are lubricated at the factory and should not be cleaned or relubricated.

The only library components that should be cleaned are the tape drive and the operator panel.

- ▶ Instructions for cleaning the tape drive are provided on [page 136](#).
- ▶ To clean the LCD (the operator panel), use wipes or cleaners appropriate for LCD screens or computer monitors.



Caution

To avoid scratching the LCD, do not use abrasive cleaners, abrasive cleaning implements, harsh chemicals, or solvents.

RUNNING TAPE DRIVE DIAGNOSTICS


You may want to perform diagnostics on your tape drive(s) to troubleshoot problems. The library offers a tape drive self test.

To perform a tape drive self test:


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).


- Press ▼ until the selection arrow (▶) points to **Drive Maintenance**.

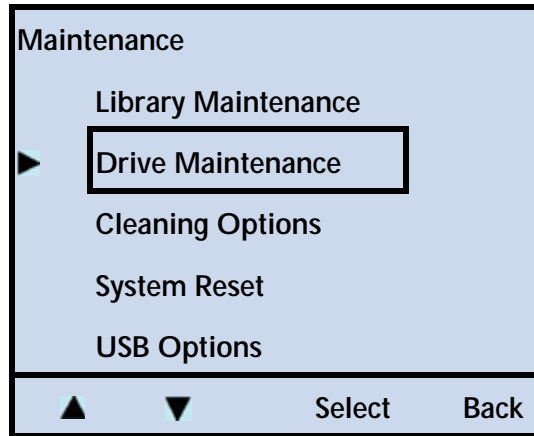


- Press **Select**.
- Press ▼ until the selection arrow (▶) points to **Drive Diagnostics**.

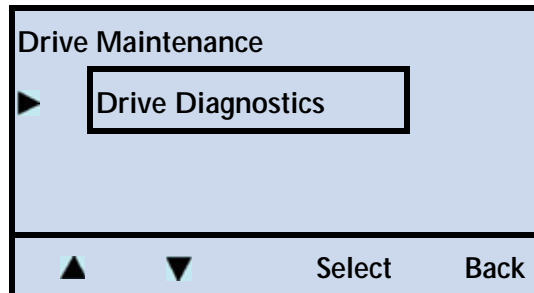

- Press **Select**.
- Press ▲ or ▼ until the selection arrow (▶) points to **Drive Self Test**.

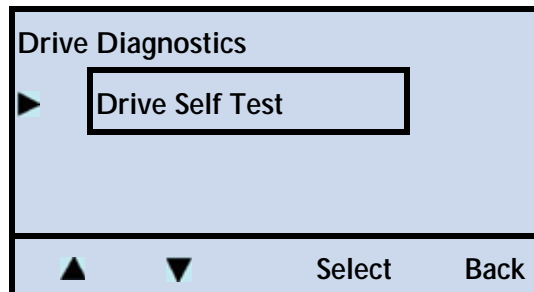

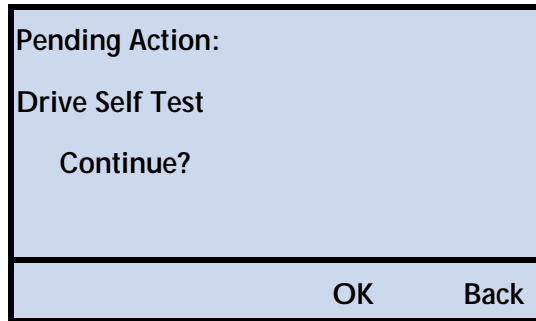7. Press **Select**.

8. Press **OK** to perform the test.
9. Press **Back** (as needed) to return to the Home screen.


RUNNING LIBRARY DIAGNOSTICS

To check basic library functions, you can run a set of diagnostic tests from the operator panel. These tests check the library's electronics and SCSI functions. If you report a problem to Tandberg Data Technical Support, you may be asked to run these tests and provide the results.


PERFORMING A DIGITAL SELF TEST

To perform a digital self test on the library:


1. At the Home screen, press **Maint**.
If necessary, enter the operator panel password (see [page 73](#)).
2. Press ▼ until the selection arrow (▶) points to **Library Maintenance**.

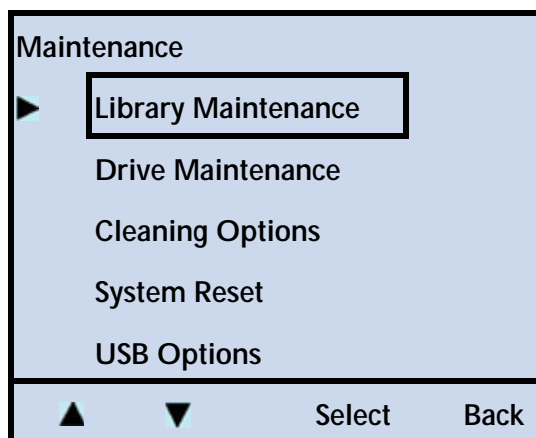


3. Press **Select**, and then press ▼ until the selection arrow (▶) points to **Library Diagnostics**.

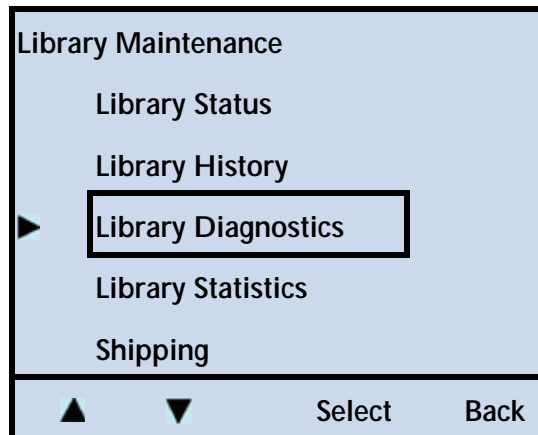

4. Press **Select**, and then press ▼ until the selection arrow (▶) points to **Digital Self Test**.

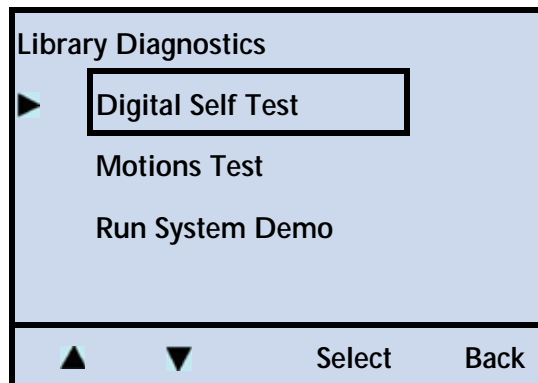

5. Press **Select**.

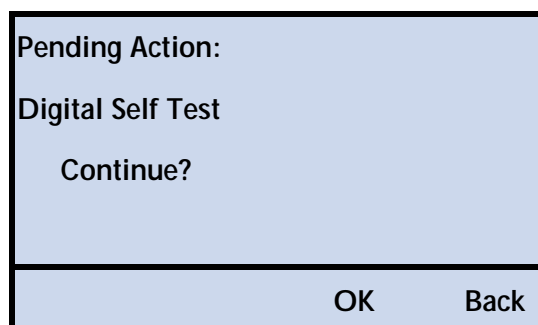

6. Press **OK** to perform the test.
7. Press **Back** (as needed) to return to the Home screen.


PERFORMING A MOTION TEST

To perform a motion test on the library:


1. At the Home screen, press **Maint.**

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **Library Maintenance**.

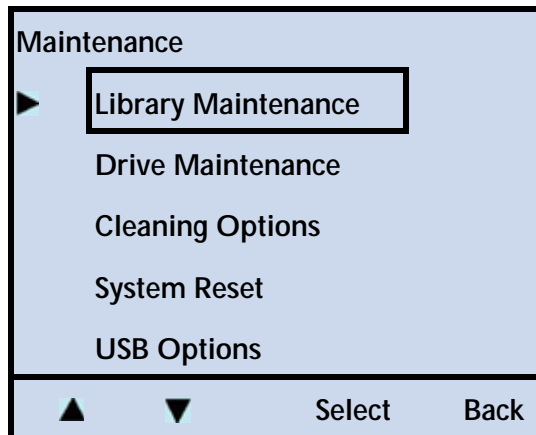


3. Press **Selection** press ▼ until the selection arrow (▶) points to **Library Diagnostics**.

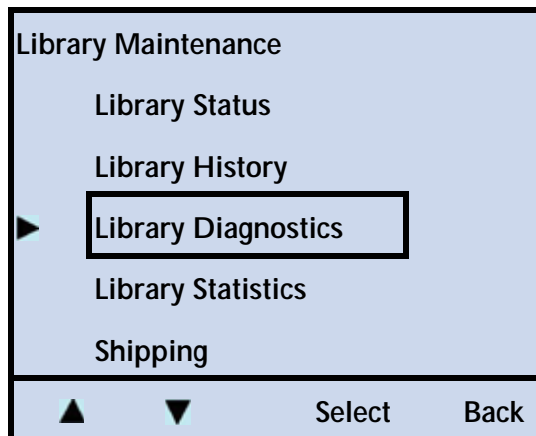


4. Press **Select**, and then press ▼ until the selection arrow (▶) points to **Motions Test**.

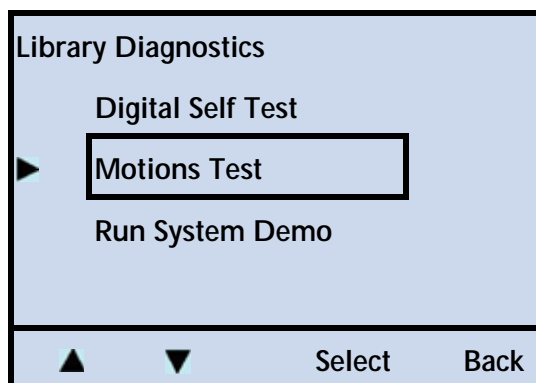

5. Press **Select**.

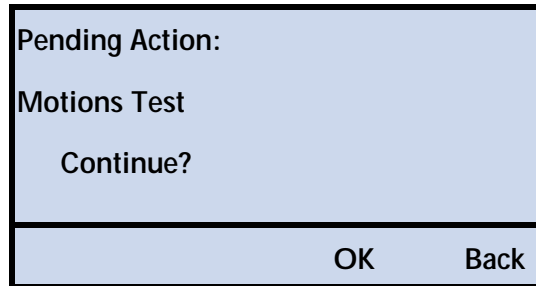

6. Press **OK** to perform the test.

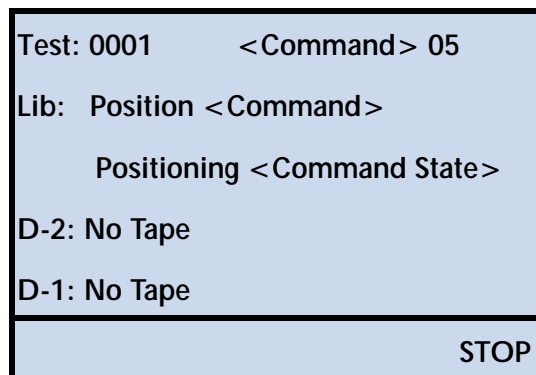

Press **STOP** at any time to cancel the test.

7. Press **Back** (as needed) to return to the Home screen.

RUNNING A SYSTEM DEMO

The library has a built-in demo program that can be used for testing or demonstrating library operation. When performing its demo program, the library loops through the following functions:


- ▶ Moves the robot to a cell
 - ▶ If the cell contains a cartridge, the library moves the cartridge to the tape drive.
 - ▶ If the cell does not contain a cartridge, the library moves the robot to a cell that contains a cartridge.
- ▶ If the Load option is enabled, the library:
 - ▶ Inserts the cartridge into a tape drive
 - ▶ Waits for the tape drive to load the tape
 - ▶ Instructs the tape drive to unload and eject the cartridge
- ▶ Returns the cartridge to its cell
- ▶ Repeats the above functions until any front panel button is pushed

To run a system demo on the library:


1. At the Home screen, press **Maint.**

If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library Maintenance**.

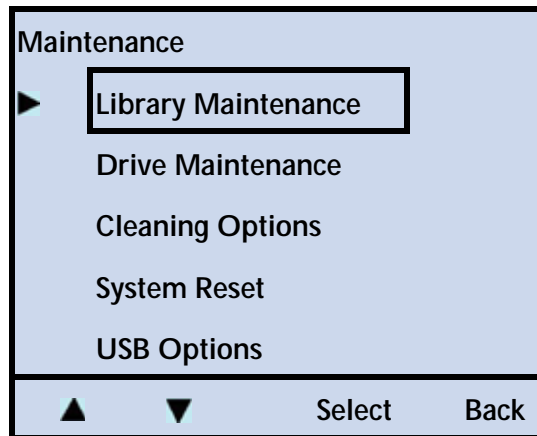


3. Press **Select**, and then press ▼ until the selection arrow (▶) points to **Library Diagnostics**.

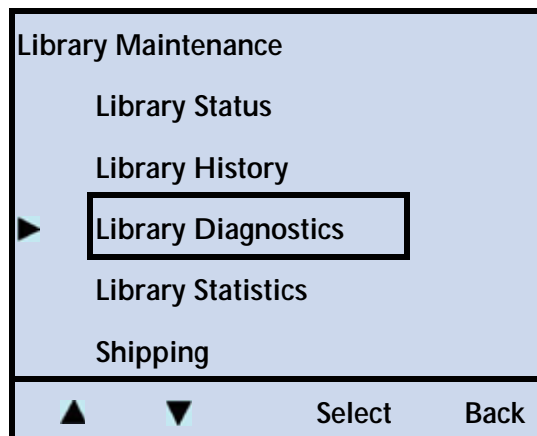


4. Press **Select**.

5. Press ▼ until the selection arrow (▶) points to **Run System Demo**.

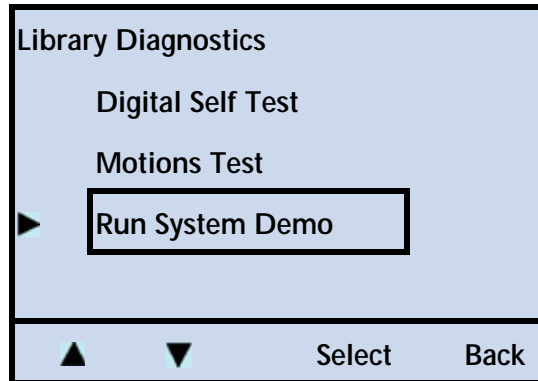

Note: You have the option of running the demo with the Load Drive option enabled or disabled. Select the desired mode and continue.

6. Press **Select**.

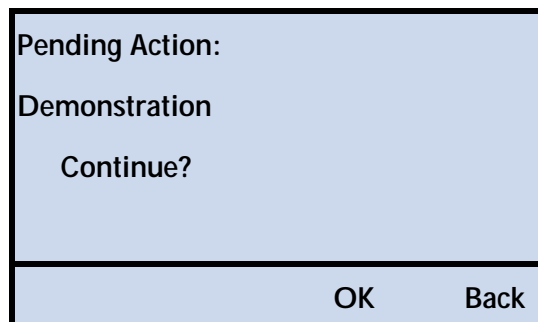

7. Press **OK** to perform the test.

To stop the demo, press the **Stop** button. The Home screen is displayed.

Note: If a cartridge is in the tape drive when you stop the demo, the cartridge is unloaded.

Press **Back** (as needed) to return to the Home screen.

UPGRADING LIBRARY FIRMWARE AND CREATING DIAGNOSTICS (FTP)

Occasionally, Tandberg Data may make revisions to the library's internal code (firmware). The library's Remote Management utility contains additional firmware for the Ethernet module. The Ethernet firmware may also be revised periodically.

You can download new firmware from www.tandbergdata.com. To upload new firmware to the library, you can use the library's optional Ethernet interface and an FTP utility.

If you report a problem to Tandberg Data Technical Support, you may be asked to create a diagnostic listing (also called a *dump*) via FTP. A diagnostic listing is created when you use an FTP utility to send a copy of the library's diagnostic buffer to a host computer. This information can be used by support personnel to troubleshoot incidents with the library.

This section describes how to connect the library to a host computer and use an FTP utility to upgrade library firmware and create diagnostic listings.

Note: If you don't want to use the library's Remote Management utility, see [page 190](#) for information about using Tandberg Data's LibTool to upgrade firmware over the SCSI interface.

CONNECTING TO THE LIBRARY'S FTP INTERFACE

To use an FTP utility with the library, you must have the following:

- ▶ A Category 5 (100BaseT connection) data-grade cable
- ▶ Software that supports RFC 959 file transfer protocol
- ▶ A host computer or network connection that uses a pin-through-hole RJ-45 shielded Ethernet connector

To access the library's FTP interface:

1. Connect the Ethernet cable as described on [page 24](#), and set Ethernet configuration options as described on [page 61](#). Make a note of the library's IP address.

Note: If you set DHCP on, you can view the current server-assigned IP address for the library through the Library's Settings menu (see [page 153](#)).

2. From your host computer, activate the FTP utility you are going to use. Connect to the library using the library's current IP address.
3. Log into the library's FTP interface using the library's FTP default user name and password:

User name: anonymous

Password: Exabyte

Note: The user name and password are case-sensitive. If desired, you can change the user name and password from their defaults through the library's **Remote Management** utility (see [Chapter 4](#)).

UPGRADING LIBRARY FIRMWARE VIA FTP

To upgrade the library's firmware via FTP:

1. Obtain new firmware for the library. You can download new firmware from www.tandbergdata.com. The firmware file for the library uses the extension `.bin`. The firmware file for the Ethernet module uses the extension `.hex`.

! Important Make sure that you select and download the correct firmware files. Firmware for other Tandberg Data products is also on this web site and is not compatible with the StorageLibrary T24 LTO.

2. Connect to the library's FTP interface by following the instructions in the previous section.
3. Make sure that the FTP file transfer type is set to binary (`ftp> bin`).
4. Use the "ls" command to list the files on the library.
 - ▶ Library's firmware file name: "libflash.bin"
 - ▶ Ethernet module's firmware file name: "enet.hex"

Note: If desired, you can make a copy of the current firmware file(s) by using a "get FTP" command.

5. If necessary, rename the firmware file(s) you downloaded from www.tandbergdata.com as follows:
 - ▶ Library firmware: Change "filename.bin" to "libflash.bin"
 - ▶ Ethernet module firmware: Change "filename.hex" to "enet.hex"

Use the FTP command for your utility to transfer the new firmware to the library. For example, issue a "put libflash.bin" command.

The system initiates the firmware upgrade and displays its progress on the library's LCD. When the upgrade has completed successfully, the library automatically resets.



Caution

Do not attempt to perform library operations or power down the library until after it automatically resets.

CREATING A DIAGNOSTIC LISTING VIA FTP

To create a diagnostic listing via FTP:

1. Connect to the library's FTP interface by following the instructions on [page 188](#).
2. Make sure that the FTP file transfer type is set to binary.

3. Use the FTP command for your utility to get the diagnostic listing. For example, issue the “get libdump.bin” command.
4. If necessary, specify a destination location (path and filename) for the diagnostic listing.

UPGRADING LIBRARY FIRMWARE (LIBTOOL)

You can also use the Tandberg Data LibTool to upgrade firmware over the SCSI interface.

- ▶ LibTool is available as a free download at www.tandbergdata.com.
 - ▶ Refer to the readme file provided with the program for installation instructions.
 - ▶ Refer to the program’s online help for instructions on performing upgrades and diagnostics.
- ▶ You can download new firmware at www.tandbergdata.com.

UPGRADING LIBRARY FIRMWARE AND CREATING DIAGNOSTICS (USB PORT)

You can use the USB port to upgrade library firmware and create diagnostic listings. See “Connecting the Library to the USB Port” on page 25.


UPGRADING LIBRARY FIRMWARE

To download new code to the library:

1. At the Home screen, press **Maint**.


If necessary, enter the operator panel password (see page 73).

2. Press ▼ until the selection arrow (▶) points to **USB Options**.

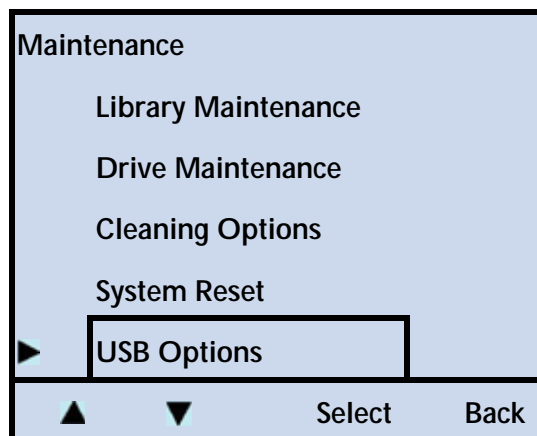


3. Press **Select**.

4. Press ▲ or ▼ until the selection arrow (▶) points to **New Library Code**.

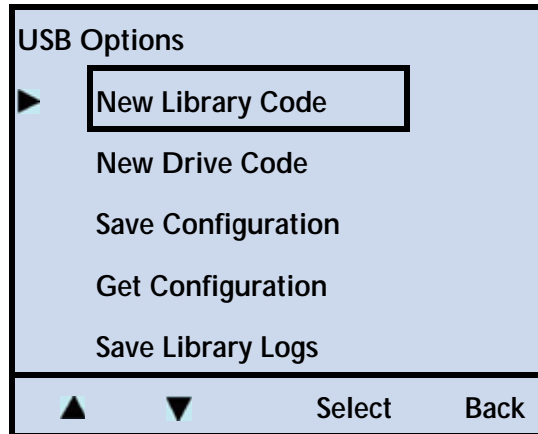

5. Press **Select**.

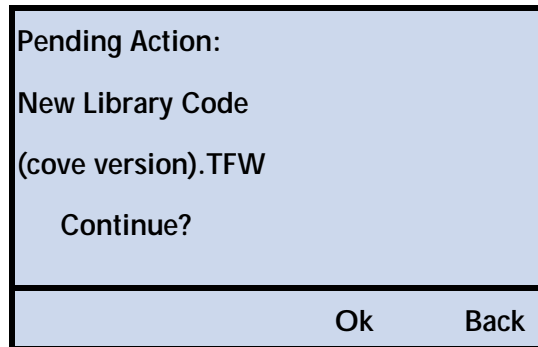

6. Press **OK** to continue with the download, or **Back** to cancel the action.
7. Press **Back** (as needed) to return to the Home screen.


SAVING LIBRARY LOGS

To save the diagnostic logs of the library:


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).


- Press ▼ until the selection arrow (▶) points to **USB Options**.

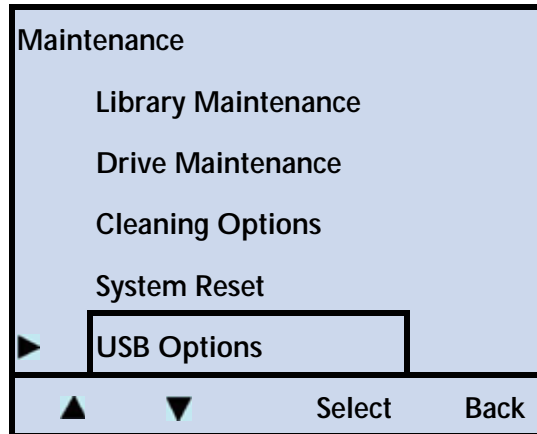

- Press **Select**.
- Press ▲ or ▼ until the selection arrow (▶) points to **Save Library Logs**.

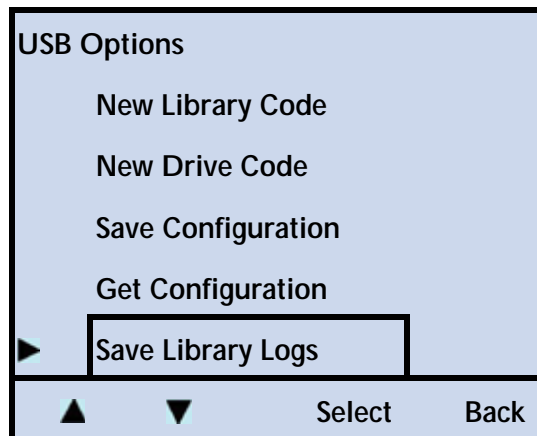

- Press **Select**.

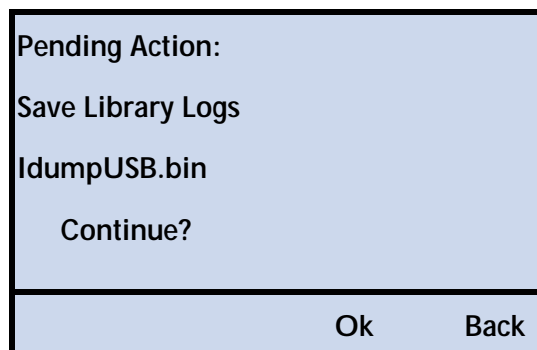

- Press **OK** to continue with the action, or **Back** to cancel the action.

Tandberg Data Technical Support can examine the log to determine the nature of the reported error (see www.tandbergdata.com).

7. Press **Back** (as needed) to return to the Home screen.

UPGRADING TAPE DRIVE FIRMWARE (LTOTOOL)

To upgrade firmware and create diagnostic listings for the LTO tape drive(s), download LTOTOOL. LTOTOOL allows you to upgrade firmware and perform diagnostics over the library's SCSI bus.

Go to www.tandbergdata.com for the latest level of firmware.

- ▶ LTOTOOL is available as a free download at www.tandbergdata.com.
 - ▶ Refer to the readme file provided with the program for installation instructions.
 - ▶ Refer to the program's online help for instructions on performing upgrades and diagnostics.
- ▶ You can download new firmware at www.tandbergdata.com.



Caution

Do not upgrade firmware unless Tandberg Data Technical Support has advised you to do so. If performed improperly, the upgrade procedure can render your tape drive inoperable. Consult with Tandberg Data Technical Support before performing an upgrade.

- ▶ This table lists the firmware options for the available tape drives.

Vendor	Configuration	Generation	Interface	Code Name
Hewlett-Packard	HH	LTO-2	SCSI	HPHHL2SC_nnnn.E
Hewlett-Packard	HH	LTO-3	SCSI	HPHHL3SC_nnnn.E
Hewlett-Packard	HH	LTO-4	FC	HPHHL4FC_nnnn.E
Hewlett-Packard	HH	LTO-5	SAS	HPHHL5SA_nnnn.E
Hewlett-Packard	HH	LTO-5	FC	HPHHL5FC_nnnn.E
IBM	FH	LTO-4	SCSI	IBFHL4SC_nnnn.FMR
IBM	FH	LTO-4	FC	IBFHL4FC_nnnn.FMR
IBM	FH	LTO-3	SCSI	IBFHL3SC_nnnn.FMR
IBM	FH	LTO-3	FC	IBFHL3FC_nnnn.FMR
IBM	HH	LTO-4	SAS	IBHHL4SA_nnnn.FMR

UPGRADING TAPE DRIVE FIRMWARE AND CREATING DIAGNOSTICS (USB PORT)

You can use the USB port to upgrade tape drive firmware and create diagnostic listings. See “[Connecting the Library to the USB Port](#)” on page 25.

UPGRADING TAPE DRIVE FIRMWARE

Go to www.tandbergdata.com for the latest level of firmware. This table lists the firmware options for the available tape drives.

Vendor	Configuration	Generation	Interface	Code Name
Hewlett-Packard	HH	LTO-2	SCSI	HPHHL2SC_nnnn.E
Hewlett-Packard	HH	LTO-3	SCSI	HPHHL3SC_nnnn.E
Hewlett-Packard	HH	LTO-4	FC	HPHHL4FC_nnnn.E
Hewlett-Packard	HH	LTO-5	SAS	HPHHL5SA_nnnn.E
Hewlett-Packard	HH	LTO-5	FC	HPHHL5FC_nnnn.E
IBM	FH	LTO-4	SCSI	IBFHL4SC_nnnn.FMR
IBM	FH	LTO-4	FC	IBFHL4FC_nnnn.FMR
IBM	FH	LTO-3	SCSI	IBFHL3SC_nnnn.FMR
IBM	FH	LTO-3	FC	IBFHL3FC_nnnn.FMR
IBM	HH	LTO-4	SAS	IBHHL4SA_nnnn.FMR


! Important When upgrading tape drive code from the USB Port, the tape drive code must reside in the “root” directory of the USB memory device.

To download new code to the tape drive(s):


1. At the Home screen, press **Maint**.

If necessary, enter the operator panel password (see [page 73](#)).


2. Press ▼ until the selection arrow (▶) points to **USB Options**.

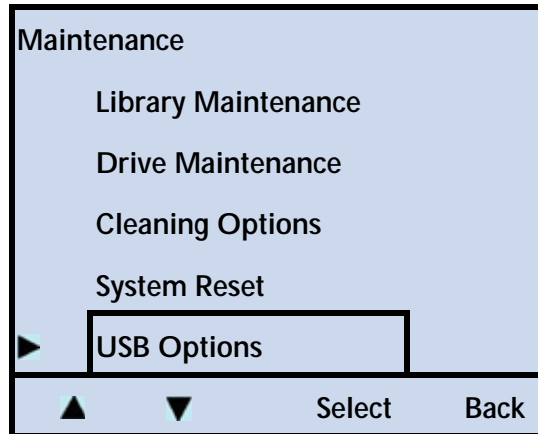


3. Press **Select**.
4. Press ▲ or ▼ until the selection arrow (▶) points to **New Drive Code**.

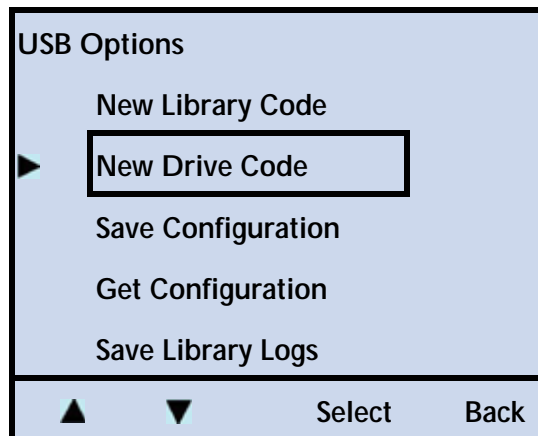


5. Press **Select**.

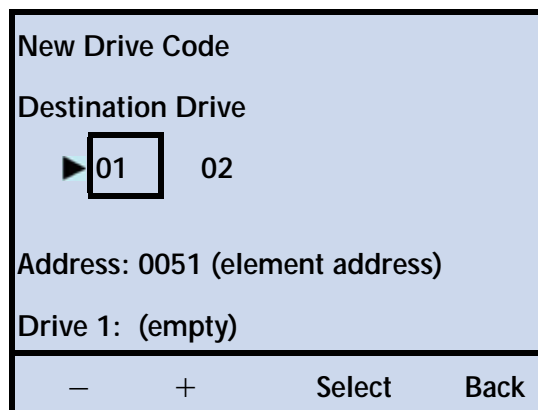

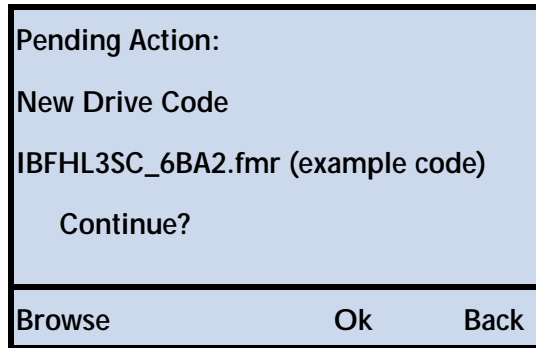6. Press **Select**.

- ▶ Press **OK** to continue with the download.
- ▶ Press **Back** to cancel the action.
- ▶ Press **Browse** to view subdirectories.

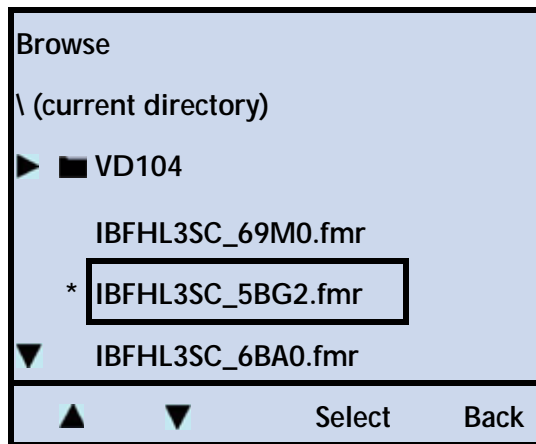

- ▶ The folder icon (■) indicates a directory. Selecting the directory allows you to view items in that directory. Once in a subdirectory, press the “..” to navigate to the directory above the current directory.
 - ▶ The up (▲) and down (▼) arrows allow you to navigate beyond the current screen.
 - ▶ The asterisk (*) indicates the latest code level.
7. Highlight the desired code level (▶) and press **Select**, then press **OK**.
 8. Press **Back** (as needed) to return to the Home screen.


SAVING TAPE DRIVE LOGS

To save the diagnostic logs of the tape drive:

1. At the Home screen, press **Maint**.


If necessary, enter the operator panel password (see [page 73](#)).

- Press ▼ until the selection arrow (▶) points to **USB Options** and then press **Select**.

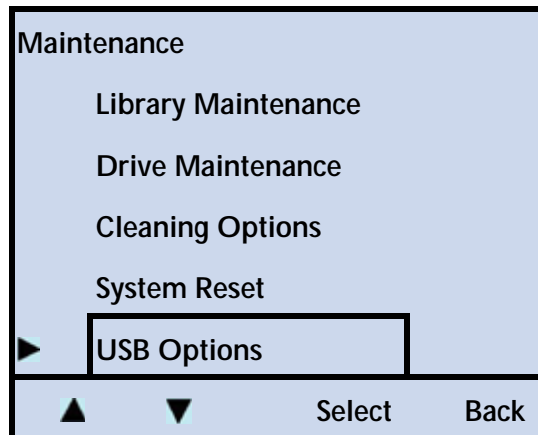


- Press ▲ or ▼ until the selection arrow (▶) points to **Save Drive Logs**.


Note: You must scroll down ▼ past "Save Library Logs" to see this entry.

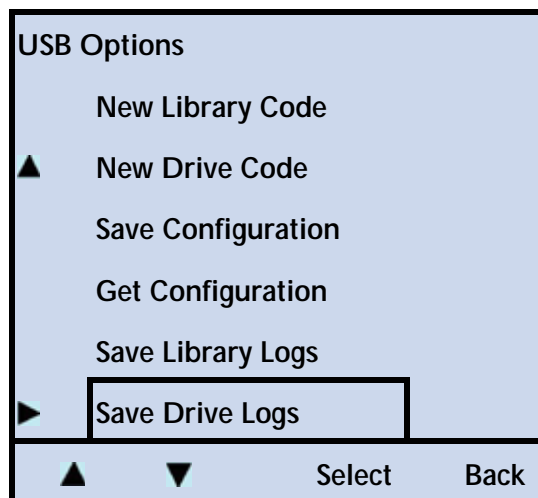

- Press **Select**.

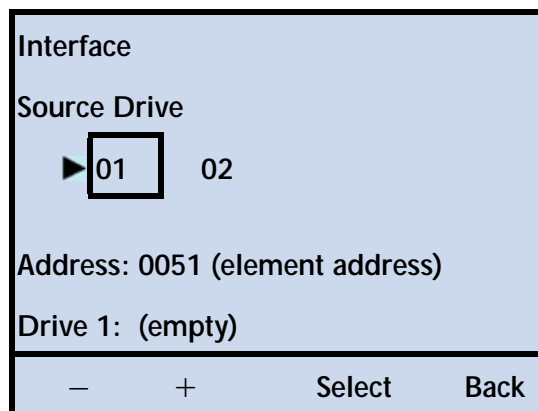


- Press + or – to select the tape drive (if your library has more than one tape drive installed). Press **Select** to see the following screens.







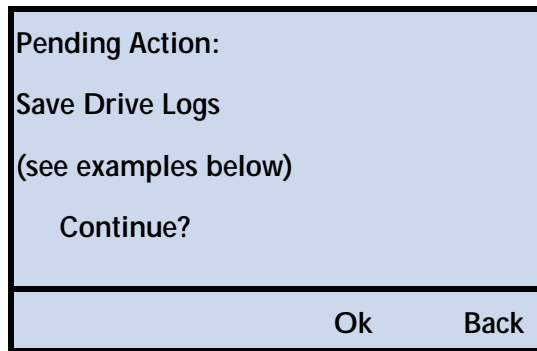



- Press **OK** to continue with the action, or **Back** to cancel the action.

IBM Tape Drives

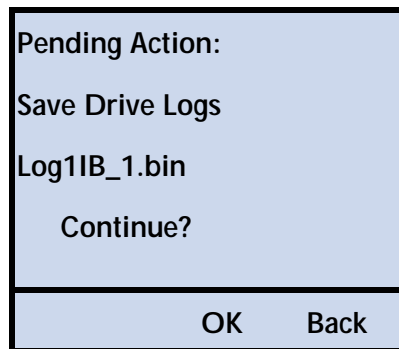

HP Tape Drives

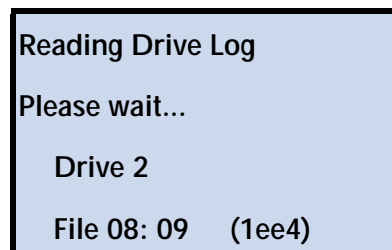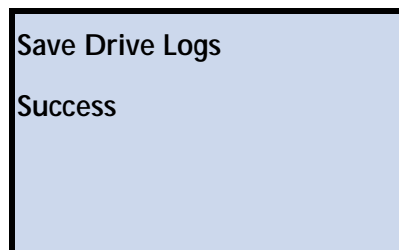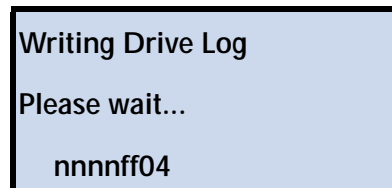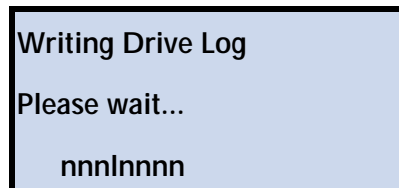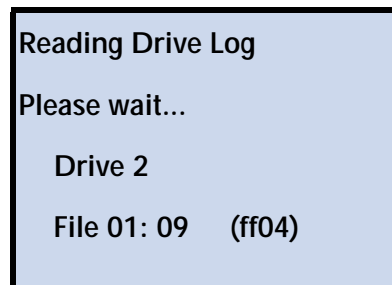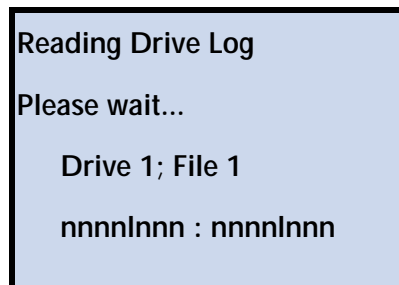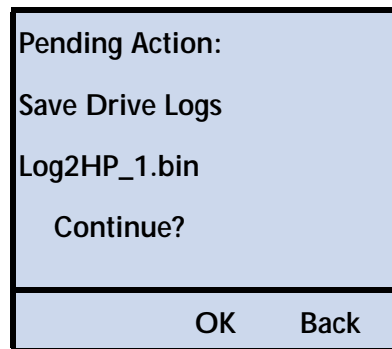

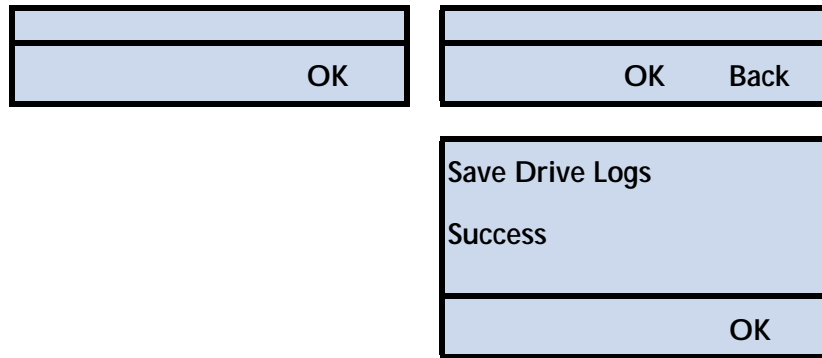

Tandberg Data Technical Support can examine the log to determine the nature of the reported error (see www.tandbergdata.com).

TROUBLESHOOTING

This chapter describes problems that you might encounter while operating the library and provides suggestions for resolving the problems. Also see: www.tandbergdata.com.

LIBRARY TROUBLESHOOTING

This section provides suggestions for solving problems that may occur when you are installing and operating the library.

LIBRARY INSTALLATION

If the library and backup software are not communicating after installation, check the following:

- ✓ **Power.** Is the library's power cord inserted correctly, and is the power switch on?
- ✓ **Interface connections.** Make sure that the SCSI, Fibre Channel, or SAS connections to the host computer and other devices on the bus are secure.
- ✓ **Host adapter card installation.** Make sure that you installed your host adapter card correctly. Refer to the documentation that came with your card for installation and troubleshooting instructions. Pay special attention to steps for setting various jumpers and switches on the card. Make sure that the card is properly seated.
- ✓ **SCSI controller type.** Make sure that the SCSI controller is an LVD, non-RAID controller. Tandberg Data does not support the use of libraries or tape drives on RAID controllers.
- ✓ **SCSI IDs.** Make sure that the SCSI IDs you selected for the tape drive or tape drives are not the same as the IDs used by any other devices on the SCSI bus, including the SCSI adapter card. Refer to [page 49](#) for information about setting the SCSI IDs.

- ✓ **LVD SCSI devices.** Because the tape drives installed in the library are LVD (low-voltage differential) devices, all other devices on the SCSI bus should also be LVD. These devices include the controller cards, terminators, and any other devices on the bus. For optimum tape drive performance, connect the LTO-2, LTO-3, and LTO-4 U160 tape drive(s) to an Ultra160 SCSI host bus adapter and the LTO-4 U320 tape drive(s) to an Ultra 320 SCSI host bus adapter.

Note: Although Ultra-2 and Ultra-3 LVD SCSI are compatible with single-ended SCSI, Tandberg Data does not support using the LVD library on a single-ended SCSI bus.

- ✓ **SCSI cable lengths.** Make sure that the cabling for the SCSI bus attached to the tape drives does not exceed the maximum length restriction (see [page 21](#)).
- ✓ **Termination.** Make sure that the SCSI bus is properly terminated as described on [page 21](#). If another device previously terminated the SCSI bus and is no longer at the physical end of the bus, be sure to remove the terminator from that device.

! Important LTO-2, LTO-3, and LTO-4 Ultra 160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator. LTO-4 Ultra 320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures.

- ✓ **Tape Drive Cables.** Ensure that the tape drive(s) are correctly cabled to the ADI Interface(s). See “[Resuming Operation](#)” on [page 177](#).
- ✓ **Compatibility.** Make sure that your library and tape drive(s) are compatible with the backup application you plan to use. Check www.tandbergdata.com for compatibility information.
- ✓ **Software installation.** Make sure that your backup software is installed correctly (Refer to your software documentation.) Pay special attention to steps that describe how to configure the software for use with the library and tape drive(s).
- ✓ **Driver installation.** Make sure that the driver for your controller card is installed. Refer to installation instructions for the controller card. Make sure that the appropriate drivers for the library and the tape drive(s) are installed. Refer to the installation instructions for your backup application regarding medium changer and tape drive drivers.
 - ▶ Download Windows drivers for the library and tape drives from www.tandbergdata.com. Only install these drivers if you are using the Windows native backup application or if your backup software instructs you to do so.
 - ▶ Driver installation may not be necessary and depends on the backup application that you use in your system. Refer to the installation instructions for your backup application for verification.

After checking the items above, reset the library as described on [page 139](#).

LIBRARY OPERATION

If the library has been successfully operating in the past, but is now experiencing problems, check the following:

- ✓ **Control Mode.** Make sure that the control mode is set correctly.
 - ▶ Random mode (the default)—Only use this mode with an application that controls the library.
 - ▶ Sequential mode—Only use this mode if you plan to operate without a backup application. In Sequential mode, the library automatically processes cartridges in sequential order without direction from an application. See [page 124](#) for information about setting Sequential mode.
- ✓ **Library functions.** You can use the selections in the Maintenance menu to check specific library functions. See “[Running a System Demo](#)” on [page 185](#) for instructions.
- ✓ **Error messages.** Check the list of error messages in [Appendix E, Error Messages](#) for corrective actions.
- ✓ **Hardware operation.** You can verify that the library hardware is operating using the following methods:
 - ▶ Use the Run System Demo mode under the library’s Maintenance menu to move cartridges from random cells in and out of the tape drive(s). See [page 185](#) for instructions.
 - ▶ Use the library’s Move menu to import or export cartridges, and to move specific cartridges into and out of the tape drive(s). See [page 116](#) for instructions.
 - ▶ Use LibTool to display the current inventory of cartridges, and to move cartridges in and out of the tape drive(s). Refer to the program’s online help for instructions on performing upgrades. You can download LibTool from www.tandbergdata.com.

If the library reports an error during any of these tests, use the Remote Management Utility to obtain a diagnostic log from the library immediately after the error is reported (see “[Logs](#)” on [page 111](#)). Alternatively, you can use FTP (via the Ethernet port) to obtain a diagnostic log from the library (see [page 187](#)). Tandberg Data Technical Support can examine the log to determine the nature of the reported error.

- ✓ **Hardware Servo Error.** If your library is reporting a hardware servo error, check the following:
 - ▶ Make sure the library is either installed in a rack or is resting on a hard, flat surface.

- ▶ Make sure that there is nothing resting or pressing on the top of the library.
 - ▶ Make sure that the library is not oriented on its side.
 - ▶ Make sure that the library has the latest version of firmware installed. Firmware upgrade instructions begin on [page 187](#).
 - ▶ If you are unable to resolve the problem, use the Remote Management Utility to obtain a diagnostic log from the library immediately after the error is reported (see “[Logs](#)” on [page 111](#)). Alternatively, you can use FTP (via the Ethernet port) to obtain a diagnostic log from the library (see [page 187](#)). Tandberg Data Technical Support can examine the log to determine the nature of the reported error.
- ✓ **Tape Drive Configuration.** Ensure that the Drive Configuration (Drive/Drive Configuration) matches the tape drive(s) installed.
- Note:** If you have only one tape drive installed, the configuration must reflect one tape drive. The second, empty tape drive “slot” must indicate No Drive.
- ✓ **Slot Configuration.** You can limit the number of slots visible to the SCSI interface for compatibility with backup software (see “[Setting the Data Cartridge Slot Count](#)” on [page 43](#)).
- ✓ **Firmware level.** Make sure that your library and tape drive(s) contain the latest versions of firmware.
- ▶ To check the library’s code level (basic information), see [page 144](#).
 - ▶ To check the tape drive’s code level (basic information), see [page 155](#).
 - ▶ To determine whether you have the latest versions, check the Tandberg Data web site at www.tandbergdata.com.

TAPE DRIVE TROUBLESHOOTING

TAPE DRIVE OPERATION

Refer to the tape drive’s *Product Manual* for detailed tape drive troubleshooting information. If you have been successfully operating the backup software and library in the past, but are now experiencing problems reading and writing data, check the following:

- ✓ **Write-protect switch.** If you are writing data, make sure that the cartridge is write-enabled.

If the switch...	the cartridge is...
does not cover the opening	write-enabled
covers the opening	write-protected

- ✓ **Cartridge type.** Use the appropriate cartridges for your tape drive(s). See [Table 5-1 on page 115](#) for information about selecting cartridges.
- ✓ **Cartridge age.** If the cartridge has been in use for a long time or if it has been used frequently, try using a new cartridge.
- ✓ **Cleaning.** Clean the tape drive(s) as described on [page 133](#).

TAPE DRIVE FAILS WITH SPORADIC ERRORS

- ✓ **Terminator.** Check the terminator used on the tape drive.

! Important LTO-2, LTO-3, and LTO-4 U160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator. LTO-4 U320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures.

LTO-2, LTO-3, and LTO-4 U160 SCSI tape drives are Ultra 160 SCSI devices and require a minimum Ultra 160 non-RAID SCSI card, Ultra 160 rated SCSI cabling, and an Ultra 3 Active Ultra 160 SCSI terminator. Cabling and termination rated higher (Ultra 320, for example) is also acceptable. LTO-4 U320 SCSI tape drives are Ultra 320 SCSI devices and require a minimum Ultra 320 non-RAID SCSI card, Ultra 320 rated SCSI cabling, and an Ultra 3 Active Ultra 320 SCSI terminator.

An appropriate Ultra 160 terminator is stamped with Ultra 3 or LVD 160 and “Active Negation.”

Your library was shipped with the appropriate terminator. If you incorporate the library into an existing setup that is not properly terminated, or if the original terminator is replaced during setup, you may experience the failures described below. Failure symptoms include:

- ▶ Read/Write failure
- ▶ Bus hangs
- ▶ Connectivity issues—tape drive not seen on bus or drops off bus
- ▶ Command failures—commands to this device may fail while commands to other devices on the bus may work properly

BACKUP SOFTWARE REPORTS AN ERROR

Your backup software may report an error as a result of a failure to communicate with the tape drive(s) or library, a failure by a tape drive to write or read data, or because of a software configuration issue.

FAILURE TO COMMUNICATE WITH A TAPE DRIVE

Communication problems on the SCSI bus may be reported by the backup application as resets, a loss of communication with a tape drive, failure to detect a tape drive, I/O device errors, or parity errors. These types of errors may occur intermittently.

- ▶ If you have a SCSI library, check the tape drive's installation on the SCSI bus, described in [“Connecting the Library to SCSI” on page 20](#) or [“Connecting the Library to SAS” on page 23](#).
- ▶ If you have a Fibre Channel connection to your library (the tape drives installed in the library are Fibre Channel), check the Fibre Channel connection, described in [“Connecting the Library to Fibre Channel” on page 23](#).
- ▶ If you have an Ethernet connection to your library, check the library's Ethernet connection, described in [“Connecting the Library to Ethernet” on page 24](#).
- ▶ If the ADI interface is not connected properly, it is possible that the tape drive will not communicate on the SCSI bus (see [“Resuming Operation” on page 177](#)).
- ▶ Use the Remote Management Utility (see [“Logs” on page 111](#)) and LTOTool (see [page 193](#)) to capture the diagnostic logs from the library and the tape drive(s) immediately after an error is reported by your backup software. See [“Advanced Troubleshooting” on page 210](#) for information. Technical Support can examine the log to determine the nature of the reported error.

FAILURE BY A TAPE DRIVE TO WRITE OR READ DATA

If your backup software reports a media error, one of the following situations may have occurred:

- ▶ The tape drive needs cleaning (see [“Cleaning the Tape Drive” on page 133](#)). Always try cleaning the tape drive before you assume the cartridge is bad. Be sure to use an LTO Cleaning Cartridge.
- ▶ The cartridge needs to be replaced. Try using a different cartridge for the backup, making sure that the tape is not written in an unsupported format. Mark any cartridge that fails. If you notice that the same cartridge results in multiple failures, replace the cartridge.
- ▶ The backup software has attempted to append data to a cartridge that previously failed. If a write media error previously occurred on the tape, the tape drive cannot append data at the point where the write media error occurred. You can attempt to overwrite the tape, but any attempt to append data will fail.

- ▶ If you are trying to write data, the cartridge may be write-protected. Check the switch on the edge of the cartridge (see [Figure 5-2 on page 115](#)).

If the switch...	the tape is...
does not cover the opening	write-enabled
covers the opening	write-protected



Caution

Use a pen or small screwdriver to move the switch. Do not use a pencil because graphite may corrupt the tape.

If you used an application other than your normal backup software to write data to the tape, your backup software may report that it does not recognize the tape. For example, if you have used LTO Tool to write and read test data, the test tape will not be “recognized” by your backup software. Perform a tape erase using either LTOTool or your backup software.

BACKUP SOFTWARE CONFIGURATION ISSUES

If you suspect an issue with the backup software configuration, use LibTool and LTOTool to first confirm that the library and tape drive are working properly. Download and install LibTool and LTO tool from www.tandbergdata.com.

Use LibTool to	Detect the library
	View the library’s cartridge inventory
	Move tapes into and out of the tape drive
Use LTOTool to	Detect the tape drive
	Perform a Read/Write test

Note: LibTool may return an error message with some tape drives, but still returns the requested information.

The readme file that accompanies the program (or the online help for the Windows version) provides instructions for using LibTool and LTOTool.

For any questions regarding software configuration, contact your software provider.

BEFORE CONTACTING TECHNICAL SUPPORT

Before contacting Tandberg Data Technical Support, complete the following steps to gather all of the required information. Having this information available before you call Technical Support will allow your representative to help you as efficiently as possible. When you have all of the required information, see “[Contacting Tandberg Data Corporation](#)” on page iii to contact Technical Support.

LIBRARY INFORMATION

- ▶ **Library serial number and firmware level.** What is the library’s serial number? What version of firmware is currently loaded in the library?
 - ▶ Check www.tandbergdata.com for the latest release of StorageLibrary T24 LTO firmware.
 - ▶ Use the operator panel to display information about the library (see “[Viewing Basic Library Information](#)” on page 144).
 - ▶ If your library is not at the latest firmware level, use LibTool to update the firmware (see “[Upgrading Library Firmware \(LibTool\)](#)” on page 190).

TAPE DRIVE INFORMATION

- ▶ **Tape drive serial number and firmware level.** What is the tape drive’s serial number? What version of firmware is currently loaded in the tape drive?
 - ▶ Check www.tandbergdata.com for the latest release of LTO tape drive firmware.
 - ▶ Use the operator panel to display information about the tape drive(s). See “[Viewing Basic Tape Drive Information](#)” on page 155.
 - ▶ If your LTO tape drive is not at the latest firmware level, use LTOTool to update the firmware. See “[Upgrading Tape Drive Firmware \(LTOTool\)](#)” on page 193.

SCSI BUS INFORMATION (SCSI LIBRARY)

- ▶ **SCSI host bus adapter make and model.** What is the make and model of SCSI host bus adapter connected to the tape drives installed in the library? Make certain that the SCSI adapter is Ultra 160 SCSI and that any necessary drivers for the controller are installed.

Note: Tandberg Data does not support using the library on a RAID controller or on a single-ended controller.

- ▶ **SCSI bus configuration.** What is the configuration of the SCSI bus used by the library?
 - ▶ Are other SCSI devices attached to the SCSI bus?

- ▶ What are the SCSI IDs of all devices attached to the same bus (both internal and external devices)?
- ▶ Is the SCSI bus terminated at the physical end of the bus?

! Important LTO-2, LTO-3, and LTO-4 U160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator. LTO-4 U320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures.

- ▶ What is the total SCSI cable length for all devices (both internal and external devices) on the SCSI bus (see [page 21](#) for length restrictions).
- ▶ Check all SCSI cable connectors for bent pins and confirm that all connectors are firmly seated.

OPERATING SYSTEM INFORMATION

- ▶ **Operating system.** What operating system are you using? Are all current patches installed?
- ▶ **Device drivers.** Are the appropriate drivers installed for the SCSI host bus adapter? Refer to the installation instructions for your SCSI host bus adapter card.

BACKUP APPLICATION INFORMATION

- ▶ **Backup application name and version.** What backup application are you using?
- ▶ **Compatibility.** Does your application support the library? Refer to the supported hardware devices list from the application provider. See [“Changing the Emulation Mode” on page 54](#) for information.
- ▶ **Device drivers.** Are the appropriate drivers installed for the tape drive(s) and for the library?

Note: Driver installation may not be necessary and depends on the backup application that you use in your system. Refer to the installation instructions for your backup application for verification.

Driver installation information is available at: www.tandbergdata.com.

- ▶ **Backup application log files.** Have the log files from your backup application ready to send to Technical Support.

DIAGNOSTIC INFORMATION

- ▶ **Library test results.** Use LibTool to test moving tapes in and out of the tape drive, and then use the Remote Management Utility to capture a diagnostic log of the library (see “Logs” on page 111). Have the log file ready to send to technical support.
- ▶ **Tape drive test results.** Use LTOTool and run a Write/Read test of the tape drive(s) and then capture the diagnostic log from the tape drive(s) and save it to a file.
 - ▶ If the LTOTool Write/Read test reports an error, clean the tape drive(s) and run the test again on a new tape.
 - ▶ Have the diagnostic log file ready to send to Technical Support. Refer to the readme file or on line help available with the LTOTool for detailed instructions.
- ▶ **Diagnostic log taken after an error.** Capture diagnostic logs from both the tape drive(s) and from the library immediately after your backup application reports an error.
 - ▶ Use LTOTool to capture the diagnostic log from the tape drive(s).
 - ▶ Use the Remote Management Utility to capture a diagnostic log from the library (see “Logs” on page 111).

ADVANCED TROUBLESHOOTING

If you report a problem to Tandberg Data Technical Support (page iii), you may be asked to create a diagnostic listing. Use one of these options to create a diagnostic listing. .

Device	Using	See
Library	Remote Management Utility	Tools/ “Logs” on page 111
	Ethernet (via RMU)	Upgrading Library Firmware and Creating Diagnostics (FTP)
Tape Drive	LTOTool (download from www.tandbergdata.com .)	“Upgrading Tape Drive Firmware (LTOTool)” on page 193

A

SPECIFICATIONS

This appendix provides the following information about the library:

To view this information...	go to...
Storage capacity	below
Size and weight	page 212
Performance specifications	page 212
Power specifications	page 213
Environmental specifications	page 214
Shipping specifications	page 216
Universal serial bus	page 217
Safety and regulatory agency compliance	page 217

STORAGE CAPACITY

The maximum storage capacity of the library depends on the type and number of cartridges installed, as shown in [Table A-1](#).

Table A-1 Maximum library storage capacity

Data Cartridge Type	Maximum Capacity per Cartridge ^a	Maximum Library Capacity (24 Data Cartridges)
LTO-5 (sky blue)	3.0 TB	72.0 TB
LTO-4 (green)	1.6 TB	38.4 TB
LTO-3 (slate blue)	800 GB	19.2 TB
LTO-2 (purple)	400 GB	9.6 TB

^a Assuming a 2:1 compression ratio. Actual compressed capacity varies depending on the type of data being recorded and the system configuration

SIZE AND WEIGHT

Table A-2 lists the library's dimensions and weight.

Table A-2 Library dimensions and weight

Dimensions^a (L x W x D)	77.54 cm x 44.63 cm x 8.75 cm (29.0 x 17.57 x 3.45 inches)
Weight	20.9 kg (46.1 lb) with no cartridges installed ^b

^a Dimension from front rail mount to rear of chassis. Front bezel extends forward an additional 2.54 cm (1.5 inches).

^b This weight includes the library with one full height tape drive, and two magazines.

PERFORMANCE SPECIFICATIONS

This section describes the following performance specifications for the library.

DATA TRANSFER RATE

The data transfer rate for the library depends on the model of tape drive(s) installed, as shown in **Table A-3**.

Table A-3 LTO Ultrium tape drive transfer rate and capacity

Tape Drive	Maximum Data Transfer Rate	
	Native	Compressed ^a
LTO Ultrium 5 Half height	140 MB per second	1008 GB per hour
LTO Ultrium 4 Full height ^b	120 MB per second	864 GB per hour
LTO Ultrium 4 Half height	80 MB per second	576 GB per hour
LTO Ultrium 3 Half height ^b	60 MB per second	432 GB per hour
LTO Ultrium 3 Full height ^b	80 MB per second	576 GB per hour
LTO Ultrium 2 Full height	24 MB per second	173 GB per hour

^a Assuming a 2:1 compression ratio. Actual compressed transfer rate varies depending on the type of data being recorded and the system configuration.

^b When attached to an Ultra160 (Ultra3) SCSI bus. All sustained data rates are dependent on the capabilities of the SCSI bus (for example, an Ultra2 SCSI bus is limited to less than 40 MB/second).

TAPE DRIVE PERFORMANCE

When installed in the library, a tape drive performs within its specifications. For more information about tape drive performance specifications, refer to the LTO Ultrium tape drive documentation available from the following web sites:

- ▶ IBM — www.storage.ibm.com/tape/lto/oem/index.html
- ▶ Hewlett Packard — www1.hp.com/storage/tapestorage.html

INVENTORY TIME

An application can issue a command to the library to check all cells for cartridges and scan bar code labels. After checking the cells, the library updates its cartridge inventory. The average cartridge inventory time is approximately:

Library	Seconds	Number of Cartridges	Bar code labels on cartridges?
StorageLibrary T24	120	24	Yes
	1440	24	No

CARTRIDGE SWAP TIME

Move complete time is the time it takes the library to remove a cartridge from a tape drive, return it to its cell, and load the new cartridge into the tape drive.

Move complete time is measured from the time the library receives the move command to the time the library returns status to the initiator indicating that the move is complete. The average move complete time is approximately 150 seconds. Worst case time to complete this command is 10 minutes.

POWER SPECIFICATIONS

AC INPUT VOLTAGES AND POWER CONSUMPTION

The library includes an internal power supply that is capable of accepting 100 to 240 VAC at 50 or 60 Hz. The library has automatic AC input voltage selection. The library is capable of continuous operation when the AC power experiences intermittent operation, voltage surges, and voltage spikes. The maximum operating power consumption for the library is 65 Watts RMS.

US, CANADA, AND EUROPEAN POWER CORD SPECIFICATIONS

The library is shipped with two power cords: One for use in the US and Canada, and one for use in Europe.

Table A-4 US, Canada, European power cord specifications

Power Cord	Description	Use	Connectors and Cordage	Certifications
US/Canada	2.3-meter (7.5-foot), three-conductor	120-volt	<ul style="list-style-type: none"> ▪ One molded NEMA 5-15P male connector ▪ One molded IEC 320/EN60320 female connector ▪ Cordage is 18 AWG 	UL Listed CSA Certified
European	2.5-meter (8.2-foot)	230 to 250-volt	<ul style="list-style-type: none"> ▪ One CEE 7/7 male connector ▪ One IEC 320 C13 female connector ▪ Cordage is CENELEC HD-21 	VDE approved

INTERNATIONAL 220 VAC POWER CORD REQUIREMENTS

If you plan to use the library in a location other than the US, Canada, or Europe, you must supply a power cord that meets the following requirements.

Table A-5 International power cord requirements

The power cord must	have a grounded attachment plug of the proper type, rating, and safety approval for the intended country
	have an IEC 320/EN60320 female connector on one end
The cordage must	be harmonized to CENELEC publication HD-21. The electrical characteristics and rating must be minimum H05VVF3G1.00 (10 A)

ENVIRONMENTAL SPECIFICATIONS

This section describes the following environmental specifications for the library.

BTU OUTPUT

The maximum BTU output for the StorageLibrary T24 LTO is 222 BTUs.

GENERAL ENVIRONMENTAL SPECIFICATIONS

Table A-6 lists general environmental specifications for the library.

Table A-6 Environmental specifications

Specification	Operating ^a	Storage ^b or Non-Operating ^c	Transportation ^d
Ambient Temperature Range	+10° C to +40° C ^e (+50° F to +104° F)	-40° C to +65° C (-40° F to +150° F)	-40° C to +65° C (-40° F to +150° F)
Temperature Variation^f (Thermal Gradient)	1° C per minute; max 10° C per hour (2° F per minute; max 18° F per hour)	1° C per minute; max 20° C per hour (2° F per minute; max 36° F per hour)	1° C per minute; max 20° C per hour (2° F per minute; max 36° F per hour)
Relative Humidity	20% to 80% Non-condensing	10% to 90% Non-condensing	10% to 90% Non-condensing
Wet Bulb	26° C (79° F) max	29° C (84° F) max	29° C (84° F) max
Altitude	-306 m to +3,048 m (-1,004 ft to +10,000 ft)	-306 m to +3,048 m (-1,004 ft to +10,000 ft)	-306 m to +12,192 m (-1,004 to +40,000 ft)

^a These measurements assume that the library is installed in accordance with the instructions in this manual.

^b The library is in its original packaging. The packaging is designed to protect the library from condensation caused by extreme temperature variations (15° C or more). **When the library is moved from a cold storage environment to a warm operating environment, it must be acclimated in its packaging for at least 12 hours before opening to prevent serious condensation damage from occurring.**

^c The library has been unpacked.

^d The library has not been unpacked. The transportation period does not exceed 72 hours.

^e The upper ambient operating temperature limit of +40° C (+104° F) is specified at +914.4 m (+3,000 feet), derated linearly to +24° C (+75.2° F) at +3,048 m (+10,000 feet).

^f The data cartridges' temperature and humidity must be allowed to stabilize in the specified ambient environment for 24 hours.

PARTICULATE CONTAMINATION LIMITS

The ambient operating environment for the library should not exceed the particulate counts specified for the tape drive. For more information, refer to the LTO Ultrium tape drive documentation available from the following web sites:

- ▶ IBM — www.storage.ibm.com/tape/lto/oem/index.html
- ▶ Hewlett Packard — www1.hp.com/storage/tapestorage.html

ACOUSTIC NOISE LIMITS

The overall, averaged A-weighted sound pressure level (in decibels) for the library does not exceed the upper limits specified in [Table A-7](#).

Table A-7 Acoustic Noise Limits

Operating Mode	dBA ^a
The library is powered on and idle.	50
The robot is moving and the tape drive is operating in streaming mode.	60 ^b

^a dBA is the average A-weighted sound pressure level over the following frequency range: 5 Hz to 12.5 KHz.

^b Represents a maximum sustained operational level.

SHOCK AND VIBRATION LIMITS

The library will operate normally after experiencing shock loads as specified in [Table A-8](#). The operating shock levels indicate how much shock the library can withstand while the enclosed tape drive (or tape drives) is reading and writing data.

Table A-8 Shock limits

Operating	Random vibration at 1 Hz to 400 Hz @ 0.3 Grms, 20 minutes per axis Swept Sine 5 Hz to 500 Hz to 5 Hz @ 0.3 g, 1 octave per minute, 3 sweeps per axis 3 g, 5 ms half sine, 20 shocks each side
------------------	---

SHIPPING SPECIFICATIONS

The library's shipping carton passes the tests described in International Safe Transit Association (ISTA) Procedure 2A.

[Table A-9](#) lists the weight and dimensions of the library packed for shipping. Packaging includes rack mounting kit, power cord, and quick start guide.

Table A-9 Shipping weight and dimensions

Shipping Weight	Dimensions (Length x Width x Depth)
27.7 kg (63.1 lb)	91.3 x 57.15 x 28.19 cm (36 x 22.5 x 11.1 inches)



Caution

If you need to re-pack and ship the library, refer to the packing instructions in [Appendix D](#). To avoid damaging the library, use the original shipping carton and packing materials (or replacement packaging obtained from your vendor). The shipping carton and packing materials are not intended to be used for shipping items other than or in addition to the library and its accessories.

UNIVERSAL SERIAL BUS (USB) INTERFACE

The USB interface:

Supports	<ul style="list-style-type: none"> ▪ USB Mass Storage Devices (for example, Flash drives) ▪ FAT file formats (FAT, FAT12, FAT 16, and FAT 32) ▪ Long file names
Does <i>not</i> support	<ul style="list-style-type: none"> ▪ Keyboards ▪ Pointer devices (computer “mouse”) ▪ Cameras ▪ Multimedia devices

SAFETY AND REGULATORY AGENCY COMPLIANCE

The StorageLibrary T24 LTO complies with the safety and regulatory agency standards listed below when installed in accordance with this manual.

UNDERWRITERS LABORATORY



The StorageLibrary T24 LTO is listed by Underwriters Laboratories, Inc. Representative samples of this product have been evaluated by UL and meet the applicable U.S. and Canadian safety standards.

GS



The GS Mark for the StorageLibrary T24 LTO demonstrates that it has met the requirements of EN60950-1:2001.

EUROPEAN COMMUNITY



This Information Technology Equipment has been tested and found to comply with the following European directives:

(1) EMC Directive 89/336/EEC, amended by directive 93/68/EEC, according to:

EN55022 (Class A)

EN55024

EN 61000-3-2

EN 61000-3-3

(2) Low Voltage Directive 73/23/EEC, amended by directive 93/68/EEC, according to: IEC 60950-1

UNITED STATES: FCC DECLARATION OF CONFORMITY



We declare under our sole responsibility that:

Product Name: StorageLibrary T24 LTO

To which this declaration relates, is in conformity with the following standard(s) or other normative documents:

ANSI C63.4-1992 Methods of Measurement

Federal Communications Commission 47 CFR Part 15, Subpart B

15.107 (b) Class A Conducted Limits

15.109 (b) Class A Radiated Emission Limits

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Shielded cables are required for this device to comply with FCC Rules. Use shielded cables when connecting this device to others.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CANADIAN VERIFICATION



This Class A digital apparatus complies with ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

JAPAN

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI- A

Translation: This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

AUSTRALIA AND NEW ZEALAND



This device has been tested and found to comply with the limits for a Class A digital device, pursuant to the Australian/New Zealand standard AS/NZS 3548 set out by the Australian Communications Agency.

RESTRICTION OF HAZARDOUS SUBSTANCES IN ELECTRICAL AND ELECTRONIC EQUIPMENT (ROHS)



The RoHS marking indicates that the StorageLibrary T24 LTO is in compliance with European Council Directive 2002/95/EC, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

WASTE OF ELECTRONIC AND ELECTRICAL EQUIPMENT (WEEE)



This device is in compliance with 2002\96\EC Waste of Electronic and Electrical Equipment (WEEE).

CHINA ROHS



This product is marked in accordance with China's Ministry of Information Industry (MII) "Management Methods for Controlling Pollution Cause by Electronic Information Products" Order #39. The Environmental Protection Use Period (EPUP) is determined to be 30 years. Packaging materials are also marked according to Chinese national standard GB 18455 - 2001 "Packaging and Recycling Symbols".

NOTES

B

INTERFACE SPECIFICATION

This appendix provides information about the interface options of the library and the tape drives.

To view this information...	go to...
SCSI Interface Specifications—SCSI tape drive only	below
SAS Interface Specifications—SAS tape drive only	page 227
Fibre Channel Interface Specifications—FC tape drive only	page 228
Ethernet Specifications—Library	page 229

SCSI INTERFACE SPECIFICATIONS

The library has a standard SCSI interface through the tape drives, via the Automation/Drive Interface - Command (ADC), which support the commands in this section.

Note: The library communicates with the host through the SCSI interface of the tape drive(s) via the ADI serial interface. The SCSI interface as seen by the host is the SCSI interface of the tape drive. The library is shown as LUN 1 of the tape drive's SCSI ID.

For information about how LTO Ultrium tape drive's support SCSI communications, refer to the tape drive documentation, available from:

- ▶ IBM — www.storage.ibm.com/tape/lto/oem/index.html
- ▶ Hewlett Packard — www1.hp.com/storage/tapestorage.html

For information about ADI, see: *Automation/Drive Interface - Command (ADC)*

- ▶ T-10 — www.t10.org

SCSI CABLE REQUIREMENTS

SCSI cables and terminators are included with the library. The wide LVD SCSI cable conforms to SCSI-3 specifications. Check the tape drive documentation for information about SCSI cable requirements.

If you want to use your own SCSI cable(s), follow these guidelines:

Use high-density, wide (68-pin) Ultra 160 SCSI cables that conform to SCSI-3 specifications. To comply with the regulations and standards listed in [Appendix A](#), all SCSI cables used with the library must be properly shielded.



Caution

Although the tape drive's wide LVD SCSI interface is compatible with single-ended SCSI, Tandberg Data does not support the use of the tape drives in this library on a single-ended bus or on a bus with single-ended devices attached.

All wide SCSI configurations (single-ended, LVD, and HVD) use the same 68-pin connector. Attaching the tape drive's directly to an HVD SCSI bus may cause the SCSI bus to hang.

SCSI TERMINATOR REQUIREMENTS

One wide Ultra 3 Active SCSI terminator is provided with the library. If you want to use your own terminator, use a high-quality Ultra 3-rated Active SCSI terminator. An appropriate terminator is stamped with Ultra 3 or LVD 160 and "Active Negation."

! Important

LTO-2, LTO-3, and LTO-4 U160 SCSI tape drives require an Ultra 3 Active Ultra 160 SCSI terminator. LTO-4 U320 SCSI tape drives require an Ultra 3 Active Ultra 320 SCSI terminator. An inadequate terminator will result in various SCSI bus issues, including bus hangs and Read/Write failures.

SCSI COMMUNICATIONS

This section provides information about how the library communicates on the SCSI bus via the tape drives. As described in this section, a SCSI application program communicates with the library through the tape drive(s) via ADI to perform the following actions:

- ▶ Move cartridges between the storage locations and a tape drive
- ▶ Update and access information stored in the cartridge inventory
- ▶ Set various operating parameters
- ▶ Inquire about the status of a specific operation
- ▶ Scan bar code labels
- ▶ Prevent the library door from being opened
- ▶ Prevent the use of certain operator panel menus
- ▶ Inquire about the library serial number
- ▶ Perform diagnostics and receive results
- ▶ Upload diagnostic data
- ▶ Upgrade the library firmware

For more information about SCSI communications, refer to:

- ▶ *The Magnum 224, Magnum 448, StorageLibrary T24, or StorageLoader 2U LTO SCSI Reference*
- ▶ *The tape drive's Product Manual*

► *The Automation/Drive Interface - Command (ADC)*

SCSI Commands

The initiator sends commands to the library through a tape drive via ADI to request an operation. [Table B-1](#) lists and briefly describes the SCSI commands supported by the library.

Note: For information about tape drive commands, refer to the tape drive documentation.

Table B-1 SCSI command set supported by the library

When you issue this command ...	OP Code	The library does this ...
INITIALIZE ELEMENT STATUS (6 bytes)	07h	Checks all element addresses for cartridges and scans bar code labels. Typical time to complete: 12 seconds/single cell, 150 seconds/24 cells. Worst case time to complete: 3 hours
INITIALIZE ELEMENT STATUS WITH RANGE (10 bytes)	37h	Checks a range of elements or all the storage elements for cartridges. Also scans bar code labels. Typical time to complete: 12 seconds/single cell, 150 seconds/24 cells. Worst case time to complete: 3 hours
INQUIRY (6 bytes)	12h	Sends information about its parameters, including the library serial number, to the initiator.
LOG SELECT (10 bytes)	4Ch	Manages statistical information maintained by the library.
LOG SENSE (10 bytes)	4Dh	Returns statistical and condition information to the initiator.
MODE SELECT (6 bytes)	15h	Accepts specific element addresses, LCD information, and operating parameters from the initiator. Can also prevent access to selected operator panel menus.
MODE SENSE (6 bytes)	1Ah	Reports its operating mode parameters to the initiator.
MOVE MEDIUM (12 bytes)	A5h	Moves a cartridge from one location to another. Typical time to complete: 70 seconds Worst case time to complete: 10 minutes
POSITION TO ELEMENT (10 bytes)	2Bh	Positions the cartridge loader at a specific location (element address). Typical time to complete: 10 seconds Worst case time to complete: 5 minutes
PREVENT/ALLOW MEDIUM REMOVAL (6 bytes)	1Eh	Disables or enables the interlock mechanism in the I/E port, preventing or allowing the user from accessing cartridges through the I/E port.
READ ELEMENT STATUS (12 bytes)	B8h	Reports the status of its medium transport, storage, import/export, and data transfer elements to the initiator.

Table B-1 SCSI command set supported by the library (continued)

When you issue this command ...	OP Code	The library does this ...
RECEIVE DIAGNOSTIC RESULTS (6 bytes)	1Ch	Returns diagnostic results from the last SEND DIAGNOSTIC command.
RELEASE (6 bytes or 10 bytes)	17h 57h	Releases a unit reservation previously set by the initiator using the RESERVE command.
REQUEST SENSE (6 bytes)	03h	Returns sense data to the initiator.
REQUEST VOLUME ELEMENT ADDRESS (12 bytes)	B5h	Returns the element descriptors (including element address and status flags for each element) created as a result of the SEND VOLUME TAG command. Data is returned in element address order.
RESERVE (6 bytes or 10 bytes)	16h 56h	Reserves the library.
REZERO UNIT (6 bytes)	01h	Implemented to provide software compatibility when it is required. Because the library does not need to calibrate its mechanics, it always returns and immediate Good status in response to this command.
SEND DIAGNOSTIC (6 bytes)	1Dh	Requests that a self test or another specific test be performed.
SEND VOLUME TAG (12 bytes)	B6h	Compares the template it receives from the initiator to the cartridge inventory information in memory, and determines which bar code labels match the template.
TEST UNIT READY (6 bytes)	00h	Informs the initiator whether it is ready to accept all other commands.
WRITE BUFFER (10 bytes)	3Bh	Writes new microcode received from the initiator into its flash EEPROM. The new microcode must be sent in sections through multiple WRITE BUFFER commands.

STATUS BYTES

After the library executes a command, it issues a status byte to the initiator that indicates whether it performed the command successfully. [Table B-2](#) describes the four status bytes supported by the library.

Table B-2 Status byte descriptions

Status Byte	Hex Value	Description
Good	00h	Indicates that the library successfully completed the operation.
Check Condition	02h	Indicates that an error, exception, or abnormal condition has caused sense information to be set. The initiator can issue a REQUEST SENSE command to access this information.

Table B-2 Status byte descriptions

Status Byte	Hex Value	Description
Busy	08h	Indicates that the library is unable to accept a command from the initiator.
Reservation Conflict	18h	Indicates that the elements identified in the command are reserved by another initiator.

SENSE KEYS

When the library returns Check Condition status to the initiator, the initiator can issue a REQUEST SENSE (03h) command to receive information about the error, exception, or abnormal condition. This information includes a sense key, which describes the general error or change of state. [Table B-3](#) describes the sense keys supported by the library.

Table B-3 Supported sense keys

Sense Key	Hex Value	Description
No Sense	0h	Indicates that there is no specific sense key information to be reported.
Not Ready	2h	Indicates that the library cannot accept any motion commands.
Hardware Error	4h	Indicates that the library detected a hardware failure.
Illegal Request	5h	Indicates that there was an illegal parameter in the command descriptor block (CDB) or in the additional parameters supplied as data for some command.
Unit Attention	6h	Indicates that the state of the library may have changed.
Aborted Command	Bh	Indicates that the library aborted the last command.

ELEMENTS

Elements are the locations in the library that can accept a cartridge.

Element	Description
Medium transport	The cartridge handling mechanism (robot) is the medium transport element. This mechanism moves the cartridges between the tape drive(s) and the storage cells.
Storage (slots) ^a	The library has 24 storage elements.
Data transfer	A tape drive is a data transfer element that reads and writes data as requested by the host.
Import/Export ^a	The library has one I/E port to load cartridges individually into the library.

^a The storage slots/cells increase or decrease based on the I/E Port setting (enabled or disabled). Disabling the I/E Port increases the storage slot/cell count. You can also assign slot/cell 2 as a "fixed" cleaning slot (see ["Setting Up Automatic Tape Drive Cleaning"](#) on page 57).

The library maintains current information about each element in its cartridge inventory, which is stored in memory.

ELEMENT ADDRESSES

Each of the elements in the library requires an address so it can be identified by SCSI commands. [Figure B-1](#) and [Figure B-2](#) shows the default addresses assigned to each element in the library.

Note: The default element addresses are identical to the element indexes. The library uses element indexes to identify the library elements when performing diagnostic operations from the operator panel.

Use the **MODE SELECT** command to change the address of each element in the library, as described in the *Magnum 224, Magnum 448, StorageLibrary T24, or StorageLoader 2U LTO SCSI Reference*.

I/E Port Enabled/No Fixed Cleaning Slot

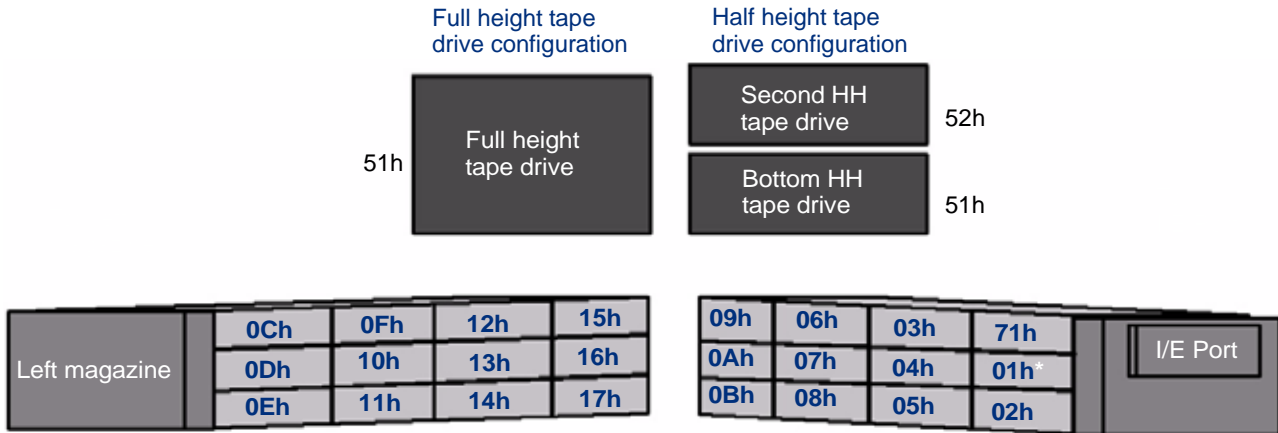


Figure B-1 Library element addresses (I/E port enabled/no fixed cleaning slot)

Note: If the fixed cleaning slot is enabled, this cell becomes the fixed cleaning slot (labeled 01* in [Figure B-1](#)) and all storage element numbers reduce by one. The fixed cleaning slot will not be accessible through SCSI.

I/E Port Disabled/No Fixed Cleaning Slot

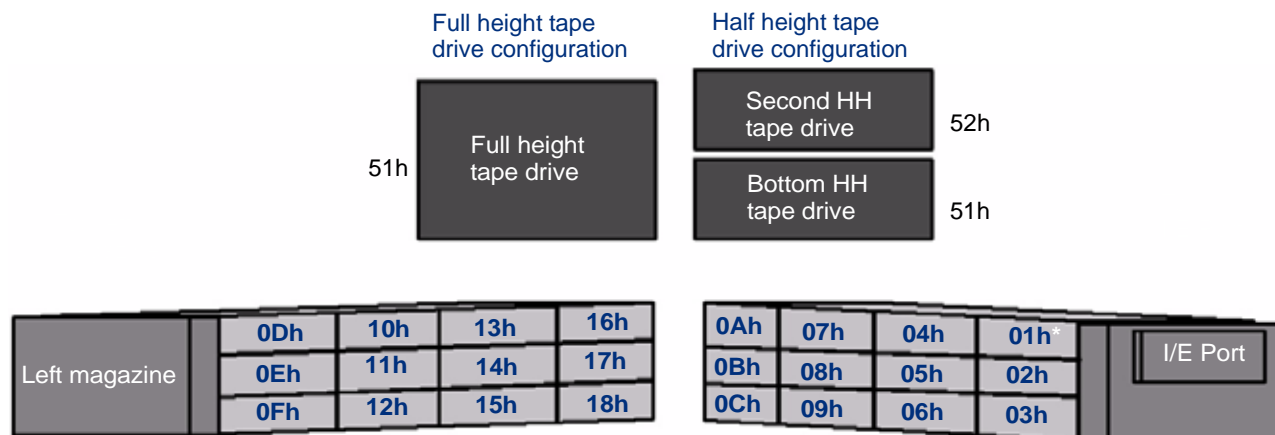


Figure B-2 Library element addresses (I/E port disabled/no fixed cleaning slot)

Note: If the fixed cleaning slot is enabled, this cell becomes the fixed cleaning slot (labeled 01* in Figure B-2) and all storage element numbers reduce by one. The fixed cleaning slot will not be accessible through SCSI.

SAS CABLE SPECIFICATIONS

SAS cables are not included with the library. The number external of SAS cables required for attaching the library to a SAS host depends on how many tape drives are installed.

Library (tape drive) connector	Host connector
Mini SAS cable plug connector	Mini SAS cable plug connector or SAS cable plug connector

The maximum allowable length of a SAS bus is 4 meters (13.1 feet). Make sure the SAS bus attached to the tape drive does not exceed this length.

FIBRE CHANNEL OPTICAL CABLE SPECIFICATION (FC TAPE DRIVE)

Fibre Channel cables are not included with the library. The number of optical fiber cables required for attaching the library to a Fibre Channel network depends on how many tape drives are installed.

Each of the tape drive optical fiber ports contains a transmitter and receiver optical subassembly. The transmitter subassembly contains an internal semiconductor laser diode that operates at a wavelength of 850 nm (nanometers).

Use either 50-micron or 62.5-micron multi-mode optical fiber cables with dual single-channel (LC) connectors.

- ▶ 50-micron multi-mode optical fiber cables must comply with the 400-M5-SN-I classification as specified in the Fibre Channel standard (FC-PI-2).
- ▶ 62.5-micron multi-mode optical fiber cables must meet the 400-M6-SN-I classification.

Table B-4 Multi-mode optical cable characteristics

Cable type	Transmitter	Data Rate (MB/sec.)	Maximum Distance
50-micron multi-mode fiber ^a	850 nm shortwave laser	400	.5 m – 150 m
62.5-micron multi-mode fiber ^b	850 nm shortwave laser	400	.5 m – 70 m

^a Complies with the 400-M5-SN-I classification

^b Complies with the 400-M6-SN-I classification

ETHERNET SPECIFICATIONS

This section provides specifications for the library's Ethernet interface, including information about the following:

- ▶ General Ethernet information
- ▶ Cable requirements
- ▶ Ethernet port pin assignments

GENERAL ETHERNET INFORMATION

The Ethernet port allows connection to a 10/100Base T Ethernet network. You can use the Ethernet connection to perform the following activities:

- ▶ Monitor library operations using the built-in Remote Management utility (see [Chapter 4](#))
- ▶ Upload diagnostic information from the library and tape drives using FTP (see [“Creating a Diagnostic Listing via FTP” on page 189](#))
- ▶ Upgrade the library's firmware using FTP (see [“Upgrading Library Firmware via FTP” on page 189](#))

ETHERNET CABLE REQUIREMENTS

The Ethernet port connector is a pin-through-hole RJ-45 shielded connector. To connect to the Ethernet port, use the shielded Category 5 (10/100BaseT connection) data-grade cable included with the library or a similar Category 5 cable that is compliant with EIA/TIA 568.

ETHERNET PORT PIN ASSIGNMENTS

[Table B-5](#) shows the Ethernet port's pin assignments and functions.

Table B-5 Ethernet port pin assignments and functions

Pin number	Function
1	TD+
2	TD-
3	RD+
4	Not used
5	Not used
6	RD-
7	Not used
8	Not used

Notes

C

WRITE ONCE, READ MANY (WORM) CAPABILITY

OVERVIEW

Certain records retention and data security applications require a Write Once, Read Many (WORM) method for storing data on tape. To meet this data storage requirement, a new WORM feature is now available on the StorageLibrary T24 LTO when you have an LTO-3, LTO-4, or LTO-5 tape drive installed.

Note: Only the LTO-3, LTO-4, and LTO-5 tape drives have WORM capability. It is not available on the LTO-2 or LTO-1 tape drives.

No physical hardware changes are required to make the tape drive compatible with the WORM feature; however, appropriate WORM-capable drive firmware must be installed. See [“Requirements” on page 233](#) to determine the firmware requirements.

WORM MEDIA

Because standard read/write media are incompatible with the WORM feature, a specially formatted WORM tape cartridge (see [Figure C-1](#)) is required. Each WORM cartridge has a unique, worldwide cartridge identifier (WWCID), which comprises the unique CM chip serial number and the unique tape media serial number.

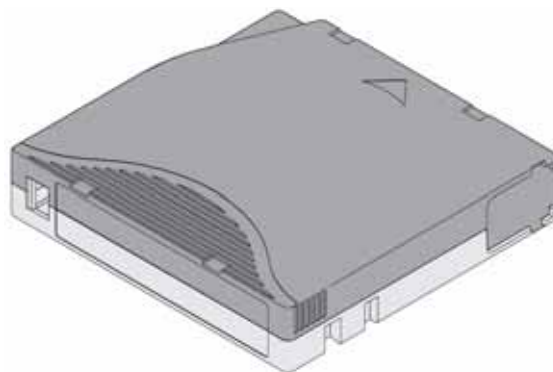


Figure C-1 Ultrium WORM tape cartridge

Table C-1 lists WORM media specifications.

Table C-1 WORM tape cartridge specifications

Tape Cartridge	Case Color ^a	Native Data Capacity
Ultrium 3 WORM	Two-toned colored cartridge	400 GB (800 GB at 2:1 compression)
Ultrium 4 WORM	Two-toned colored cartridge	800 GB (1.6 TB at 2:1 compression)
Ultrium 5 WORM	Two-toned colored cartridge	1.5 TB (3.0 TB at 2:1 compression)

^a The two-toned coloring allows you to easily distinguish WORM cartridges from Write/Read cartridges.

DATA SECURITY ON WORM MEDIA

Certain built-in security measures help ensure that the data written on a WORM cartridge does not become compromised, for example:

- ▶ The format of an Ultrium 5-1.5 TB or Ultrium 4-800 GB WORM Tape Cartridge is unlike that of standard read/write media. This unique format prevents a drive that lacks WORM-capable firmware from writing on a WORM tape cartridge.
- ▶ When the tape drive senses a WORM cartridge, the firmware prohibits the changing or altering of user data already written on the tape. The firmware keeps track of the last appendable point on the tape.

WORM MEDIA ERRORS

The following conditions cause WORM media errors to occur:

- ▶ Information in the servo manufacturer's word (SMW) on the tape must match information from the cartridge memory (CM) module in the cartridge.
 - ▶ If it does not match, the tape drive will report a Media Error code.
 - ▶ If your backup application or operating system returns SCSI sense information, the Sense information will be **Sense Key (03) Medium error**.
- ▶ Inserting a WORM tape cartridge into a tape drive that is not compatible with WORM causes the cartridge to be treated as an unsupported medium. The tape drive will report a media Error Code **7**.
 - ▶ Only LTO-3, LTO-4, and LTO-5 tape drives have WORM capability. Inserting a WORM cartridge into an LTO-2 or an LTO-1 tape drive will produce the above error.

- ▶ If you are using an LTO-3 tape drive and receive a media Error Code **7**, upgrading your LTO-3 tape drive's firmware to the correct code level will resolve the problem. The firmware must be at version 54xx or higher and is available at www.tandbergdata.com.

REQUIREMENTS

The WORM feature requires the following:

- ▶ LTO-3, LTO-4, or LTO-5 generation of tape drive—the WORM feature is not available on earlier generations of LTO tape drives (LTO-2 or LTO-1)
- ▶ WORM-capable drive firmware release 54xx or higher (LTO-3 tape drive)
- ▶ Special WORM tape cartridges

You can use LTOTool to determine the firmware level currently in your tape drive(s). Refer to the readme file provided with the program for installation instructions. Refer to the program's online help for instructions on determining the tape drive(s) firmware level.

If your LTO-3 tape drive has an earlier version of firmware, you can download the updated firmware by visiting the download page on the Tandberg Data web site at www.tandbergdata.com.

Note: Refer to "Upgrading Library Firmware and Creating Diagnostics (FTP)" on page 187 for instructions on upgrading tape drive firmware.

TAPEALERT FLAGS

Table C-2 shows the new TapeAlert flags associated with the WORM cartridge.

Table C-2 TapeAlert flags associated with the WORM media

Parameter Code		Description	Set	Clear	Type
In Hex	In Decimal				
3Bh	59	(WORM Medium – Integrity Check Failed) Set when the tape drive determines that the data on tape is suspect from a WORM point of view.		L	Critical
3Ch	60	(WORM Medium – Overwrite Attempted) Set when the tape drive rejects a Write operation because the rules for allowing WORM writes have not been met.	E		Critical

ERROR CODES

Tape drive errors associated with the new WORM capability result in either a Medium Error (Sense Key 3h) or a Data Protect error (Sense Key 7h). The tape drive returns this error information in response to a SCSI REQUEST SENSE command. Refer to the tape drive SCSI reference for additional information about the error codes returned by the REQUEST SENSE command.

Table C-3 shows the new ASC/ASCQ error codes for Sense Key 3h (Medium Error).


Table C-3 ASC/ASCQ error codes for a Medium Error (SK 3) with WORM media

ASC	ASCQ	Description
04h	10h	Logical Unit Not Ready, Auxiliary Memory Not Accessible.
11h	12h	Auxiliary Memory Read Error
30h	0Dh	Medium Error/WORM Medium – Integrity Check: Set when the tape drive rejects a Read operation because the current cartridge is a Suspicious WORM cartridge, and the WTRE bit is set to 0.

Table C-4 shows the new ASC/ASCQ error codes for Sense Key 7h (Data Protect).

Table C-4 ASC/ASCQ error codes for a Data Protect error (SK 7) with WORM media

ASC	ASCQ	Description
30h	0Dh	Data Protect/WORM Medium – Integrity Check: Set when the tape drive rejects a Write operation because the current cartridge is a Suspicious WORM cartridge.
30h	0Ch	Data Protect/WORM Medium – Overwrite Attempted: Set when the tape drive rejects a Write operation because the rules for allowing WORM writes have not been met.

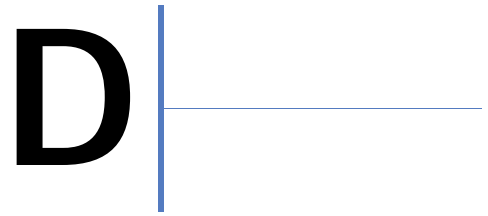

SHIPPING THE LIBRARY

This chapter describes the process of returning the library for service. If you need to return the library for service, first contact your service provider. If your service provider instructs you to return the library directly to Tandberg Data, contact Tandberg Data Technical Support (see [page iii](#)) to obtain a Return Materials Authorization (RMA) number and the shipping address. When you have the RMA number, follow these instructions.

PREPARING THE LIBRARY FOR SHIPPING



Caution

You must park the robot prior to moving or shipping the library to avoid damaging the internal components and voiding your warranty.

REMOVE ALL CARTRIDGES


Remove all of the cartridges from the library. (See [page 122](#) for instructions.) Make sure that the tape drive(s) contain no cartridges.

PARK THE ROBOT IN THE LIBRARY


Park the robot by following these steps:

1. At the Home screen, press **Maint**. If necessary, enter the operator panel password (see [page 73](#)).

2. Press ▼ until the selection arrow (▶) points to **Library Maintenance**, and then press **Select**.

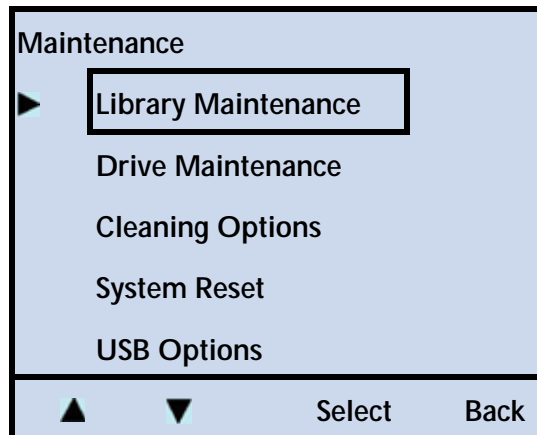


3. Press ▼ until the selection arrow (▶) points to **Shipping**.

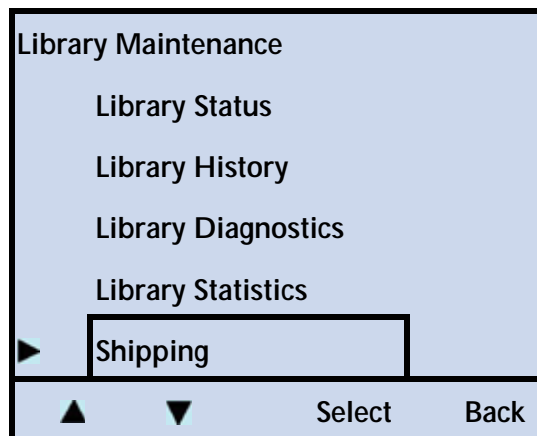


4. Press **Select**.
 - ▶ If your library shipped with two red shipping locks shown in [Figure 2-11](#), continue with [Step 5](#) below.
 - ▶ If your library shipped with a lock *other* than the two red shipping locks shown in [Figure 2-11](#), you need to set the Ship Lock Type. This step may require a firmware update, which is available at www.tandbergdata.com.


- a. Press ▼ until the selection arrow (▶) points to **Ship Lock Type**, then press **Select**.

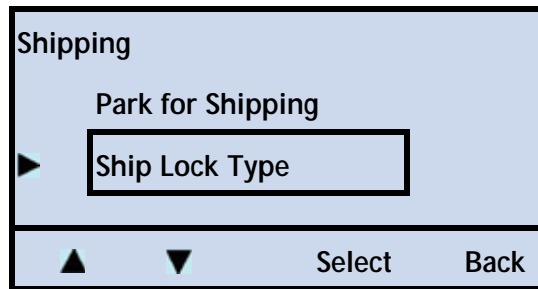

- b. Press **Modify**

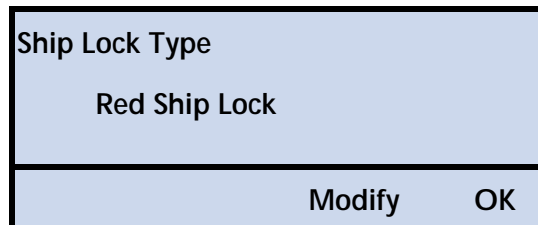


- c. Press ▼ until the selection arrow (▶) points to **Not-Red Ship Lock**, then press **Select**.

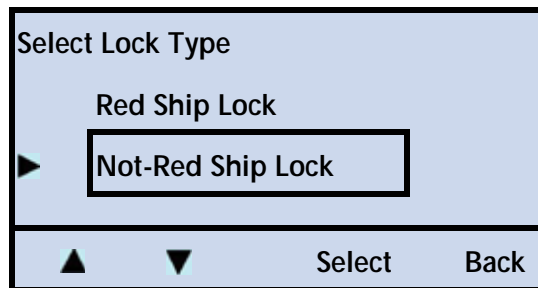


- d. Press **OK** when you receive the "Ship Lock Type Good" confirmation message.


5. Press ▲ or ▼ until the selection arrow (▶) points to **Park For Shipping**, then press **Select**.

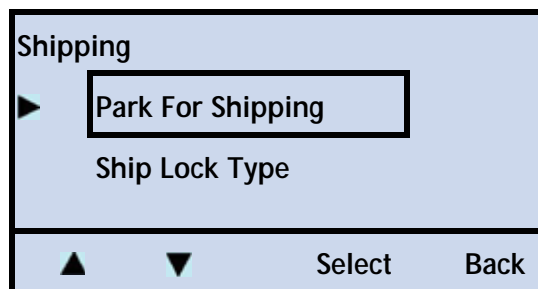

The following screen appears. Press **OK** to complete the process.

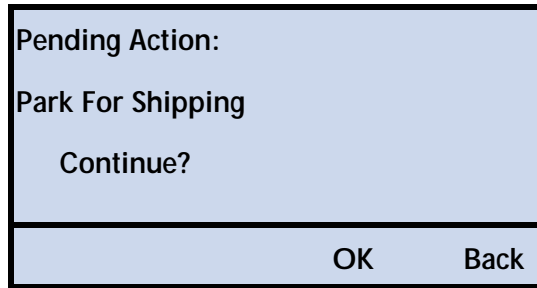

When the robot is parked, the following screen appears

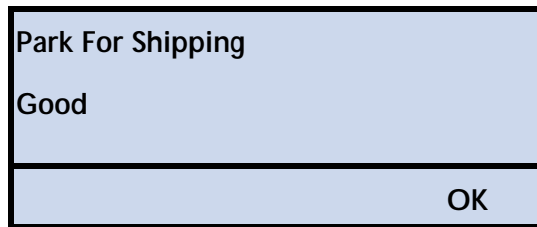

REPLACING THE SHIPPING LOCKS

Follow these steps to replace the shipping locks.

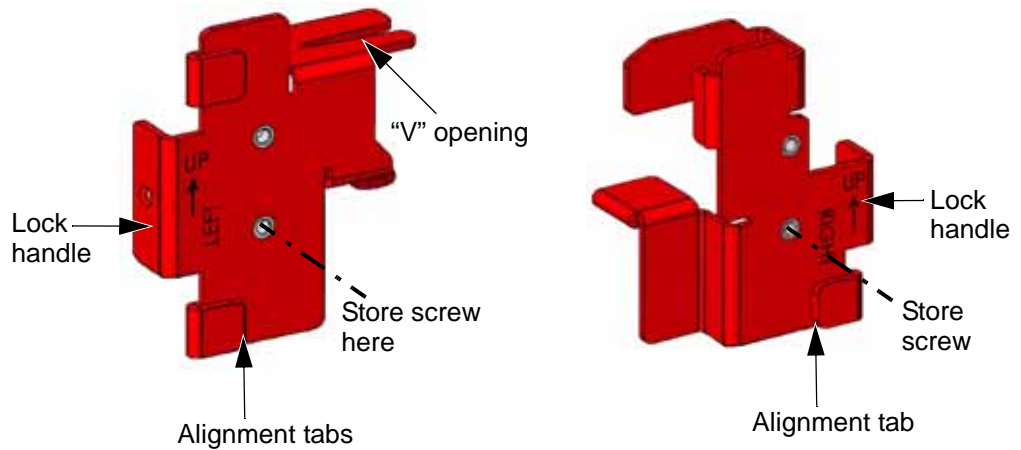


Figure D-1 Shipping locks

SHIPPING LOCK INSTALLATION



Caution

This step must be completed *after* you “park the robot” described in the previous section. You can damage the robot if it is not fully parked prior to installing the lock. See [“Preparing the Library for Shipping” on page 235](#).

1. **Remove the magazines.** Press the left magazine eject button. While supporting it, gently slide the magazine *straight* out of the library. Repeat the process for the right magazine.

**Caution**

Use care not to twist the magazine or move it side to side as you insert or remove it from the library. Not inserting it straight into / pulling it straight out of the opening can damage components inside the library.

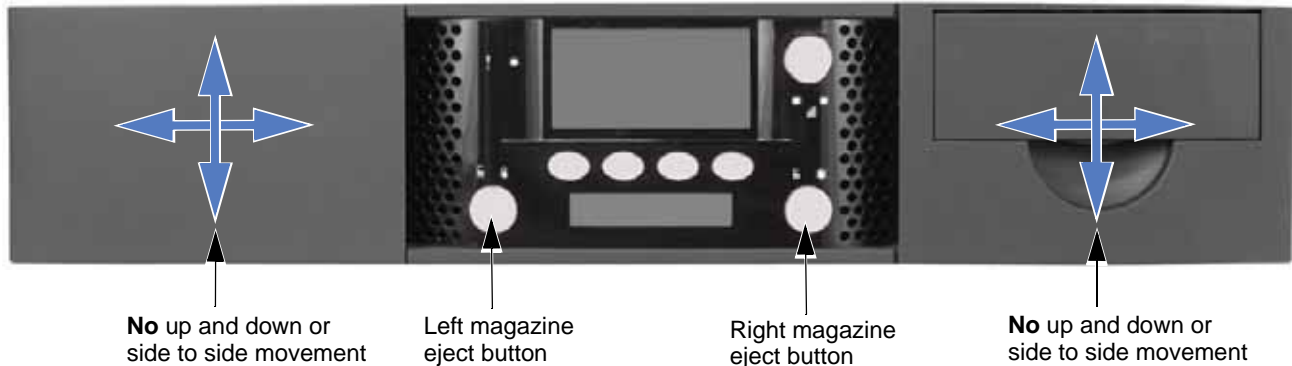



Figure D-2 Shipping lock replacement–step 1

2. **Power the library off.** Press the **0** on the back panel.
3. **Insert the shipping locks.** Follow steps **a** and **b** to install the shipping locks.

! Important

This view shows the library with the top cover removed for clarity. DO NOT remove the top cover or you will void your warranty.

- a. Gently slide the shipping locks into place.

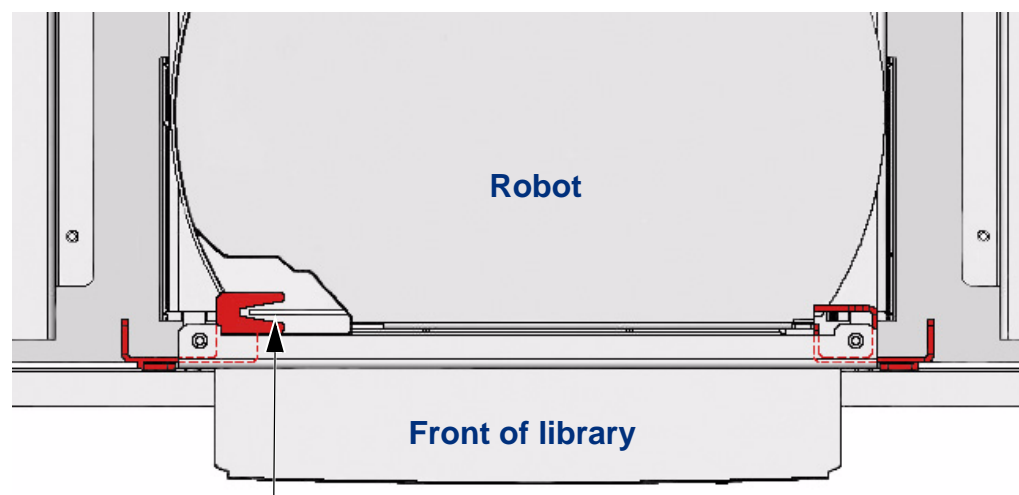

Ensure that you “capture” the internal robot feature (wall) shown here with the “V” opening.

Figure D-3 Shipping lock replacement–step 3a

b. Secure the locks with the screws, as shown here.

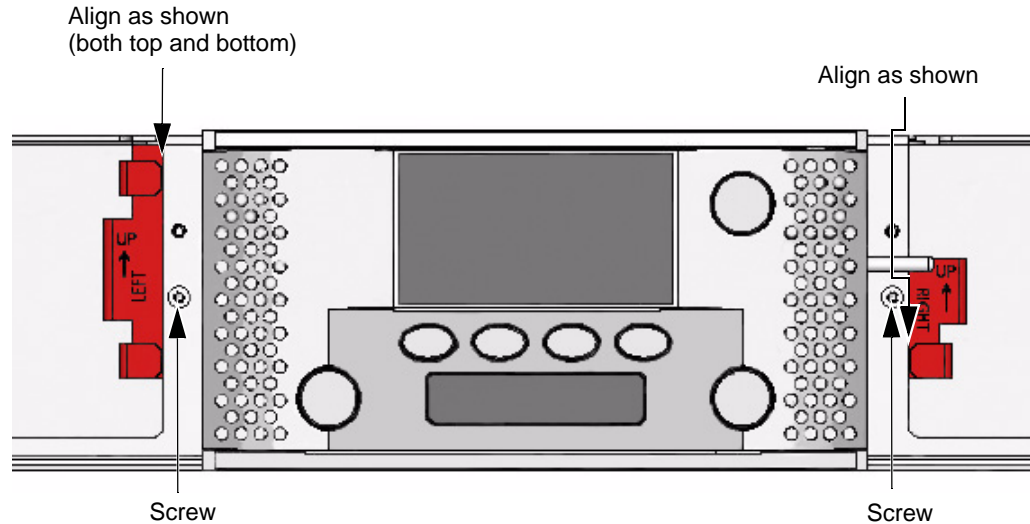


Figure D-4 Shipping lock replacement—step 3b

4. **Replace the magazines.** While supporting it, gently slide the left magazine *straight* into the library. When you encounter resistance, press the magazine firmly and it “snaps” into place. Repeat the process for the right magazine. Continue with [Accessories](#) (below).



Caution

Use care not to twist the magazine or move it side to side as you insert or remove it from the library. Not inserting it straight into / pulling it straight out of the opening can damage components inside the library.

ACCESSORIES

After installing the shipping locks, remove the following from the library and tape drives:

- ▶ Power cord
- ▶ Ethernet cable
- ▶ SCSI cables or Fibre Channel cables
- ▶ SCSI terminator

REMOVING THE LIBRARY FROM THE RACK



Warning

The library weighs 46.1 pounds (20.9 kg). Two people are needed to move or lift the library. Most of the weight is toward the back of the library.



Warnung

Die Library wiegt 20.9 kg. Es sind mindestens 2 Personen erforderlich, um die Library zu bewegen oder zu heben. Der hintere Teil Library hat das Größte Gewicht.



Advertencia

La biblioteca montada sobre bastidor pesa 20.9 kg. Se necesitan dos personas para mover o levantar la biblioteca. La parte trasera de la biblioteca es la de mayor peso.


If the library is installed in a rack, remove it as described below.



Important

Do not ship the rack-mounting hardware if you are returning the library for service.

1. From the back of the rack, use a #2 Phillips screwdriver to remove the two screws that secure the library to the rails (see [Figure D-5](#)). Save the screws.

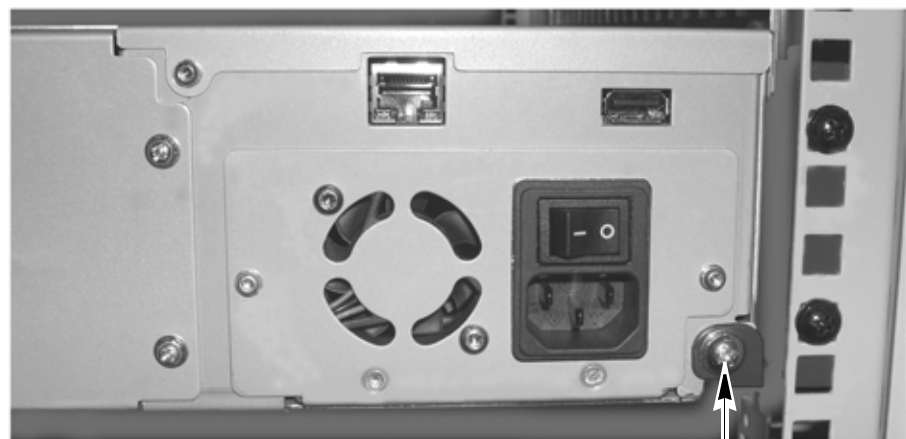

Remove this screw
(one each side)

Figure D-5 Removing the screws securing the library to the rails

2. From the front of the rack, slide the library forward and out of the rack (see [Figure D-6](#)).



Figure D-6 Removing the library from the rack

PACKING THE LIBRARY

Use the original packing materials (shipping box, foam cushions, foam spacers, and antistatic bag) to pack the library. You will also need packing tape.



Caution

To avoid damaging the library and voiding your warranty, be sure to use the original shipping materials (or replacement materials obtained from your vendor) when repacking and shipping the library. Do not use the shipping box and packing materials to ship items other than the library and its accessories.

To pack the library:

1. Place the library inside its antistatic bag (see [Figure D-7](#)). Tape the bag closed.



Figure D-7 Library in antistatic bag

- Put the foam cushions in the bottom of the box, as shown in [Figure D-8](#).

Curved foam piece
(for front of library)

Flat foam piece
(for back of library)



Figure D-8 Bottom foam packing pieces

- Place the library in the box, and then place the top foam piece on top of the library as shown in [Figure D-9](#).



Figure D-9 Top foam packing piece (shown with accessories)

- If you are shipping the accessories with the library, insert them in the openings as shown in [Figure D-9](#) and [Figure D-10](#).

! Important Do not ship accessories such as the power cord, Ethernet cable, SCSI cables, and terminator if you are returning the library for service. Pack these items only if you are moving the library to a new location.

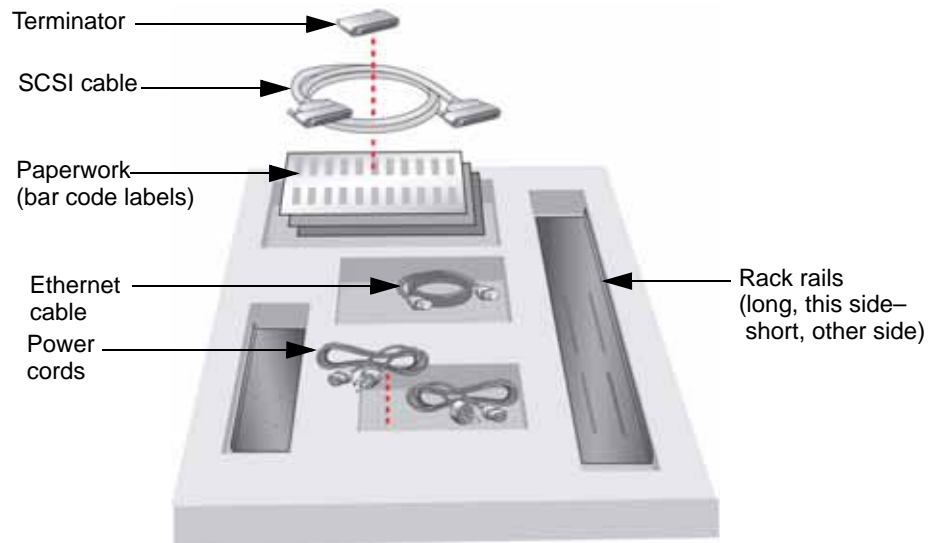


Figure D-10 Accessory item placement in shipping box

5. Place any necessary paperwork on top of the die-cut piece.
6. Place the top cover on the box and seal it securely with packing tape.
7. Place the shipping label on the box.

E

ERROR MESSAGES

This appendix defines error messages that may appear on the library's front panel and provides corrective actions.



Caution

Most library components can be replaced only by Tandberg Data-approved service providers. If you cannot find an obvious cause for the problem, contact your service provider. Do not attempt to replace any components other than the tape drive(s) or the magazine(s). If you do, you will void your warranty.

! Important

Some corrective actions advise you to reset or power the library off and back on. To avoid disrupting communication between the host computer and other devices on the bus, make sure that there is no activity on the bus before you reset or power off the library.

If you need to power the library off, first unload the cartridge from the tape drive(s), if possible. If you power the library off and back on while a cartridge is in a tape drive, the tape drive may have to perform a lengthy format recovery process.

LIBRARY LCD ERROR MESSAGES

This section describes the general error messages that can appear on the library's operator panel and provides corrective actions.

Table E-1 lists library error messages in alphabetical order.

If the corrective action in the table...	
Instructs you to reset the library or tape drive	go to "Resetting the Library" on page 139. Also see the Important note above.
Does not correct the error	contact technical support at www.tandbergdata.com or your service provider.

Table E-1 Library error messages

Error Message	Description	Corrective Action
Auto Cleaning	The tape drive is performing an automatic cleaning of the tape drive using the cleaning cartridge in the fixed cleaning cell.	No action necessary.
Bad Cleaning Tape	The tape drive has determined that the cleaning cartridge is not the proper type for this tape drive.	Replace the cleaning cartridge with one that is compatible with this tape drive. Use only LTO cleaning cartridges with LTO tape drives.
Bad Configuration	Configuration of drives does not match drives found in library.	<ol style="list-style-type: none"> 1. Verify that the tape drive settings in the "Drive configuration" menu match the type of drive(s) installed. 2. Check the ADI interface cabling and configuration. See "Connecting the Library to SCSI" on page 20. 3. Verify that the tape drive is operating correctly. See: "Tape Drive Troubleshooting" on page 204.
Bad Directory	Bad tape directory.	Remove the cartridge from the library and replace it with one that is compatible with the tape drive and does not have a damaged directory.
Bad Download	An error occurred during a firmware upload to the library.	<ol style="list-style-type: none"> 1. Verify that you loaded the correct code. Do not load firmware from one model of library or library into another. 2. Reset the library (see page 139) and reload the firmware. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
Bad Tape Format	Unsupported tape format.	<ul style="list-style-type: none"> Remove the cartridge from the library and replace it with one that is compatible with the tape drive. See "Tape drive cartridge read/write compatibility" on page 115. If you were attempting to import a cleaning cartridge, insert a cartridge with cleaning cycles remaining on it.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Bootblock	An error occurred during firmware programming of the library.	<ol style="list-style-type: none"> 1. Verify that you loaded the correct code. Do not load firmware from one model of library or library into another. 2. Reset the library (see page 139) and reload the firmware. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
Busy	The library is executing a command issued from the backup application when a command is issued from the operator panel.	Wait until the library has finished its current operation, and then retry the requested operation.
Cartridge Misloaded	A cartridge was incorrectly loaded into the library.	Reload the cartridge. See "Inserting and Moving Cartridges" on page 116 .
Circuit Failure	The library has detected a problem within its electronic circuitry.	<ol style="list-style-type: none"> 1. Power cycle the library. 2. If the error persists, contact Technical Support or your service provider.
Command Error	The options for the command were incorrect.	<ol style="list-style-type: none"> 1. Verify that the options for the command are valid. If they are not, correct the problem and retry the command. 2. If they appear to be correct and the error persists, contact Technical Support (see page iii) or your service provider.
Communication	The library is unable to communicate with the tape drive.	Check the ADI interface cabling and configuration. See "Connecting the Library to SCSI" on page 20 .
Create File Fail	See "File Create Fail" on page 249	
Device Not Ready	The library is not ready to perform the requested operation because it is performing diagnostics or its power-on self-test (POST).	Wait until the library has finished, and then retry the operation.
Dir Create Fail	The library could not create a new directory on the USB device.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Retry with another USB device. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
Disabled	Sequential mode is not enabled.	Sequential mode has been disabled during execution of a sequential motion. Operator may need to unload cartridges using the front panel. See "Removing Cartridges from the Library" on page 122 .

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Drive Command	A command issued from the library to the tape drive failed.	<ul style="list-style-type: none"> ▪ Check the ADI interface cabling and configuration. See “Connecting the Library to SCSI” on page 20. ▪ Verify that the tape drive is operating correctly. See: “Tape Drive Troubleshooting” on page 204.
Drive Communication	The library is unable to communicate with the tape drive.	Check the ADI interface cabling and configuration. See “Connecting the Library to SCSI” on page 20 .
Drive Empty	The command cannot be completed because the tape drive does not contain a cartridge.	<p>Do one of the following:</p> <ul style="list-style-type: none"> ▪ Load a cartridge in the tape drive and retry the operation. ▪ If there are two tape drives installed in the library, select a tape drive that contains a cartridge and retry the operation.
Drive Full	The command cannot be completed because the tape drive already contains a cartridge.	<p>Do one of the following:</p> <ul style="list-style-type: none"> ▪ Unload the data cartridge, and then retry the operation. See “Unloading a Cartridge from a Tape Drive” on page 132. ▪ Wait until the current cartridge is unloaded by the application, and then retry the operation. ▪ If the library contains two tape drives, retry the operation on the second tape drive.
Drive Incompatible	The detected tape drive is incompatible with the library.	The library is only compatible with Ultrium 4 (LTO-4), Ultrium 3 (LTO-3), or Ultrium 2 (LTO-2) tape drives. Ensure that you have one of these tape drives installed in the library.
Drive Load Failed	The cartridge couldn't be loaded into the tape drive because of a mechanical problem or because of a broken tape.	<ol style="list-style-type: none"> 1. Export the tape from the library (see page 122) and verify that it is in good condition, and then retry the operation. Replace the cartridge if necessary. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
Drive Timeout	The tape drive took too long to load or unload a tape, or the tape drive is not responding.	<ol style="list-style-type: none"> 1. If possible, use the operator panel to unload any cartridge that is in the tape drive (see page 132). 2. Power the library off and back on to reset the tape drive. 3. If the error persists, contact Technical Support (see page iii) or your service provider.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Drive Unload Failed	The cartridge couldn't be unloaded from the tape drive because of a mechanical problem.	<ol style="list-style-type: none"> 1. Power the library off and back on to reset the tape drive. 2. Retry the unload operation once. 3. If the error persists, contact Technical Support (see page iii) or your service provider.
Expired Cleaning Tape	Cleaning tape in the fixed cleaning slot has been fully used.	<p>Replace the cleaning cartridge with a new cleaning cartridge that is compatible with the installed tape drive(s).</p> <p>Use only LTO cleaning cartridges with LTO tape drives.</p>
Failed	Sequential mode action failed.	<ol style="list-style-type: none"> 1. Enable Sequential mode. See "Setting the Library to Operate in Sequential Mode" on page 124. 2. Retry the operation. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
File Close Fail	The library could not close the USB file.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Re-write the file to the USB device and retry the operation. 3. Retry with another USB device. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
File Create Fail	The library could not create a new file on the USB device.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Re-write the file to the USB device and retry the operation. 3. Retry with another USB device. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
File First Fail	The library could not find the first file in the USB directory.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Re-write the directory to the USB device and retry the operation. 3. Retry with another USB device. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
File Flush Fail	The library could not flush data written to the USB device.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Re-write the file to the USB device and retry the operation. 3. Retry with another USB device. If the error persists, contact Technical Support (see page iii) or your service provider.
File Next Fail	The library could not find the next file in the USB directory.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Re-write the directory to the USB device and retry the operation. 3. Retry with another USB device. If the error persists, contact Technical Support (see page iii) or your service provider.
File Open Fail	The library could not find the file on the USB device, or it could find the file, but not open it.	<ol style="list-style-type: none"> 1. Ensure that the selected file is present on the USB device. 2. Ensure that the USB device is securely inserted and retry the operation. 3. Re-write the file to the USB device and retry the operation. 4. Retry with another USB device. If the error persists, contact Technical Support (see page iii) or your service provider.
File Read Fail	The library could not read the next block of data from the USB device.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Re-write the file to the USB device and retry the operation. 3. Retry with another USB device. If the error persists, contact Technical Support (see page iii) or your service provider.
File Seek Fail	The library could not seek to a specific offset within a USB file.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Re-write the file to the USB device and retry the operation. 3. Retry with another USB device. If the error persists, contact Technical Support (see page iii) or your service provider.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
File Write Fail	The library could not write the next block to the USB file.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Retry the operation. 3. Retry with another USB device. If the error persists, contact Technical Support (see page iii) or your service provider.
General Failure	An operation couldn't be completed because of an internal problem.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact your service provider.
General HW Failure	An operation couldn't be completed because of a mechanical problem.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
HW Needs Reset	Tape drive hardware needs to be reset.	<ol style="list-style-type: none"> 1. If possible, use the operator panel to unloaded any cartridge that is in the tape drive (see page 132). 2. Power the library off and back on to reset the tape drive. 3. If the error persists, contact Technical Support (see page iii) or your service provider.
I/E Port Disabled	The requested action cannot be done because the I/E port is disabled.	<ul style="list-style-type: none"> ▪ Determine that the I/E port should be disabled and try a new command. -or- ▪ Enable the I/E port and retry the command. See the Product Manual.
I/E Port Unlocked	Import/Export element is unlocked.	Close I/E Port and retry the operation. See "Loading Cartridges into the I/E Port" on page 116 .
Invalid Cartridge	An attempt was made to load an incompatible cartridge or a spent cleaning cartridge into a tape drive and the cartridge was ejected.	<ul style="list-style-type: none"> ▪ Remove the cartridge from the library and replace it with one that is compatible with the tape drive. See "Tape drive cartridge read/write compatibility" on page 115. ▪ If you were attempting to import a cleaning cartridge, insert a cartridge with cleaning cycles remaining on it.
Invalid CIn Tape	Invalid cleaning cartridge.	Replace the cleaning cartridge with one that is compatible with this tape drive. Use only LTO cleaning cartridges with LTO tape drives.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Invalid Data	The library detected that the data read from the USB file is not the desired data.	<ol style="list-style-type: none"> 1. Ensure that the correct data is in the file, re-write the file to the USB device, and retry the operation. 2. Retry with another USB device. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
Invalid NVRAM	An operation couldn't be completed because the stored parameters are not valid.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. 2. Use "Restore Defaults" from the Library Settings menu to refresh the library settings. 3. If the error persists, contact Technical Support or your service provider.
Invalid Password	The password you entered does not match the saved password that is protecting this system.	<p>Enter the valid password.</p> <p>See "Setting up an operator panel password" on page 71.</p>
Magazine Unlocked	Magazine is unlocked.	<p>Close the magazine and retry the operation.</p> <p>See "Loading Cartridges into a Magazine" on page 120.</p>
Memory Chip Fail	Tape memory chip failed.	<p>Remove the cartridge from the library and replace it with one that has a good Memory Chip. This tape should not be used again.</p>
Must Power Cycle	Tape drive needs to be power cycled.	<ol style="list-style-type: none"> 1. If possible, use the operator panel to unloaded any cartridge that is in the tape drive (see page 132). 2. Power the library off and back on to reset the tape drive. 3. If the error persists, contact Technical Support (see page iii) or your service provider.
No Cleaning Tape	The library cannot clean the tape drive since there is no cleaning cartridge in the fixed cleaning cell.	<p>Import an LTO cleaning cartridge and then move it to the fixed cleaning cell.</p> <p>Use only LTO cleaning cartridges with LTO tape drives.</p> <p>See "Inserting and Moving Cartridges" on page 116.</p>
No Empty Cell	The requested move cannot be completed because there is no empty cell to act as the destination for the move.	<ul style="list-style-type: none"> ▪ Use either SCSI or front panel commands to empty a cell and retry the command. ▪ Select a different type of element as the destination.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
No Empty Drive	The requested move cannot be completed because there is no empty tape drive to act as the destination for the move.	<ul style="list-style-type: none"> ▪ Use either SCSI or front panel commands to empty a tape drive and retry the command. ▪ Select a different type of element as the destination.
No Empty I/E Port	The requested move cannot be completed because there is no empty I/E port to act as the destination for the move.	<ul style="list-style-type: none"> ▪ Use either SCSI or front panel commands to empty an I/E Port and retry the command. ▪ Select a different type of element as the destination.
No Enabled I/E Port	The requested command cannot be completed because there is no enabled I/E port.	<ul style="list-style-type: none"> ▪ Enable an I/E port and retry the command. -or- ▪ Select another command.
No Medium Removal	Media removal from the library has been prevented through the backup application.	<ul style="list-style-type: none"> ▪ Turn off media removal prevention from the backup application and retry the operation. ▪ Reset the library and retry the operation.
No USB Device	The library does not see a USB device.	<ul style="list-style-type: none"> ▪ Ensure that the USB device is securely inserted and retry. ▪ Try another USB device.
Not Calibrated	The manufacturing calibration of the library is not complete or has been compromised.	Contact Technical Support or your service provider.
Not Implemented	The command is not implemented in this library.	No corrective action
Operation Aborted	The current operation was aborted by the host or user.	Retry the operation, if desired.
Operation Stopped	The current operation was stopped by the host or user.	Retry the operation, if desired.
Operator Action	You are required to intervene.	Operator intervention required: <ul style="list-style-type: none"> ▪ New tapes needed ▪ Correct error (see other errors in this table)
Over Temperature	The tape drive's temperature limit has been exceeded, and the cartridge has been ejected from the tape drive.	<ul style="list-style-type: none"> ▪ Wait until the library has cooled, and then unload the cartridge to a cell and re-load it into the tape drive. ▪ Check the room temperature. The ambient temperature must be no more than 40°C (104°F). ▪ Provide additional air flow around the library to improve cooling.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Over Voltage	Tape drive is over voltage.	<ol style="list-style-type: none"> 1. If possible, use the operator panel to unloaded any cartridge that is in the tape drive (see page 132). 2. Power the library off and back on to reset the tape drive. 3. If the error persists, contact Technical Support (see page iii) or your service provider.
Owned by E-Net	The library is executing a command issued from the Remote Management utility (see Chapter 4) when a command is issued from the operator panel.	Wait until the library has finished its current operation, and then retry the operation.
Owned by Panel	The library is executing a command issued from operator panel when a command is issued from the Remote Management utility (see Chapter 4).	Wait until the library has finished its current operation, and then retry the operation.
Picker Ship-lock	The robot could not move because it may be locked in place by the shipping lock.	Remove the shipping lock (see page 26).
POST Failed	The library encountered an error during its power-on self-test.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
Power Fan	The library has detected that the power fan is not operating properly.	<ol style="list-style-type: none"> 1. Power cycle the library. 2. If the error persists, contact Technical Support or your service provider.
Reading Drive Log	The library is reading a log from the tape drive to put on the USB device.	No action necessary.
Report Illegal Request	The I/E port door is unlocked.	<p>Lock the I/E port door (press it firmly toward the library) and retry the operation.</p> <p>When the I/E port door is locked, the lock icon illuminates solid green (🔒).</p>
Reserve Failed	The library could not reserve the USB device resources.	<ol style="list-style-type: none"> 1. Retry the operation. 2. Reset the library and retry the operation. See page 139 for reset instructions. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Reset Will Occur!	When the operation completes, the library will reset itself as if a power-cycle had occurred.	<ul style="list-style-type: none"> ▪ If the operation has not started, proceed with the operation only if the reset will not cause a problem. ▪ If the operation is underway, no action is necessary; the machine will reset itself.
Right Cable	The library detected an error with the right-side cable.	Contact Technical Support (see page iii) or your service provider.
Robot Empty	The robot is unexpectedly empty	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
Robot Full	The robot is unexpectedly full	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
SCSI Error	An error occurred in the ADI/SCSI interface.	Check the ADI/SCSI cabling and configuration. See "Connecting the Library to SCSI" on page 20 .
SCSI Timeout	A timeout occurred in the ADI/SCSI interface.	Check the ADI/SCSI cabling and configuration. See "Connecting the Library to SCSI" on page 20 .
Sequential Mode	The library is set to operate in Sequential Mode	Change to Random Mode and retry the operation. See "Setting the Library to Operate in Sequential Mode" on page 124 .
Service Busy	The library is executing a command issued from the backup application when a command is issued from the operator panel.	Wait until the library has finished its current operation, and then retry the requested operation.
Servo Failure	The library's cartridge handling mechanism (robot) has experienced a problem.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
Servo Jammed	The library's cartridge handling mechanism (robot) has encountered an obstruction.	<ol style="list-style-type: none"> 1. Attempt to eject all magazines; check for and remove any obvious obstructions. 2. Re-insert the magazines. 3. Reset the library and retry the operation. See page 139 for reset instructions. 4. If the error persists, contact Technical Support (see page iii) or your service provider.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Servo Timeout	The library's cartridge handling mechanism (robot) was unable to complete an operation within a specified time frame.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
Servo Unsafe	The library's cartridge handling mechanism (robot) has detected an unsafe situation for the media.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
Set Date Fail	The library could not set the date on a USB file or directory.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Retry with another USB device. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
Set Time Fail	The library could not set the time on a USB file or directory.	<ol style="list-style-type: none"> 1. Ensure that the USB device is securely inserted and retry the operation. 2. Retry with another USB device. <p>If the error persists, contact Technical Support (see page iii) or your service provider.</p>
Slot Empty	The command cannot be completed because the slot does not contain a cartridge.	Select a slot that has a cartridge and retry the operation.
Slot Full	The command cannot be completed because the slot already contains a cartridge.	<p>Do one of the following:</p> <ul style="list-style-type: none"> ▪ Empty the slot and retry the operation. ▪ Select a slot location that does not contain a cartridge and retry the operation.
Software Error	The library has experienced a fatal microcode error.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
System Error	The library has experienced a fatal error.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.
System Fan	The library has detected that the system fan is not operating properly.	<ol style="list-style-type: none"> 1. Power cycle the library. 2. If the error persists, contact Technical Support or your service provider.
System Timeout	An library operation took too long.	<ol style="list-style-type: none"> 1. Reset the library and retry the operation. See page 139 for reset instructions. 2. If the error persists, contact Technical Support (see page iii) or your service provider.

Table E-1 Library error messages (continued)

Error Message	Description	Corrective Action
Tape Overflow	The robot is full and no empty slot can be found.	Remove one or more cartridges. See "Loading Cartridges into the I/E Port" on page 116 (to remove a single cartridge). See "Loading Cartridges into a Magazine" on page 120 (to remove multiple cartridges).
Terminated	The operation has been stopped by the user.	Retry the operation, if desired.
Unknown Drive	The library does not recognize the tape drive.	<ol style="list-style-type: none"> 1. Verify that the tape drive settings in the "Drive Configuration" menu match the type of tape drive(s) installed. 2. Ensure that you have a valid SCSI ID set for the tape drive. See "Changing the SCSI IDs or WWNN Number" on page 49.
Writing Drive Log	The library is writing the tape drive log to the USB device.	No action necessary.

LIBRARY "FATAL" ERROR MESSAGES

This section describes the "fatal" error messages that can appear on the library's operator panel. If one of these errors occurs, the library goes into a halted state where only serial diagnostics communication is possible. The only recovery is to power-cycle the library: press the **0** on the back of the library (power off), and then press the **1** (power on).

- ▶ Table [Table E-2](#) lists the errors in alphabetical order.
- ▶ Fatal errors appear in the following format (see example below).

Message	Description
! Fatal Error !	Heading
<text>	This text specifies the error
<file>	The code source file which is calling out the error
<line number>	The line of code in the file which is calling out the error

```
! Fatal Error !
Task watchdog expired
<file> <line number>
```

Table E-2 Library “fatal” error messages

Error Message	Description	Corrective Action
Attempt to Read past end of Network NVRAM area	Illegal non-volatile RAM access	<ol style="list-style-type: none"> 1. Power-cycle the library: press the O on the back of the library (power off), and then press the I (power on). 2. If the error persists, contact Technical Support or your service provider.
Attempt to Write past end of Network NVRAM area	Illegal non-volatile RAM access	
BlockPoolxxxx creation failed	Unable to create data allocation pool xxxx	
Data Abort:xxxxxxx	Data accesses at illegal location	
Drive	An invalid drive ID is being used internally	
DTE_IX	An invalid drive ID is being used to select a task	
Exceeded logging source maximum	An invalid module ID is being used internally	
FIQ ints can't be enabled	Illegal use of certain interrupts	
FIQ ints can't be disabled	Illegal use of certain interrupts	
FIQ ints can't be registered	Illegal use of certain interrupts	
FIQ ints can't be unregistered	Illegal use of certain interrupts	
FIQ req [xxxxxxxx]	Illegal use of certain interrupts	
Intrpt no handler registered	Received interrupt with no firmware handler	
Invalid thread requested for launch	Attempt to start an unknown task	
Pref abort:xxxxxxx	Pre-fetch instruction abort occurred	
RFQx	Operating system failed reading from queue x	
Sense data too big	An internal data buffer has been made too small	
Spurious interrupt	Received invalid interrupt	

Table E-2 Library "fatal" error messages (continued)

Error Message	Description	Corrective Action
Spurious Interrupt during flash programming	illegal interrupt is interrupting code update	<ol style="list-style-type: none"> 1. Power-cycle the library: press the 0 on the back of the library (power off), and then press the I (power on). 2. If the error persists, contact Technical Support or your service provider.
SW Int Expt [xxxxxxx]	Received illegal software interrupt	
Task watchdog expired	Task failed to give up control of processor in a reasonable time	
Unable to allocate Buffer	Operating system has run out of allocatable data	
Unable to launch XXX	Unable to start operating system task XXX	
Undef Inst [xxxxxxx]	Executed an undefined processor instruction	
Unknown [id:dd] generic interrupt	Received unknown interrupt	
WatchDog timer expired	Firmware failed report to hardware	
WTQx	Operating system failed writing to queue x	

Notes

F

JUMPER POWER CABLES — HP HH FC TAPE DRIVE

This appendix explains how to connect, route, and store the power and serial cables to an HP Fibre Channel half-height tape drive if you must use power jumper cables.

This jumper cable installation scenario applies only if you are installing two half-height (HH) drives, or if you are adding a second HH drive. If you are installing only one HP HH Fibre Channel drive (bottom drive), you do not need to use a power jumper cable.

! Important

Verify that the library power cable reaches the tape drive power connectors for both drives. If the cables do not reach, you must use the power jumper cables supplied with the drive kit.

CONNECTING THE JUMPER POWER CABLES AND SERIAL CABLES

Before you begin, follow the section “Installing a Tape Drive” on page 174 up until the point where you connect the serial and power cables to the tape drive.

To connect the power and serial cables:

1. If you have a previously-installed drive in Drive 1 (bottom drive), disconnect the power cable from the tape drive, and pull the cable out and to the right side of the library, away from the tape drive. Leave the drive intact. (You do not need to pull the drive partially out as shown on the following page in Figure F-1.)
2. Locate the serial cable that came in your replacement kit and attach it to the “Drive 2” connector inside the library. (If applicable to your installation scenario, also attach a serial cable to the “Drive 1” connector inside the library.) Note that the key tabs on the serial connector face down.

3. While holding any cables to the side, slide the tape drive partially into the library. (If applicable, first place Drive 1 in the bottom slot, then Drive 2 in the top slot.)
4. While holding the power cable to the right side of the library, away from the tape drive, connect the “Drive 2” serial cable to the connector located on the side of the top tape drive carrier. If applicable, attach the “Drive 1” serial cable to the connector located on the side of the bottom tape drive carrier.
5. Locate the power jumper cables that came with your replacement kit and attach them to the Drive 1 (end) and Drive 2 (middle) power connectors. Note how the library power connectors are oriented upward in the connection to the jumper cables in Figure F-1. The cables must be oriented this way to reach the tape drive power connectors.



Figure F-1 Connecting the power jumper cables (LTO-4 drives pictured)

6. Connect the jumper power cables to the tape drives.
7. Push the drive(s) all the way in the library and stow the power connectors to the right of the serial cables. (See Figure F-2.)

! Important

Ensure that the power cables are not wrapped around the serial cables.



Figure F-2 Stowing the cables (LTO-4 tape drives pictured)

8. Verify all serial and power connections are secure, including the serial connector on the back of the tape drive. (See Figure F-2.)
9. Refer to “Completing the installation—” on page 177 to complete the tape drive installation and resume operation of the library.

INDEX

#

- 210 emulation mode 55
- 221L emulation mode 54

A

- accessories 12
- acoustic noise limits 216
- ADI Command
 - about 221
 - Fibre Channel WWNN 49 to 51
 - library LUN 20
 - LVD SCSI interface 2
 - SCSI IDs 49 to 51
 - SCSI interface bridge 52
- advanced troubleshooting 210
- agency compliance 217 to 219
- agency declarations
 - Australia and New Zealand 219
 - Canadian Verification 218
 - China RoHS 219
 - European Community 217
 - FCC notice 218
 - GS mark 217
 - RoHS 219
 - Underwriters Laboratory 217
 - VCCI Class A 218
 - WEEE 219
- altitude limits 215
- application
 - See software
 - See software (backup application)
- Autoclean option 59
- automatic drive cleaning
 - setting up 57 to 60
 - via remote management 94

- Automation/Drive Interface
 - See ADI Command

B

- back panel components 6 to 8
- backup application
 - See software
- bar code labels
 - identifying the media 47
 - preparing 13
 - re-scanning 128
 - viewing contents 87, 162
- bar code scanner 2, 9
- bus
 - See SCSI bus
- buttons
 - See keypad

C

- cable requirements
 - Ethernet 229
 - international power 214
 - SCSI 222
- capacity
 - data cartridges 211
 - library 211
- cartridge
 - See also cartridges (information)
 - See also cartridges (inventory)
 - See also cartridges (using)
 - See also cleaning cartridge
 - See also WORM media
- cartridge access port
 - See import/export port
- cartridge handling mechanism (CHM) 9

- cartridges (information)
 - purchasing 14
 - selecting 14
 - supported by tape drive 115
 - cartridges (inventory)
 - after power-on 26
 - after reset 140
 - time required 213
 - updating 128
 - viewing via RMU 87
 - viewing via the front panel 162 to 167
 - cartridges (using)
 - inserting 116 to 117
 - preparing 115
 - removing (power off) 179
 - removing (power on) 122
 - storing 141
 - viewing the cartridge type 47
 - cleaning
 - activating cleaning cartridge cell 57
 - enabling Autoclean option 57 to 60
 - library 180
 - setting up automatic drive cleaning 57 to 60
 - tape drive 134 to 139
 - cleaning cartridge
 - cleaning count via RMU 85
 - cleaning count via the front panel 134
 - requirements 115
 - storing in library 134 to 139
 - using 134 to 139
 - code load
 - See* firmware
 - code version
 - library 144
 - tape drive 155
 - via Remote Management utility 81
 - compatible tape cartridges 115
 - components
 - back panel 6 to 8
 - front panel 4 to 5
 - internal 9
 - configuration (changing)
 - accessing options 31 to 35
 - automatic drive cleaning 57 to 60
 - changing from operator panel 36 to 77
 - changing through Remote Management utility 89
 - emulation mode 54 to 57, 92
 - Ethernet 61 to 67
 - Fibre Channel, WWNN 49 to 51
 - LCD language 38
 - password 71 to 73
 - SCSI IDs 49 to 51
 - Sequential mode 124 to 128
 - using operator panel 31 to 34
 - using Remote Management utility 79 to 112
 - configuration (restoring default values)
 - via power reset 139 to 141
 - via the front panel 75 to 77
 - configuration (viewing)
 - checking setup 30, 77
 - menu overview 33 to 35
 - using operator panel 31 to 34
 - using Remote Management utility 79 to 112
 - creating diagnostic listings 190
- ## D
- data cartridges
 - See* cartridges
 - data encryption 3
 - Data Protect (SK 7h) error, WORM media 234
 - data transfer rate 212
 - demos
 - running library 185 to 187
 - running tape drive 180 to 182
 - DHCP
 - specifying 61 to 67
 - viewing address 144
 - diagnostics
 - creating listings for
 - troubleshooting 187 to 190
 - generating log files 210
 - running from operator panel 182
 - running through Remote Management utility 103
 - dimensions
 - library 212
 - shipping container 216
 - drive
 - See* tape drive
 - dump
 - See* diagnostic listings

E

- electrostatic discharge (ESD) 15
- element addresses
 - changing 226
 - description 226
- emulation mode
 - changing from operator panel 54 to 57
 - changing using Remote Management utility 92
 - description 54
- encryption 3
- environmental specifications 214
- error messages on the LCD 245 to 257
- errors
 - "fatal" messages on the LCD 257 to 259
 - Data Protect (SK 7h) error with WORM media 234
 - Medium Error (SK 3h) with WORM media 234
 - messages on the LCD 245 to 257
 - reported in software 205 to 207
- Ethernet
 - cable requirements 13
 - configuring interface 61 to 67
 - connecting library to 24
 - creating diagnostic listings via FTP 187 to 190
 - upgrading firmware via FTP 187 to 189
 - USB options 37
 - using Remote Management utility 79 to 112
- Ethernet configuration
 - changing from operator panel 61 to 67
 - changing through Remote Management utility 95
- Ethernet port
 - cable requirements 229
 - connecting to 24
- event log
 - See* history
- Exabyte 221L emulation mode 54
- EZ17 Autoloader emulation mode 55

F

- fan 8
- features 1 to 3
- Fibre Channel
 - connecting 23
 - connector description 7
 - interface specifications 228
 - power jumper cables for HP HH 261
- firmware
 - updating tape drive via remote management 107
 - updating via remote management 104
 - upgrading for library via FTP 187 to 189
 - viewing library code level 144
 - viewing tape drive code level 155
 - WORM requirements 233
- front panel components 4 to 5
- FTP
 - connecting to interface 188
 - diagnostic logs 210
 - using to create diagnostic listings 189
 - using to upgrade firmware 187 to 189

G

- gateway address 61 to 67

H

- Home screen 32
- humidity specifications 215

I

- IDs
 - See* SCSI
- import/export port (I/E Port)
 - description 5
 - operating manually 179
 - using 116
- inserting cartridges 116 to 117

- installation (directions)
 - connecting the power cord 26
 - connecting to Ethernet 24
 - connecting to Fibre Channel 23
 - connecting to SCSI 20 to 22
 - powering on 25
 - rack-mounting 16 to 20
 - troubleshooting 201 to 203
 - verifying the hardware setup 29
- installation (requirements)
 - accessories and equipment for 12 to 15
 - application software 15
 - environment 15
 - preparing for 15
- interface specifications
 - Ethernet 229
 - Fibre Channel 228
 - SAS 227
 - SCSI 221 to 229
- internal components 9
- inventory
 - See* viewing cartridge inventory
- IP address 61 to 67
- J**
- jumper cables, for HP HH Fibre Channel 261
- K**
- keypad (front panel buttons)
 - description 4
 - using 31 to 34
- L**
- language, LCD 38
- LCD
 - changing language 38
 - description 4
 - error messages 245 to 259
 - See also* operator panel
- LED, status 5, 114
- library (configuration)
 - configuration via remote management 89 to 98
 - Remote Management utility 79 to 112
 - See also* configuration
 - Sequential mode 124 to 128
 - tape drive configuration 177
- library (information)
 - back panel components 6
 - front panel components 4
 - LUN 20
 - product overview 1
 - SCSI interface bridge 52
 - statistics via remote management 99 to 102
 - status messages 145
 - viewing history 148
 - viewing information 143 to 151
- library (maintenance)
 - cleaning 180
 - cleaning tape drive 134 to 139
 - creating diagnostic listings 187 to 193
 - moving or shipping the library 235 to 244
 - performing a digital self test 182
 - performing a motion test 183
 - replacing the tape drive 169 to 178
 - running a system demo 185
 - troubleshooting 208
- library (updating)
 - updating code via remote management 104
 - upgrading firmware 187 to 193
- LibTool
 - advanced troubleshooting 210
 - download URL 190
 - upgrading library firmware 190
 - viewing current inventory 203
- loader, cartridge handling mechanism 9
- LTOTool
 - advanced troubleshooting 210
 - creating diagnostic logs 193
 - download URL 210
 - upgrading tape drive firmware 193
- LVD SCSI
 - connecting 20
 - description of library interface 2
 - library cable requirements 12, 222
 - troubleshooting tips 202

M

magazines 9

maintenance

- cleaning library 180
- cleaning tape drive 134 to 139
- creating diagnostic listings 187 to 193
- moving the library 235 to 244
- replacing the tape drive 169 to 178
- upgrading firmware 187 to 193
- viewing library history 148

media

- See* cartridges
- See* WORM media

media related errors 232

Medium Error (SK 3h), WORM media 234

menu

- home screen 35
- overview 33 to 35

moving the library 235 to 244

N

Native emulation mode 54

noise limits 216

O

operating environment specifications 215

operation (general)

- preparing cartridges 115
- resetting library and tape drive 139 to 141
- See also* operation (library)
- See also* operation (tape drive)
- using Remote Management utility 79 to 112
- viewing library and tape drive information 143 to 167

operation (library)

- inserting cartridges 116 to 117
- powering on library 25
- removing cartridges (power off) 179
- removing cartridges (power on) 122
- running library demos 185 to 187
- Sequential mode 124 to 128
- using import/export port (I/E Port) 116 to 117
- using operator panel 31 to 34

operation (tape drive)

- cleaning the tape drive 134 to 139
- running tape drive demos 180 to 182
- unloading cartridge from tape drive 132

operation mode

- emulation 54
- Random or Sequential 124
- Random or Sequential (front panel) 124

operator panel

- Home screen 32
- location 4
- menu overview 33 to 35
- preventing access to menus 71 to 75
- using 31 to 34

P

packing for shipment 242 to 244

particulate limits 215

password

- accessing password-protected menus 73
- disabling for operator panel 74
- setting for operator panel 71 to 75
- setting for Remote Management utility 97

performance specifications 212 to 213

Performing Diagnostic Tests 187

power consumption 213

power cord

- connecting 25
- international requirements 214
- specifications 214

power switch 8

powering on the library 25

preparing cartridges 115

product warranty caution iii

R

rack mounting

- installation 16 to 20
- removing from rack 241

Random mode 124

See also Sequential mode

regulatory agency compliance 217 to 219

- Remote Management utility
 - accessing 79
 - configuration options 89
 - connecting to Ethernet 24
 - description 3
 - setting Ethernet configuration 61
 - statistics page 99
 - tools and tests 103
 - using 79 to 112
 - removing cartridges
 - with power off 179
 - with power on 122
 - resetting library and tape drive 139 to 141
 - returning library for service 235 to 244
 - RMA number, obtaining 235
- S**
- safety agency compliance 217 to 219
 - SAS tape drives
 - cable requirements 13
 - connector description 8
 - description of library interface 2
 - installation 23
 - interface specifications 227
 - port address 160
 - replacing 169 to 178
 - SCSI ID 49
 - SCSI
 - changing IDs 49 to 51
 - commands 223
 - interface specifications 221 to 229
 - library interface (bridge) 52
 - See also* SAS tape drives
 - See also* SCSI cable and SCSI bus
 - terminator installation 21
 - terminator requirements 12
 - SCSI (bus)
 - LVD configuration 20
 - terminator requirements 12
 - troubleshooting 208
 - SCSI (cable)
 - connecting 20 to 22
 - length restrictions 21
 - requirements 12, 222
 - SCSI host bus adapter card 15
 - security
 - accessing password protected menus 73
 - disabling operator panel password 74
 - setting operator panel password 71 to 73
 - setting Remote Management utility password 97
 - Sequential mode
 - via front panel 124 to 128
 - serial number
 - library 144
 - tape drive 155
 - service
 - contacting Tandberg Data iii
 - returning the library 235 to 244
 - shipping lock, removing 27
 - shipping specifications 216
 - shipping the library 235 to 244
 - shock limits 216
 - single-character display
 - error codes and messages with WORM media 232
 - size
 - library 212
 - shipping container 216
 - software
 - backup applications 54, 202
 - cleaning the tape drive 133
 - does not support library (emulation) 54
 - encryption 3
 - installing 15
 - loading cartridges 130
 - Remote Management utility 79 to 112
 - using application's cleaning option 136
 - software (backup applications)
 - See also* software
 - See your software documentation*
 - specifications
 - agency compliance 217 to 219
 - capacity 211
 - data transfer rate 212
 - environmental 214
 - performance 212 to 213
 - power 213
 - shipping 216
 - size 212
 - weight 212

- statistics
 - library 144
 - viewing through Remote Management utility 99
- status LED 5, 114
- storage capacity
 - data cartridge 211
 - library 211
- storing cartridges 141
- subnet mask 61 to 67

T

- Tandberg Data LibTool
 - download URL 190
 - upgrading firmware 190
 - viewing current inventory 203
- Tandberg Data LTOTool
 - advanced troubleshooting 210
 - creating diagnostic listings 193
 - download URL 210
 - upgrading tape drive firmware 193
- Tandberg Data, contacting iii
- tape drive (information)
 - brand and serial number 155
 - code version 155
 - description 2
 - location 9
 - See also* Fibre Channel
 - See also* SAS tape drives
 - serial number 155
 - Ultra 160 and Ultra 320 connectors 7
 - viewing operation information 152 to 153
- tape drive (maintenance)
 - cleaning 134 to 139
 - cover plate location 6
 - performing a self test 180
 - replacing 169 to 178
 - resetting 139 to 141
 - setting configuration 177
 - troubleshooting 208
- tape drive (using)
 - encryption 3
 - firmware requirements for using WORM 233
 - loading and unloading cartridges 130 to 133
 - running a self test 182
 - setting SCSI ID 49
 - updating code via remote management 107

- TapeAlert flags 233
- tapes
 - See* cartridges
- Technical Support
 - gather required information before contacting 208 to 210
- temperature, operating 215
- termination, SCSI
 - installing terminator 21
 - terminator requirements 12
- transfer rate 212
- troubleshooting 201 to 210
 - library status messages 145
 - tape drive status messages 155

U

- Ultra 160
 - tape drives 7
- Ultra 320
 - tape drives 7
- Ultra160
 - cable requirements 7
- Ultra320
 - cable requirements 7
- Universal Serial Bus (USB)
 - connecting library to 25
 - interface support 217
 - options 37

V

- viewing (cartridge inventory)
 - via front panel 162 to 167
 - via Remote Management utility 87
- viewing (library)
 - cartridge inventory 162
 - history (event logs) 148
 - serial number and code level 144
 - settings 153
 - statistics 150
 - status 145
- viewing (tape drive)
 - configuration 160
 - SCSI ID 158
 - SCSI interface (bridge) 161
 - serial number 157

W

warranty

product warranty caution [iii](#)

weight

library [212](#)shipping [216](#)warning [19](#)

wide SCSI

connecting [20](#)library requirements [12, 222](#)worldwide cartridge identifier (WWCID) [231](#)

Write Once, Read Many (WORM) capability

firmware requirements [233](#)overview [231, 245](#)

Write Once, Read Many (WORM) media

characteristics [231](#)data security [232](#)errors [232](#)specifications [232](#)

WWNN

changing [49 to 51](#)WWNN number assignment [36](#)

PRODUCT LIMITED WARRANTY

Tandberg Data Corporation ("Tandberg Data") warrants to the original End User ("Purchaser") that this computer product purchased from Tandberg Data or an authorized Tandberg Data dealer ("Product") is free from manufacturing defects in material and workmanship for the applicable warranty period set forth below and as stated in the Product Specification, from the date of shipment to Tandberg Data's authorized dealer. In order to receive warranty services, contact the appropriate Tandberg Data location shown at the following web address, www.tandbergdata.com. Do not return Product to place of purchase. Product returns must reference an Tandberg Data Return Material Authorization Number ("RMA #") and any Product received by Tandberg Data without an RMA# will be refused and returned to Purchaser. Purchaser will need to provide the following information:

- ▶ Date hardware was purchased
- ▶ Hardware type
- ▶ Serial number of hardware
- ▶ Company name and address; name, email address and telephone number; name of reseller where hardware was purchased
- ▶ Description of the problem with as much detail as possible
- ▶ Computer type, Operating System, Backup Application used
- ▶ Whether Product is used as a single drive or in a library and type of library

Purchaser may be required to perform certain diagnostics tests on Product prior to Tandberg Data issuing an RMA #. Tandberg Data, at its discretion, may use new, refurbished, or reconditioned replacements parts to perform any warranty repair or replacement of Products. Tandberg Data also reserves the option to replace the entire Product with a comparable Product or refund the then-current purchase price of the Product. Tandberg Data Products or parts that are replaced or repaired under this warranty are warranted for the remaining unexpired portion of the original warranty period. This constitutes Purchaser's sole and exclusive remedy in the event of a defect. Warranty registration must be completed and verified prior to any warranty claims.

This limited warranty covers defects encountered in the normal use of the Product during the warranty period and does not apply under the following conditions: Product is damaged due to physical abuse, mishandling, accident, negligence or failure to follow operating instructions; Product is modified by Purchaser in any manner other than that for which it was intended or otherwise approved by Tandberg Data, including, but not limited to tempering, ruggedizing, and/or militarizing the Product; damage or defects caused by the use of unauthorized parts or by unauthorized service; the Product has been subject to unsuitable operating or physical conditions outside those recommended in Product specifications as provided by Tandberg Data; Product has its serial numbers altered or removed; or Product is damaged due to improper packaging of the warranty return to the Tandberg Data dealer or Tandberg Data.

With respect to items manufactured or supplied by a third party which are sold by Tandberg Data, you shall be the beneficiary of the manufacturer's warranty, if any, SUBJECT TO THE LIMITATIONS STATED THEREIN. Copies of such manufacturer's warranties will be made available upon request. TANDBERG DATA DISCLAIMS AND EXCLUDES ALL WARRANTIES WITH RESPECT TO SUCH ITEMS.

In the event software is provided hereunder, Tandberg Data warrants that, for a period of ninety (90) days from the date of shipment to Tandberg Data's authorized dealer, the media on which any software is provided are free from defects in material and workmanship under normal use and that the software recorded therein is properly recorded. Tandberg Data does not warrant that the functions contained in the software will meet customer's requirements, that software will be free from defects or that the operation of the software will be uninterrupted or error free. Software is provided on an "AS IS" basis.

EXCEPT FOR THE EXPRESS WARRANTY STATED ABOVE, TANDBERG DATA MAKES NO OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS TANDBERG DATA PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

TANDBERG DATA DOES NOT WARRANT THAT PRODUCT WILL MEET ALL OF PURCHASER'S REQUIREMENTS OR THAT OPERATION OF PRODUCTS WILL BE UNINTERRUPTED OR ERROR FREE.

Tandberg Data shall have no liability or responsibility to Purchaser or any other person for any loss or damage or any special, incidental or consequential damages caused or alleged to be caused directly or indirectly by Product or those items supplied or sold by Tandberg Data hereunder, including, but not limited to, any interruption of service, loss of data, loss of customer goodwill, loss of business, anticipatory profits or consequential damages resulting from the use or operation of the Product.

In no event shall Tandberg Data be liable for loss of profits or any indirect, special, incidental, or consequential damages arising out of any breach of this warranty or in any manner arising out of or connected with the sale or anticipated use of the product. In no event shall Tandberg Data be liable for any damages whatsoever in excess of the purchase price of the Product. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. For products sold in North America, the warranty term is one year. Outside North America, the Product Warranty term is three years.

Go to www.tandbergdata.com for current limited warranty terms and conditions.

ON SITE SERVICE (OSS)

OSS is provided for the first year at no charge in North America. OSS is available Monday-Friday, 8AM-5PM OSS (next business day) 7AM-6PM MST Technical Support is provided in an effort to keep Product in, or return Product to, good working order. Tandberg Data shall, at its option, repair or replace Product, including spare parts. OSS does not assure uninterrupted operation of Customer's Product or guarantee that Product can be returned to good working order. OSS includes the replacement of defective parts. Unless specified otherwise, OSS shall be performed during normal business hours of 8:00 a.m. to 5:00 local time, excluding Tandberg Data holidays. OSS does not cover accessories or consumable parts and supplies, missing parts, or those items identified by the manufacturer as being Customer's responsibility, nor does it cover Product installation, relocation services, systems engineering services, programming, reinstallation of Customer's operating system or application software, firmware or code updates, or operational procedures of any sort. Customer shall provide Tandberg Data with full and free access to Product to allow Tandberg Data to perform OSS.

Tandberg Data requires a credit card number prior to shipping an OSS unit. **You must agree to ship the original unit back to Tandberg Data, using the OSS packaging which includes the return ship label, within 10 calendar days from the time you receive your replacement.** If Tandberg Data does not receive your original unit within 10 days we will charge your credit card for the OSS unit at the retail purchase price.

ADVANCED EXCHANGE SERVICE OPTION

The ADVANCED EXCHANGE (ADEX) Service is available at no charge during the first year of the warranty period for customers needing a replacement unit at the time they receive a Return Material Authorization (RMA) number from Tandberg Data Service Support.

With the ADVANCED EXCHANGE Service option, Tandberg Data will ship a completely reconditioned replacement unit (same configuration as customer's purchased unit) to the customer before receiving the defective unit back from the customer. This ADEX unit will become the customer's unit; Tandberg Data will not return the original unit to the customer. The remaining warranty on the original unit will apply to the ADEX unit.

The ADEX unit will usually ship within 48 hours, subject to availability. Although Tandberg Data will ship the ADEX unit to you by best way, Tandberg Data cannot guarantee the arrival of the ADEX unit on the following business day. Tandberg Data can provide waybill numbers so you can work with the carrier on any delivery problems. All deliveries shall be F.O.B. Tandberg Data's shipping point.

Tandberg Data requires a credit card number prior to shipping an ADEX unit. **You must agree to ship the original unit back to Tandberg Data, using the ADEX packaging which includes the return ship label, within 10 calendar days from the time you receive your replacement.** If Tandberg Data does not receive your original unit within 10 days we will charge your credit card for the ADEX unit at the retail purchase price.

The ADEX Service Option is available in North America, Australia, and Europe and applies to Tandberg Data-branded products purchased from authorized Tandberg Data resellers only.

To take advantage of the ADVANCED EXCHANGE Service Option you need only ask for the ADEX option when speaking to the Service Support representative while processing your RMA.

For more information about Tandberg Data Service Support, see www.tandbergdata.com.